## **WILLINGHAM**

**CODING** 

- -655062
- -656062



ISO 9001:2015

#### fynd.

Read the instruction carefully. Remove all the wrapping material. Staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure that you have all the parts before you start assembling. Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches

### CAUTION KEEP ALL THE PARTS OUT REACH OF CHILDREN

ITEM	РНОТО	HARDWARE NAME	QTY
A	(B)	Bolt M6X15	8
B	•	Screw Ø4x30	28
C	<b>8</b>	Screw Ø4x70	2
D		Allen key	1

ITEM	РНОТО	PARTS NAME	QTY
1		HEADBOARD	1
2		FOOTBOARD	1
3		SIDE RAILS	2
4		MIDDLE RAIL	1
5		SLATS	14
6		CENTER LEG	2

CODING


-655062 -656062




ISO 9001:2015 Reg. No. 000435-1-MY-1-QMS

#### fynd.




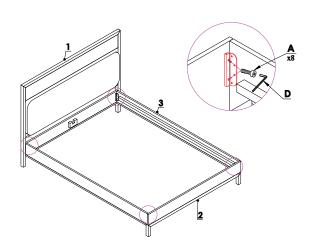




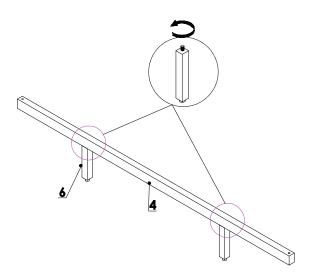



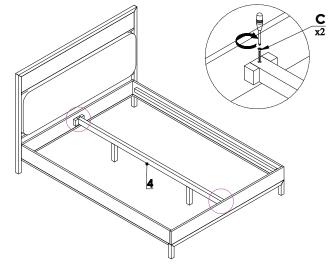



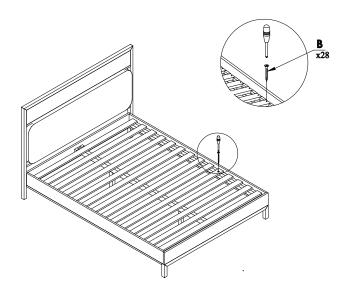

# **WILLINGHAM**

CODING

-655062 -656062



ISO 9001:2015 Reg. No. 000435-1-MY-1-QMS

#### fynd.



