


CODING
- 656067

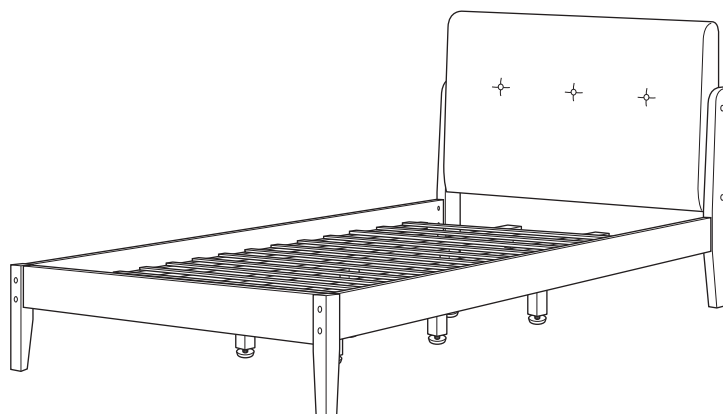

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nesthouz.com


Read the instruction carefully. Remove all the wrapping material, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure that you have all the parts before you start assembling. Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches.

CAUTION
KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

NO	PHOTO	HARDWARE LIST	QTY
A		JCBC Screw M6 x 100mm	4
B		JCBC Screw M6 x 80mm	4
C		JCBC Screw M6 x 60mm	6
D		JCBC Screw M6 x 50mm	4
E		CSK Screw M4 x 32mm	6
F		Barrel Nut M6 x 13mm	8
G		M4 Allen Key	1
H		Wood Button	12
I		Wood Dowel M10 x 30mm	4
J		Adjustable M6 x 23mm	6

ITEM	PHOTO	PART LIST	QTY
1		Headboard	1
2		Footboard	1
3		Side Panel	2
4		Bed Slat	1
5		Bed Center Rail	2
6		Bed Center Rail Support	6
7		Headboard Leg	2


CODING
- 656067

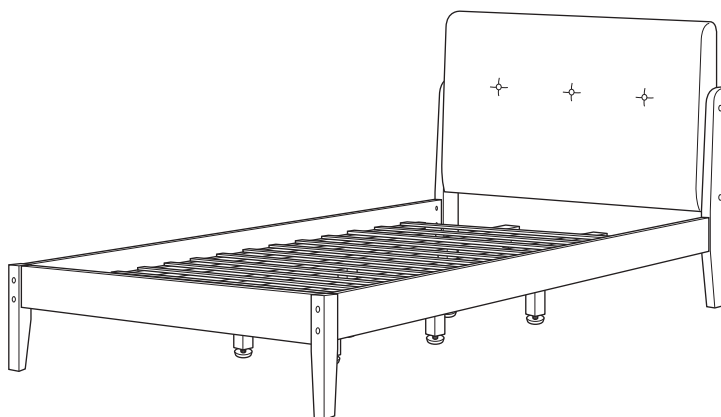


ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nesthouz.com


1

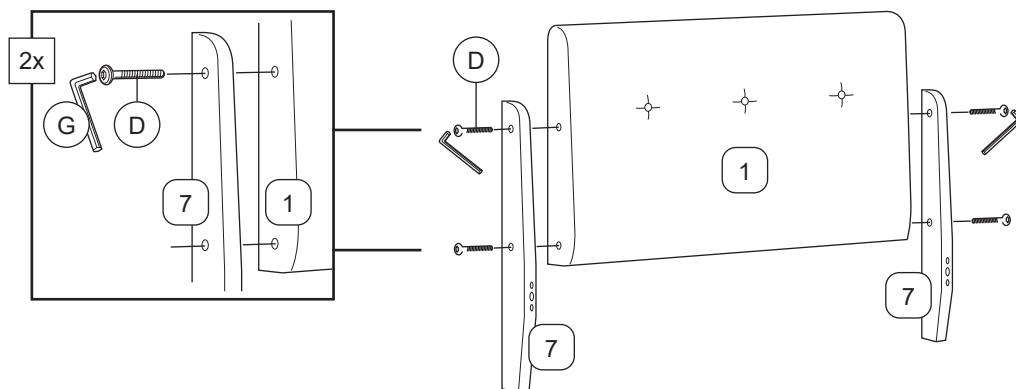

2

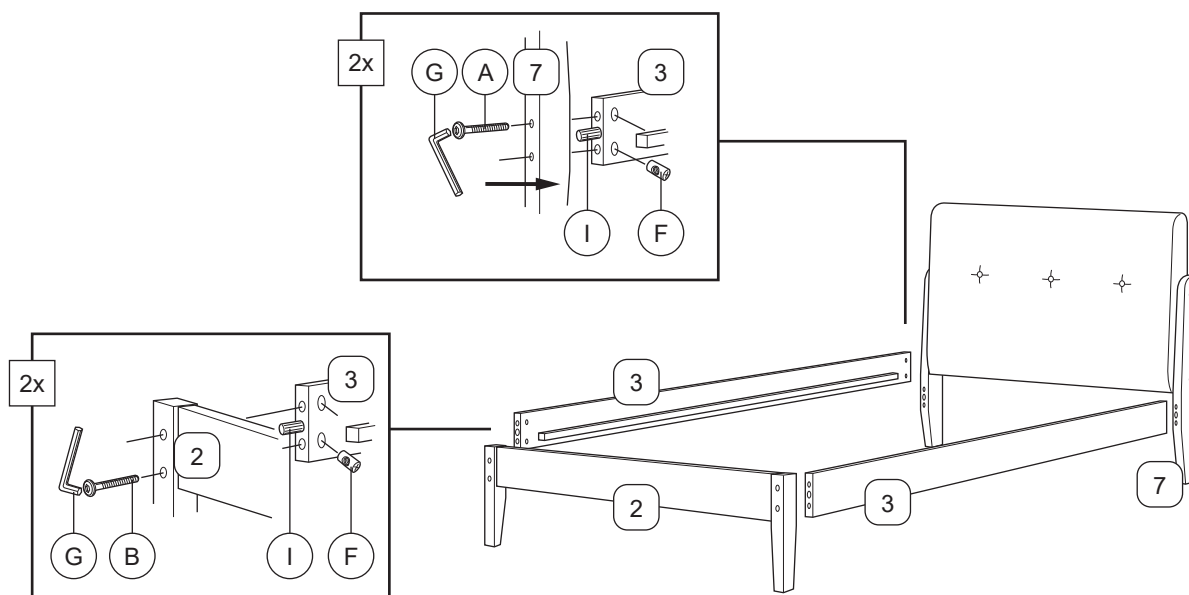


CODING
- 656067

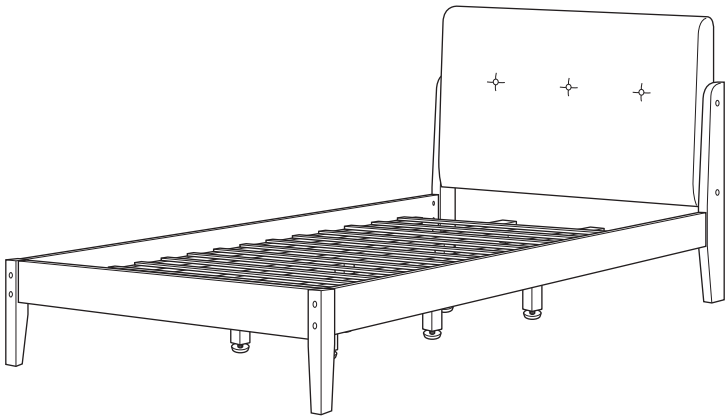

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nesthouz.com

3

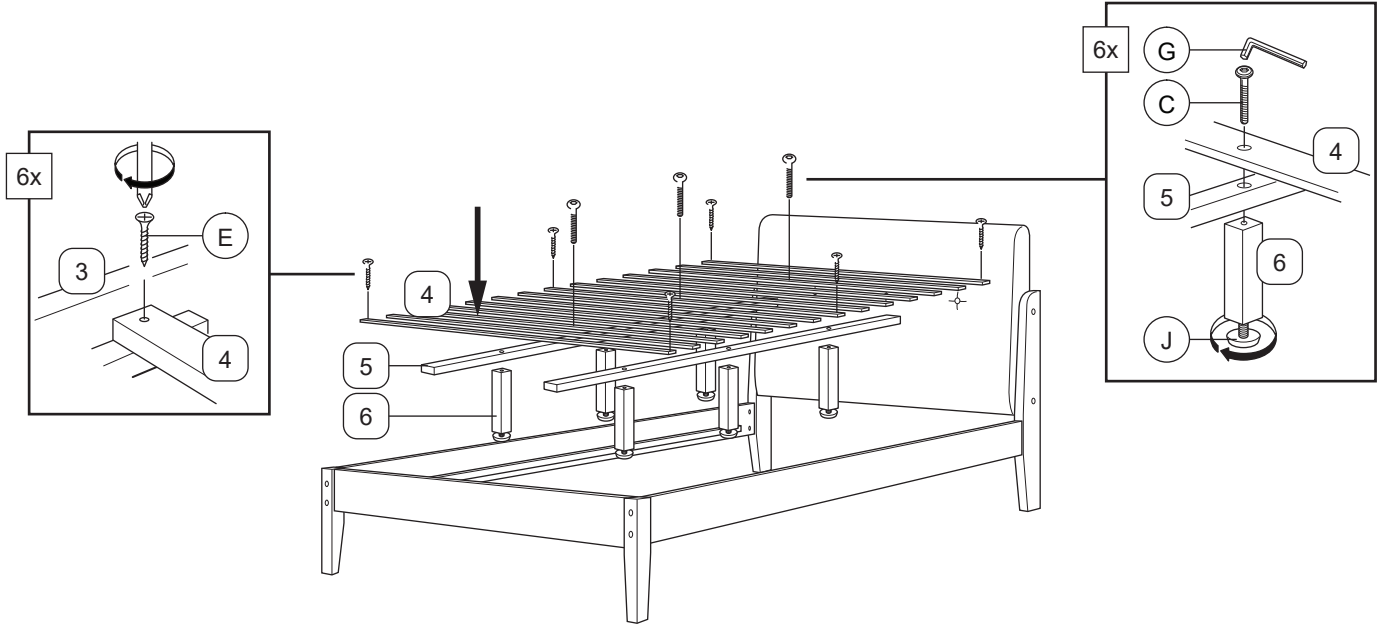

4

