

**CODING**  
- 655072



ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS

nesthouz.com

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

**CAUTION**  
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

ITEM	PHOTO	HAREWARE NAME	QTY
(A)		JCBC Screw M6 x 100mm	4
(B)		JCBC Screw M6 x 80mm	4
(C)		JCBC Screw M6 x 60mm	3
(D)		JCBC Screw M6 x 50mm	4
(E)		CSK Screw M4 x 32mm	6
(F)		Barrel Nut M6 x 13mm	8
(G)		M4 Allen Key	1
(H)		Wood Button	12
(I)		Wood Dowel M10 x 30mm	4
(J)		Adjustable M6 x 23mm	3


ITEM	PHOTO	PARTS NAME	QTY
(1)		Headboard	1
(2)		Footboard	1
(3)		Side Panel	2
(4)		Bed Slat	1
(5)		Bed Center Rail	1
(6)		Bed Center Rail Support	3
(7)		Headboard Leg	2

CODING  
- 655072




ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS

1

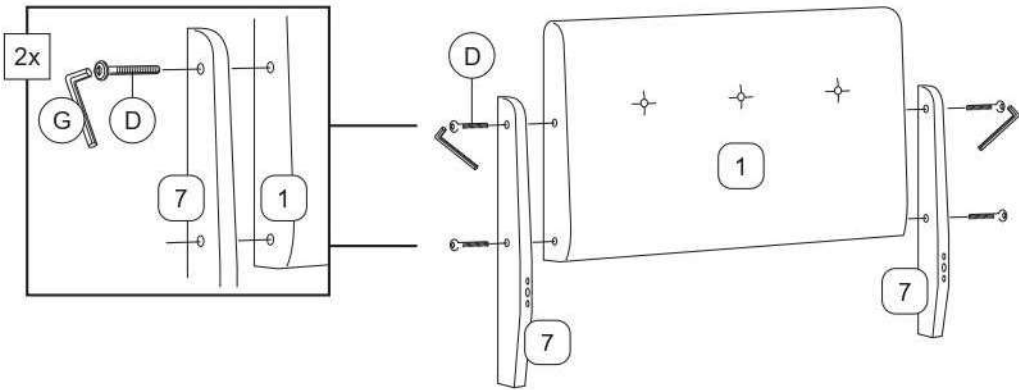

2

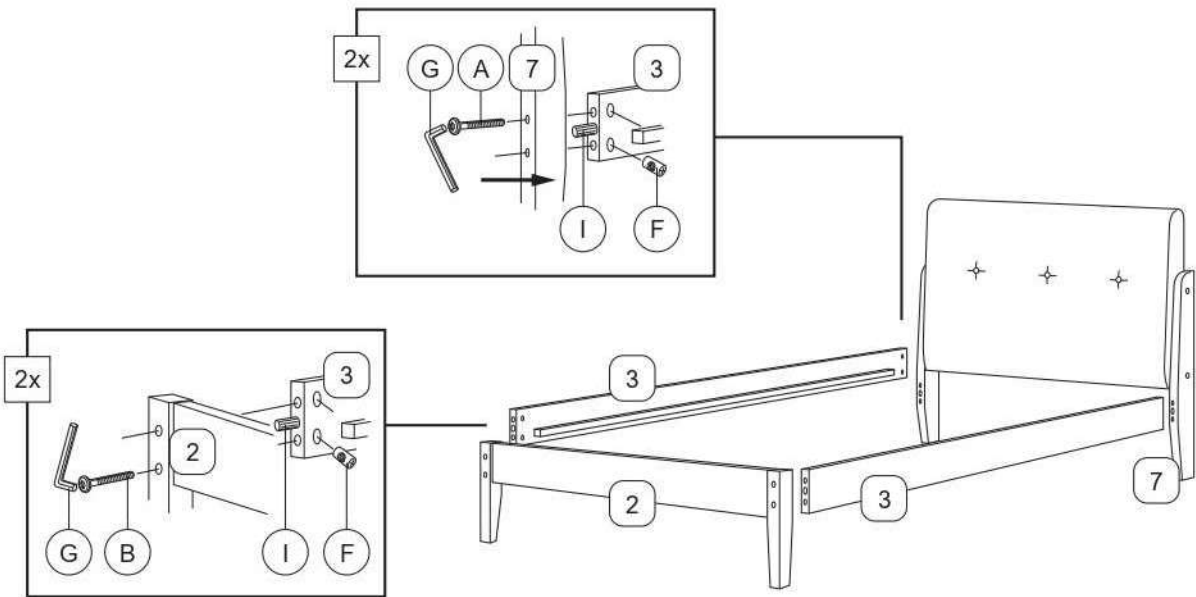


CODING  
- 655072



ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS

nesthouz.com

3

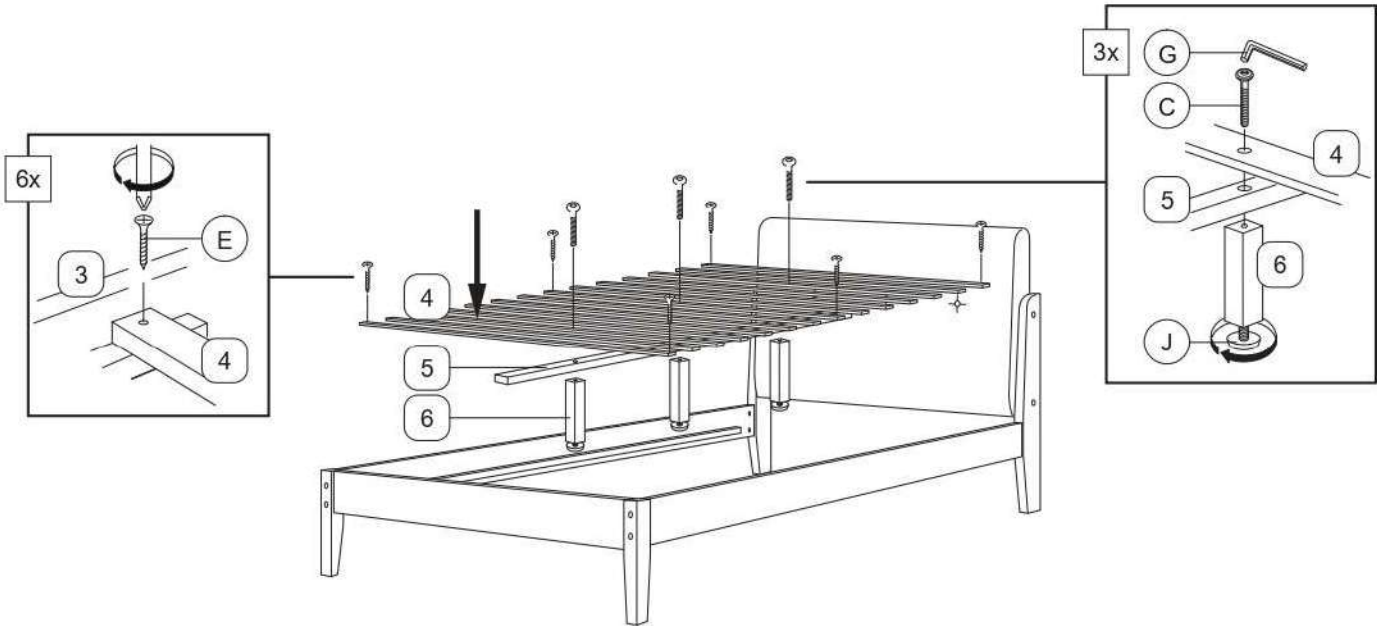

4

