


**CODING**  
- 656091

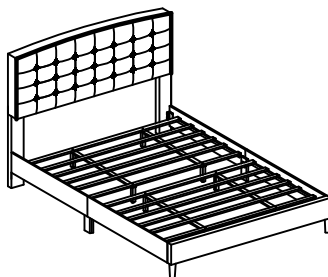

**ISO 9001:2015**  
Reg.No. 000435-1-MY-QMS

**nuhoom.com**

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.


### CAUTION

KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

ITEM	PHOTO	HARDWARE NAME	QTY
(A)		ALLEN KEY M4 x 65mm	1
(B)		ALLEN KEY M5 x 70mm	1
(C)		JCBB M8 x 20	8
(D)		JCBC M6 x 30	8
(E)		JCBC M6 x 50	6
(F)		JCBC M6 x 60	8
(G)		CSK SCREW 32MM	24
(H)		SPRING WASHER	6
(I)		FLAT WASHER	8
(J)		SMALL ADJUSTER	8

ITEM	PHOTO	PARTS NAME	QTY
(1)		HEADBOARD	1
(2)		FOOTBOARD	1
(3)		SIDE RAIL	4
(4)		HEADBOARD LEGS	2
(5)		LEGS	2
(6)		SIDE RAIL LEGS	2
(7)		CENTER RAIL	4
(8)		SLAT	2
(9)		SUPPORT LEGS	8


**CODING**  
- 656091

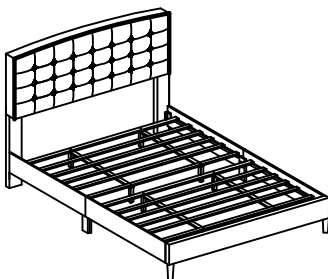

**ISO 9001:2015**  
Reg.No. 000435-1-MY-QMS

**nuhoom.com**


**1**

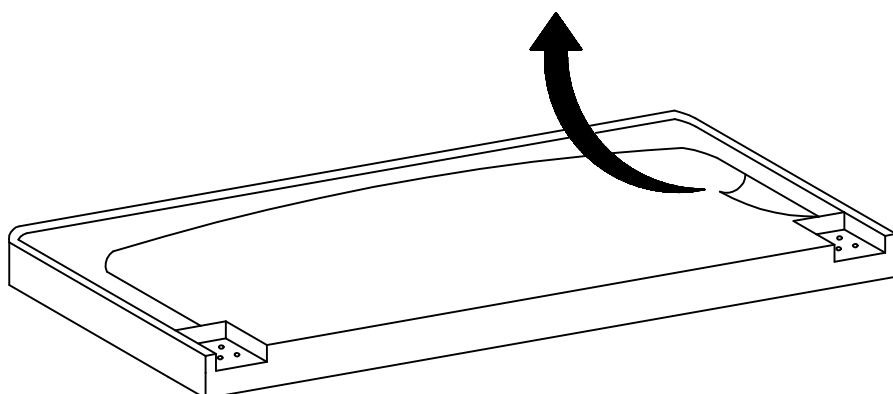


**Attention: Zip the black non-woven fabric after take out the parts !!**

**BACK VIEW**

**2**

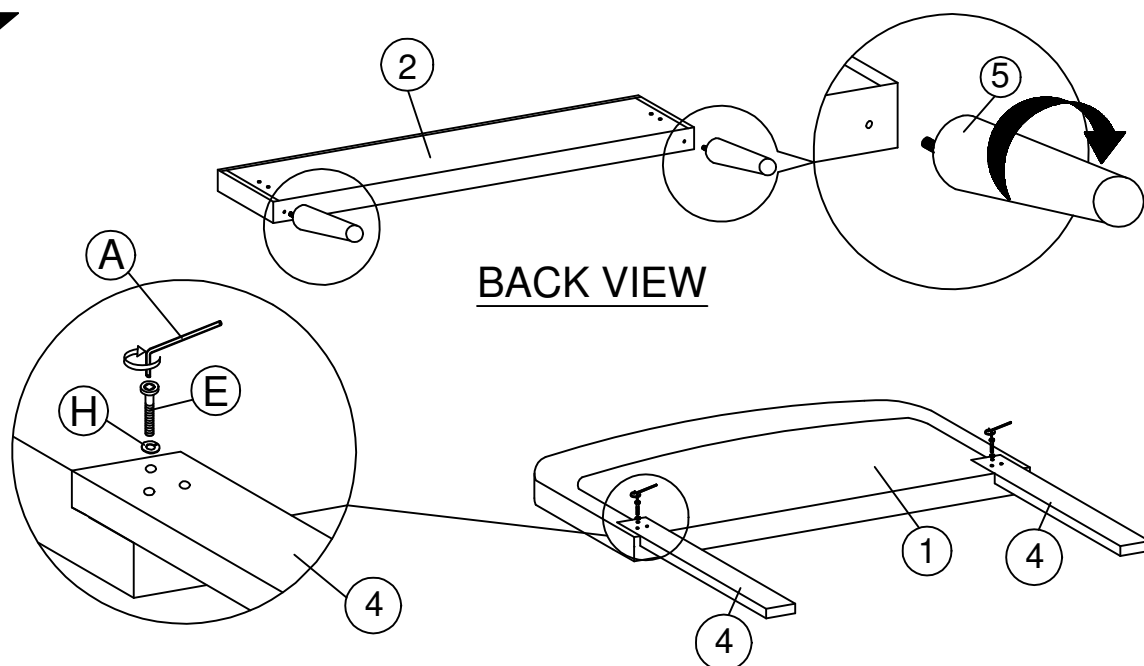


CODING  
- 656091

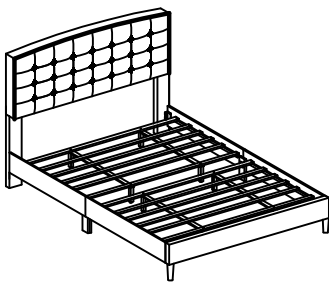


ISO 9001:2015  
Reg.No. 000435-1-MY-QMS

nuhoom.com


3

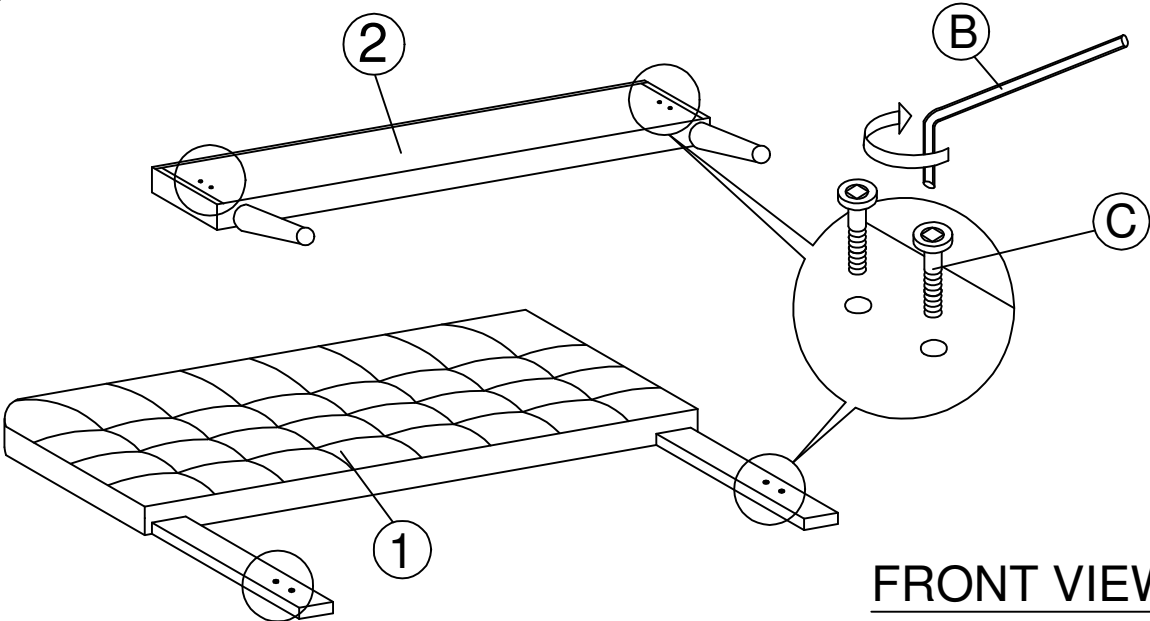

4

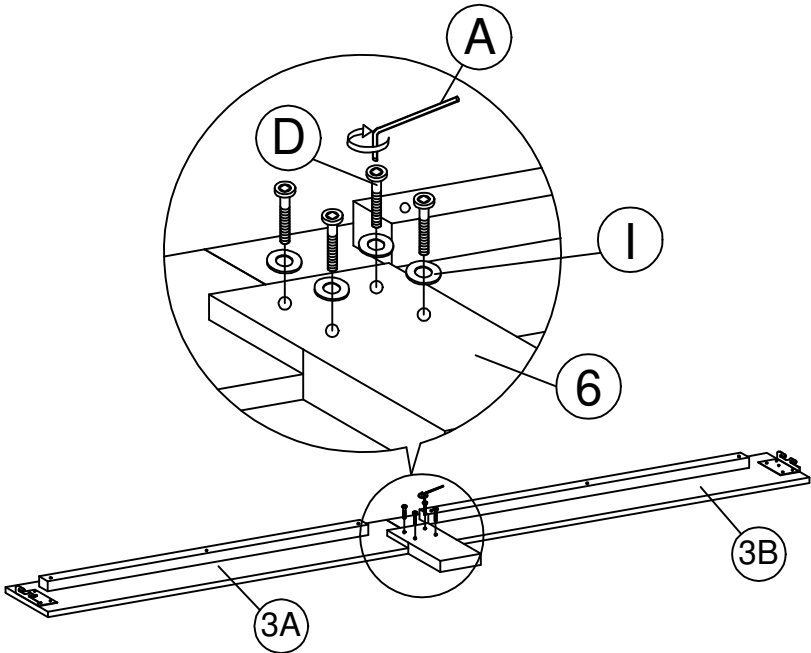


**CODING**  
- 656091

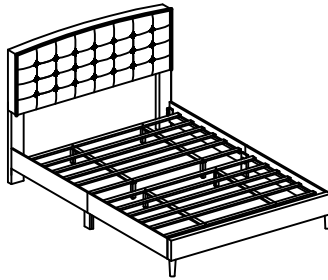


**ISO 9001:2015**  
Reg.No. 000435-1-MY-QMS

**nuhoom.com**

**5**

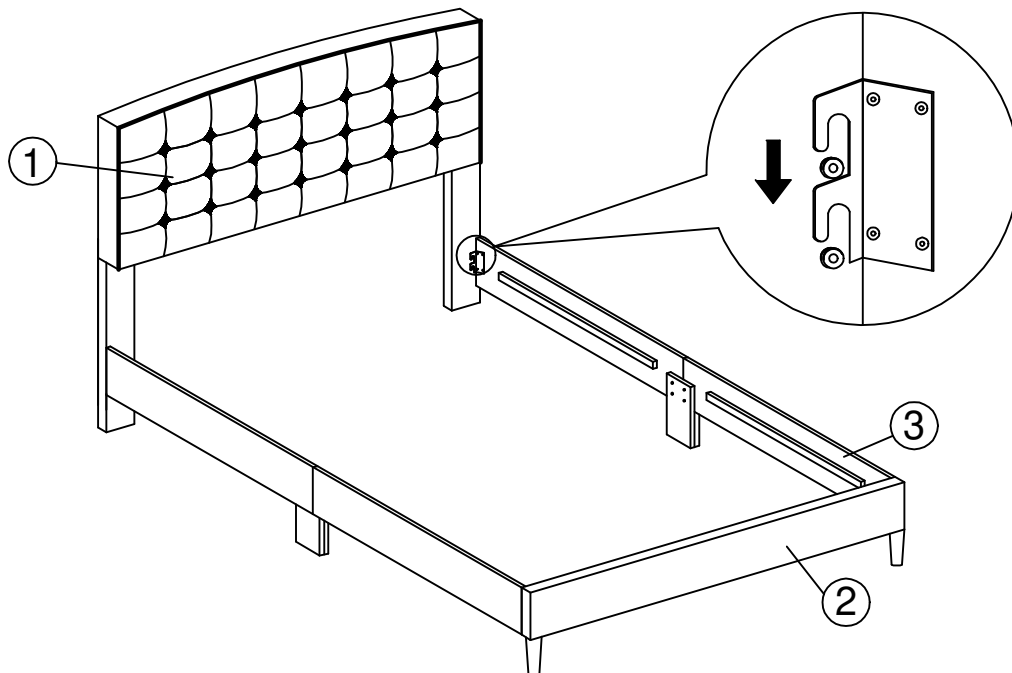


**6**

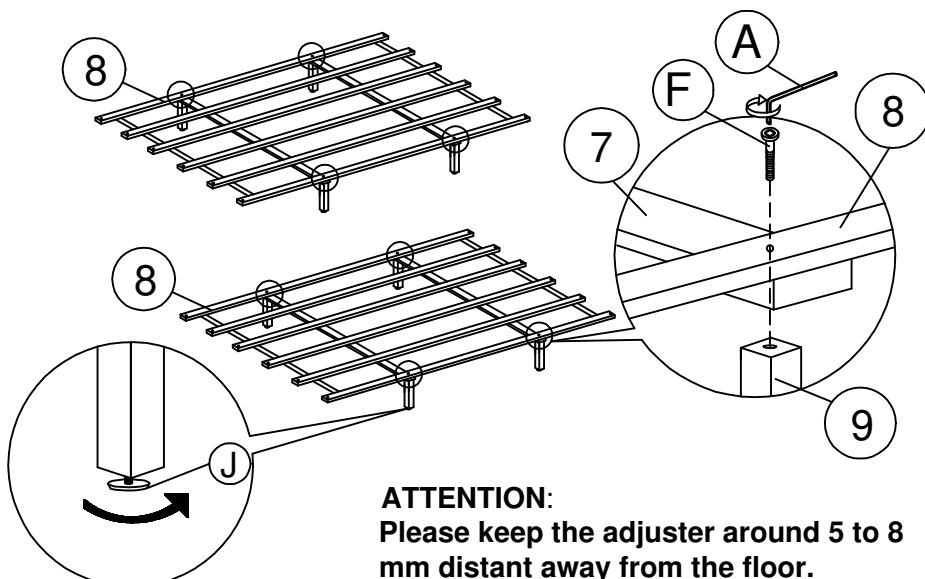

**ATTENTION:**  
Please keep the adjuster around 5 to 8 mm distant away from the floor.

**CODING**  
- 656091

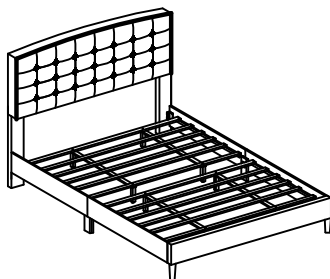

**ISO 9001:2015**  
Reg.No. 000435-1-MY-QMS

**nuhoom.com**

**7**

