


CODING
-121004

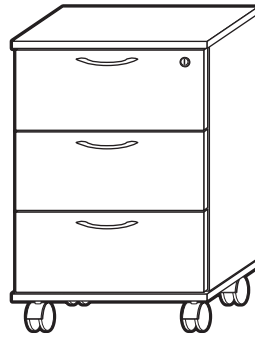

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.


CAUTION

KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

ITEM	HARDWARE LIST		QTY
①		M4 x 45mm Chipboard Screw	4
②		M4 x 38mm Chipboard Screw	24
③		M4 x 28mm Chipboard Screw	6
④		M3.5 x 16mm Chipboard Screw	50
⑤		Nail	45
⑥		Wood Dowel 6 x 25mm	8
⑦		Minifix Pin	4
⑧		Minifix Cam	4
⑨		Handle AC70 Sliver	3
⑩		Metal Drawer Slide 14"	3
⑪		Metal Drawer Slide 14"	3
⑫		Castle Wheel	4
⑬		Drawer Lock	1

ITEM	PART LIST		QTY
Ⓐ	Top Panel		1
Ⓑ	Bottom Panel		1
Ⓒ	Left Panel		1
Ⓓ	Right Panel		1
Ⓔ	Back Panel		1
Ⓕ	Drawer Front Panel		3
Ⓖ	Drawer Side Panel		6
Ⓗ	Drawer Back Panel		3
Ⓘ	Drawer Bottom Panel		3


CODING
-121004

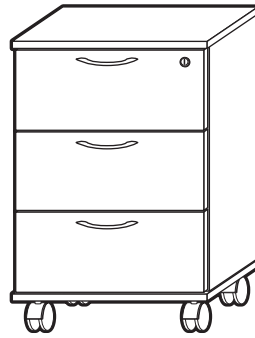


ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com


Step 1

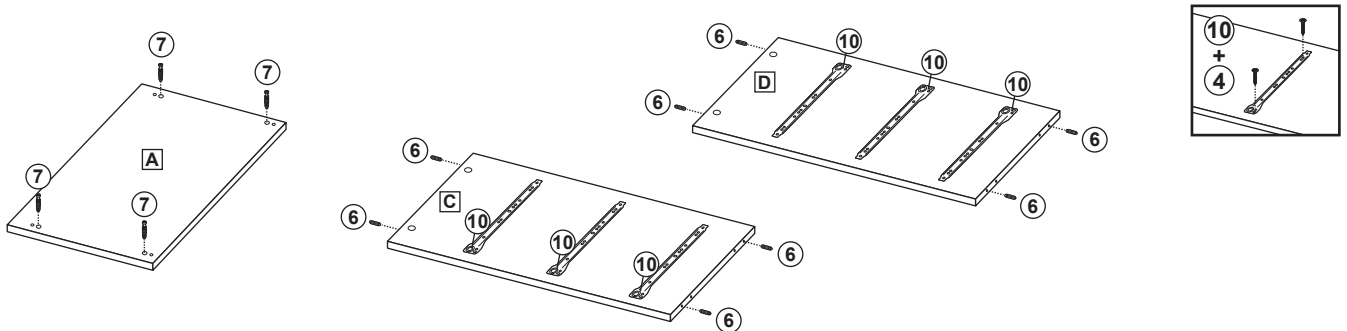


Step 2

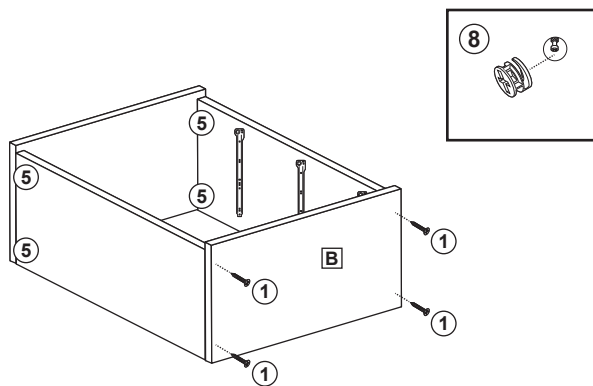

Step 3

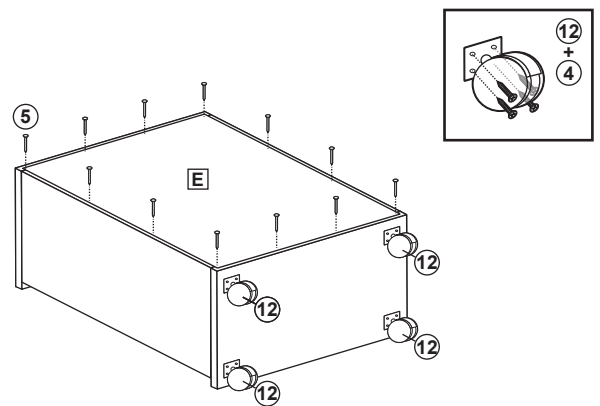

Step 4

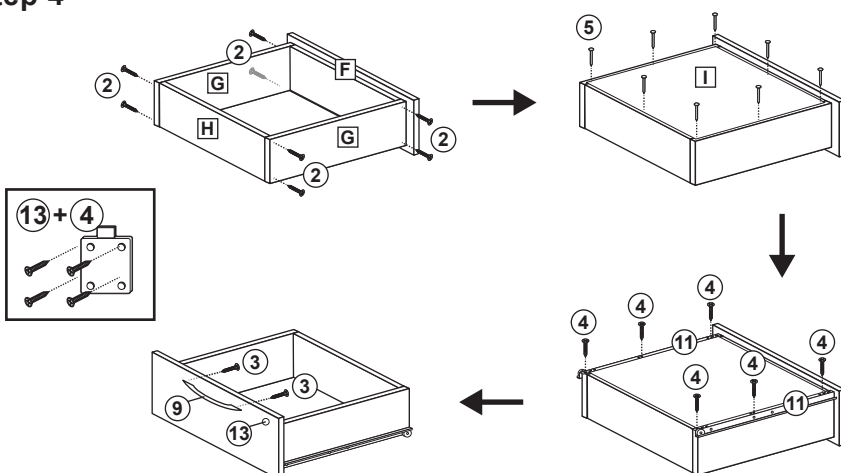

Step 5

