

CODING

- 122001
- 122002
- 122005
- 122006



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

Read the instruction carefully. Remove all the wrapping material, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure that you have all the parts before you start assembling. Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches.

CAUTION

KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

ITEM	PHOTO	HARDWARE NAME	QTY
(A)		Flat washer	2

ITEM	PHOTO	PARTS NAME	QTY
(1)		cabinet body	1
(2)		Shelf	1
(3)		leg	2
(4)		connected block	2


CODING

- 122001
- 122002
- 122005
- 122006




ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

1

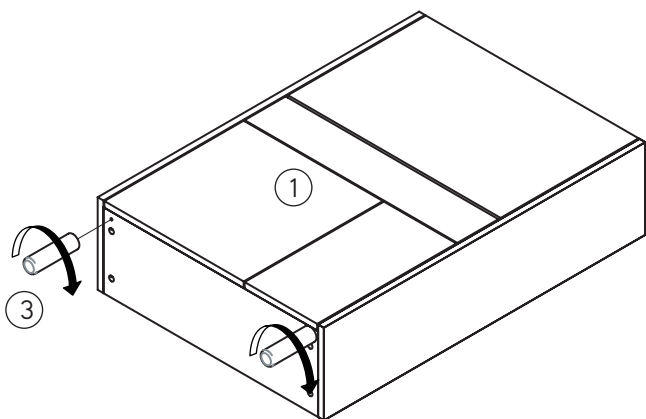


2

Keep 2 persons hold the cabinet vertically before fix the cabinet on the wall. DO NOT drag the cabinet on floor.

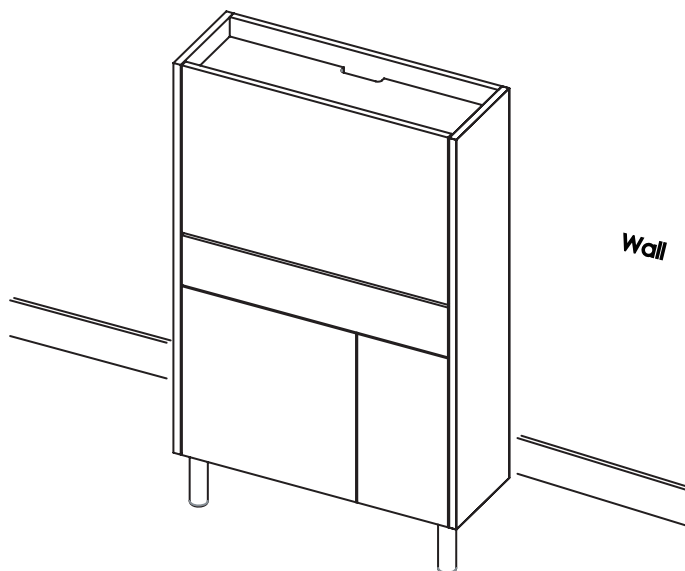

3


Keep 2 persons hold the cabinet vertically before fix the cabinet on the wall. DO NOT drag the cabinet on floor.

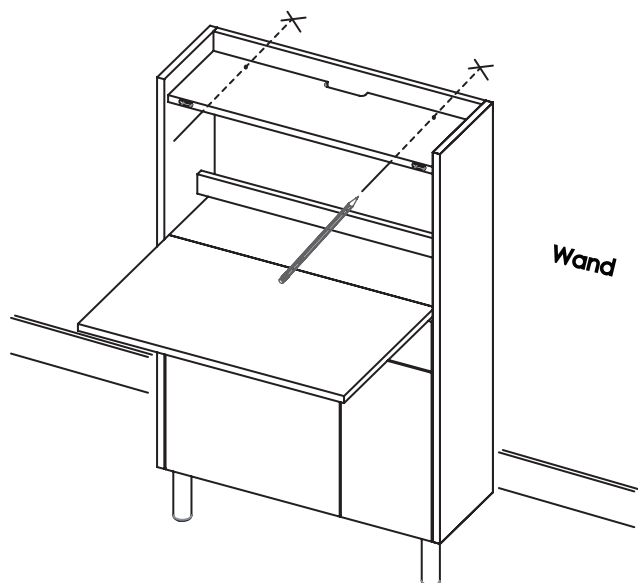

4


Wall fixing - if in doubt seek professional advice

Please ensure to use the correct size rawl plug when installing the plastic loop bracket to a wall. If your wall cavity construction or wood you may need to seek appropriate wall fixings.




Wood

If fixing to wood make sure that it isn't chipboard as screws can easily pull away from the core structure



Brick or Masonry

Use an appropriate wall plug provided you are sure your wall is sound



Cavity wall

Special toggle wall plugs are needed. Seek expert advice

CODING


- 122001
- 122002
- 122005
- 122006



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS



5

***! Fitting not enclosed!

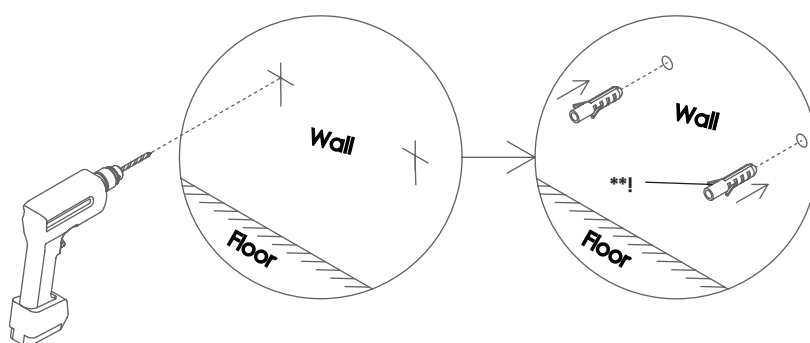

6

Keep 2 persons hold the cabinet vertically before fix the cabinet on the wall. DO NOT drag the cabinet on floor.
***! Fitting not enclosed!

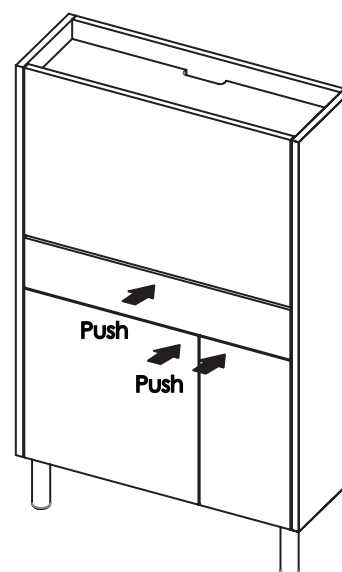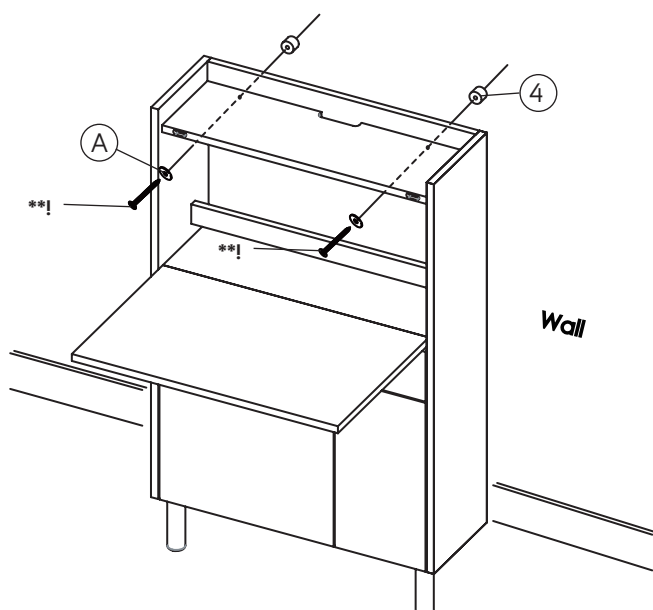


CODING

- 122001
- 122002
- 122005
- 122006



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

7

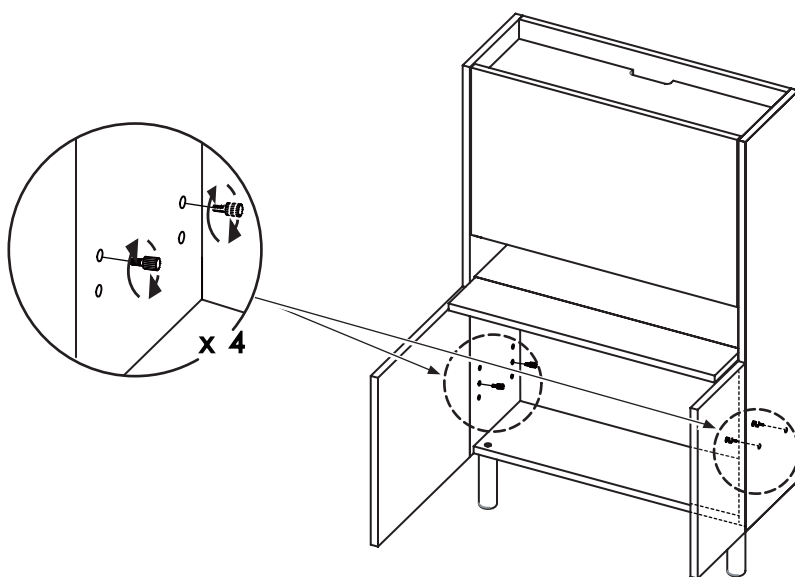

8

