

CODING
-124018



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH

ITEM.	PHOTO	HARDWARE NAME	Q'TY
Ⓐ		BOLTS M8 x 20	30
Ⓑ		LOCK WASHERS M8 x 13	30
Ⓒ		WASHERS M8 x 22	26
Ⓓ		ALLEN KEY 4	1
Ⓔ		WASHERS M8 x 19	4


ITEM.	PHOTO	PARTS NAME	SPARE Q'TY
①		MAIN BODY	1
②		LEG	2
③		SUPPORT BAR 1	2
④		SUPPORT BAR 2	1

CODING
-124018



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

1

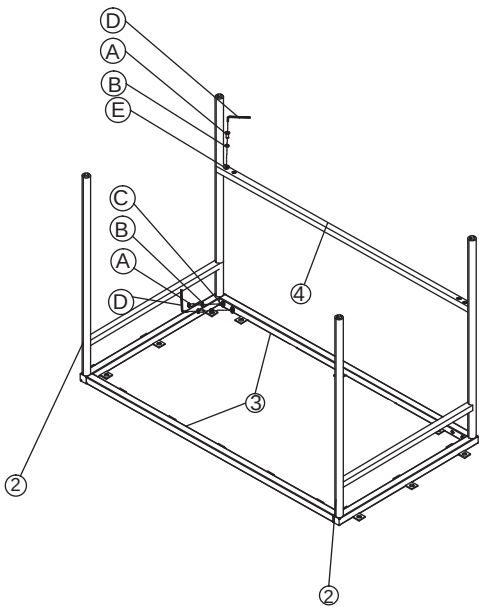

2

3

