

CODING
-124091



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

ITEM	HARDWARE LIST		QTY
①		M5 x 40mm JCBCW Screw	8
②		M4 x 38mm Chipboard Screw	24
③		M4 x 28mm Chipboard Screw	6
④		M3.5 x 16mm Chipboard Screw	12
⑤		Minifix Pin	5
⑥		Minifix Cam	5
⑦		Square Leg	4
⑧		Drawer Lock	1
⑨		PVC Drawer Slide	3set
⑩		Handle	3
⑪		L Bracket	1
⑫		Allen Key	1
⑬		Wire Hole Cover	2


ITEM	PART LIST		QTY
Ⓐ	Centre Panel		1
Ⓑ	Bottom Panel		1
Ⓒ	Back Panel		1
Ⓓ	Left Side Panel		1
Ⓔ	Right Side Panel		1
Ⓕ	Desktop Panel		1
Ⓖ	Drawer Front Panel		3
Ⓗ	Drawer Side Panel		6
Ⓘ	Drawer Back Panel		3
Ⓙ	Drawer Bottom Panel		3

CODING
-124091




ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS


Step 1

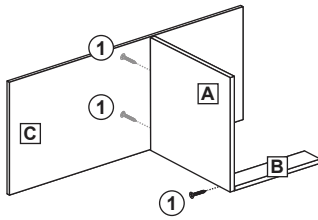


Step 2

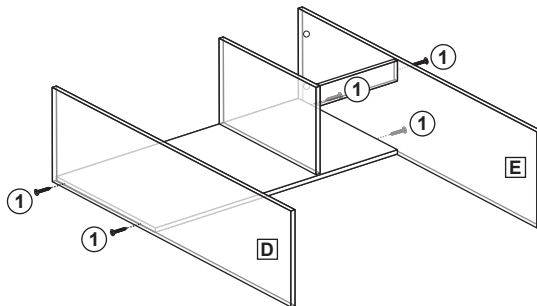


Step 3

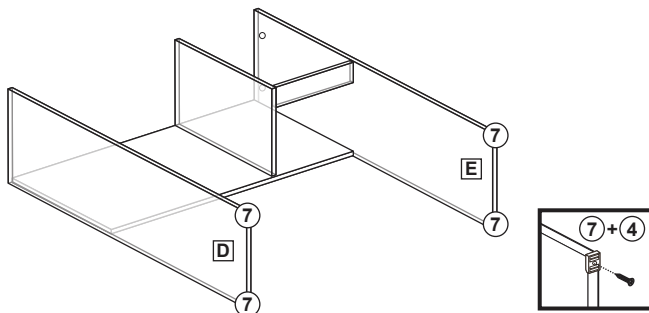


Step 4

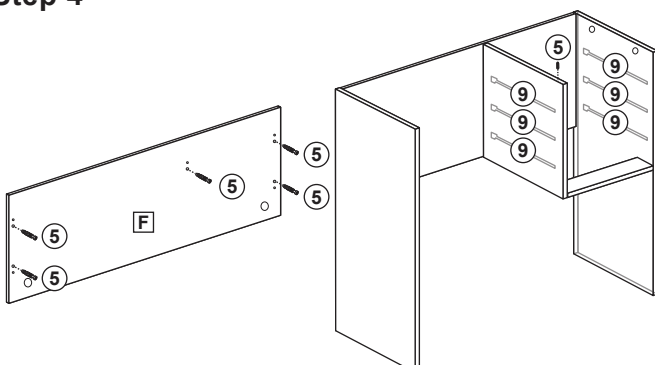

Step 5

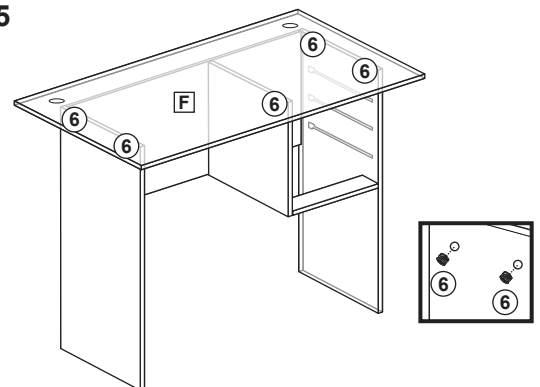

Step 6

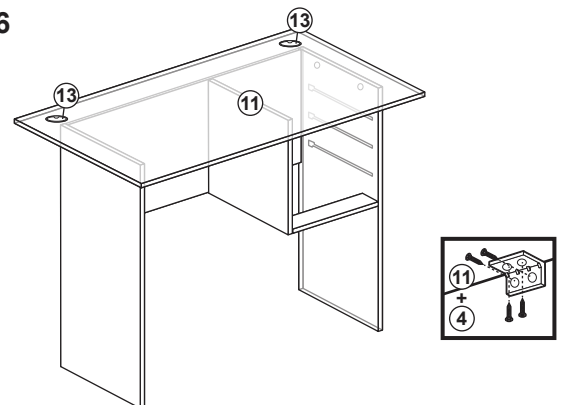

Step 7

