



CODING
- 124097

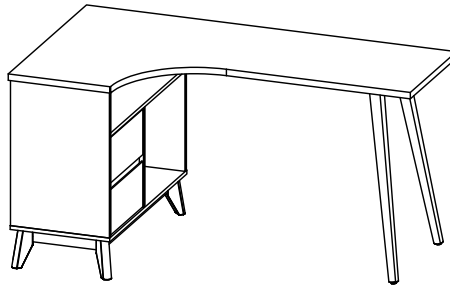

ISO 9001:2015
Reg. No. 00005-1-2017-1-Q008

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.


CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

HARDWARE			
A	MINI FIX	A1  A2  A3 	18 SETS
B	M8 X 30MM WOOD DOWEL		24 PCS
C	M6 X 50MM CSK CAP WOOD SCREW		6 PCS
D	ALLEN KEY M4		1 PC
E	M3.5 X 16MM C.B SCREW		34 PCS
F	M4 X 38MM C.B SCREW		8 PCS
G	14" DRAWER SLIDE	 G1 (L/R)  G2 (L/R)	2 SETS
H	SUPPORT LEG IRON LF-3039		2 PCS
I	JCBC SCREW M6 X 70MM		8 PCS
J	SPRING WASHER M6		8 PCS
K	FLAT WASHER M6		8 PCS




SELF-PREPARED TOOLS: Tools below are NOT included in package.	
 SCREWDRIVER	 HAMMER

PART LIST		QTY
1	TOP	1 PC
2	BOTTOM PANEL	1 PC
3	SIDE PANEL (L)	1 PC
4	SIDE PANEL (R)	1 PC
5	CENTER PANEL	1 PC
6	BONE PANEL	1 PC
7	MIDDLE PANEL	1 PC
8	BACK PANEL	1 PC
9	DRAWER FRONT	2 PCS
10	DRAWER BACK	2 PCS
11	DRAWER SIDE (L)	2 PCS
12	DRAWER SIDE (R)	2 PCS
13	DRAWER BOTTOM	2 PCS
14	CABINET LEG	2 PCS
15	CABINET LEG	4 PCS


CODING
- 124097

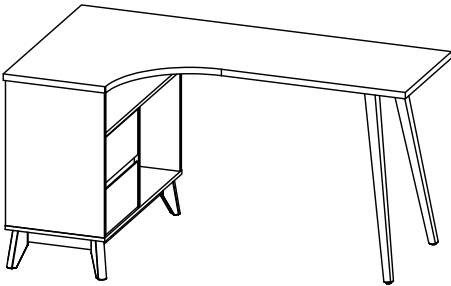

ISO 9001:2015
Reg. No. 000-GS-1-2017-1-Q008

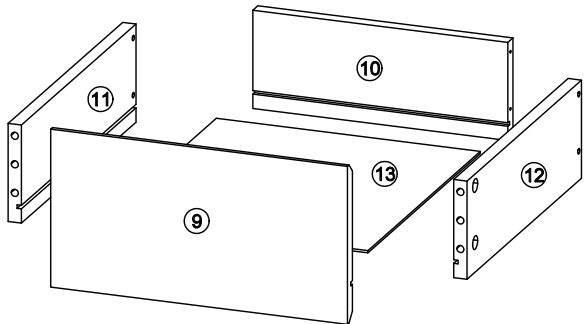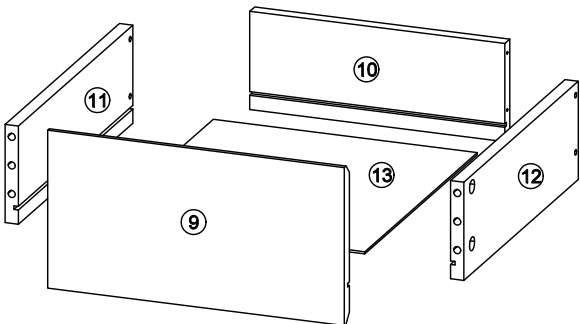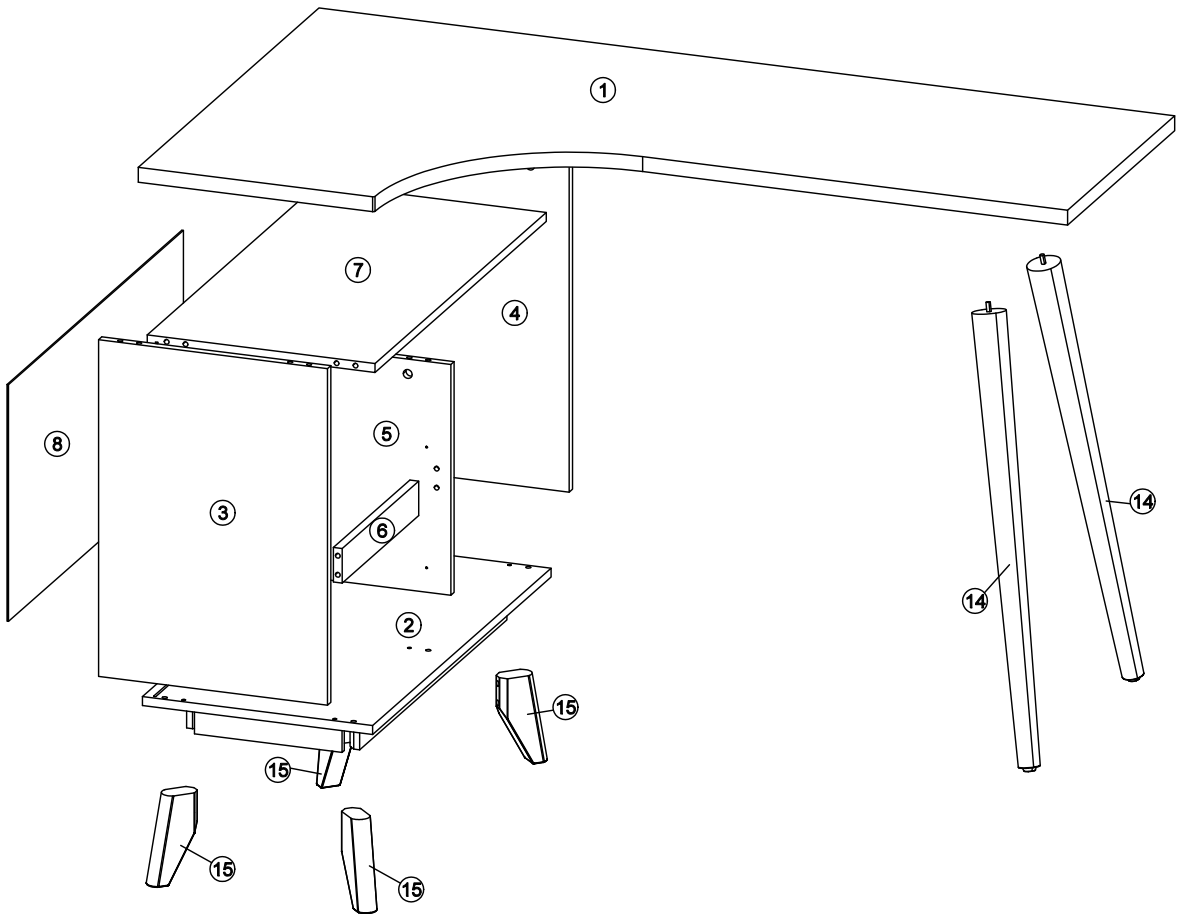


CODING
- 124097

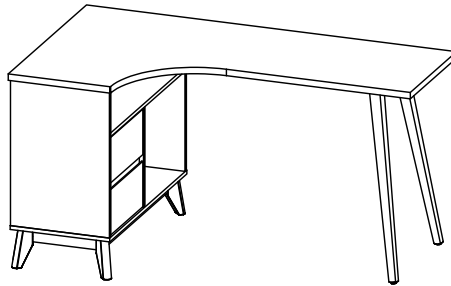

ISO 9001:2015
Reg. No. 000-GS-1-JET-1-Q008


STEP 1

- Insert hardware **A2** onto panel **(1)**.
(Repeat 8 times.)
- Insert hardware **B** into panel **(3)** and **(4)**.
(Repeat 8 times.)

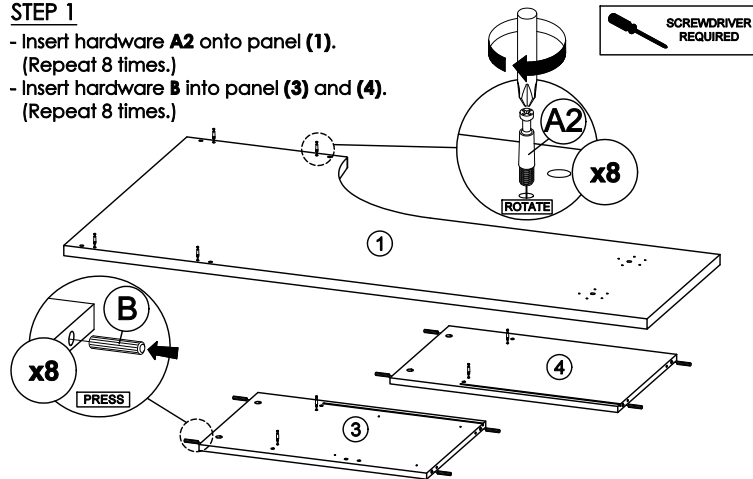


STEP 2

- Insert hardware **A2** onto panel **(7)**.
(Repeat 2 times.)
- Insert hardware **B** into panel **(5)**, **(6)** and **(7)**.
(Repeat 12 times.)

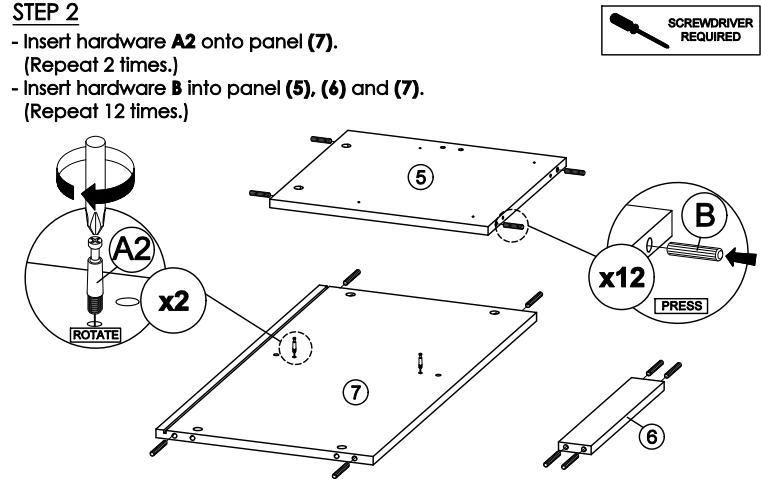


STEP 3

- Fix hardware **G1 (L/R)** onto panel **(3)** and **(5)** with hardware **E**.
(Repeat 3 times for each hardware.)

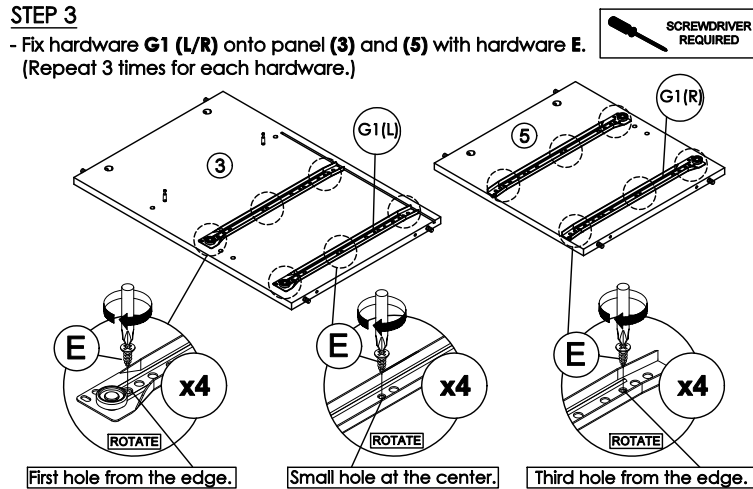


STEP 4

- Attach panel **(6)** to panel **(5)**.
(Repeat 1 times.)

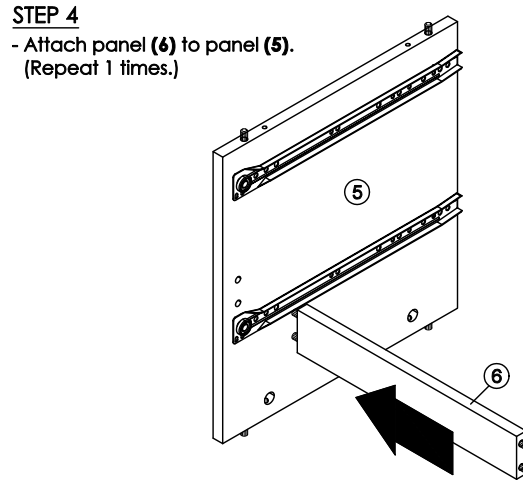


STEP 5

- Insert hardware **A1** into panel **(5)**.
(Repeat 2 times.)
- Attach panel **(5)** to panel **(7)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 2 times.)

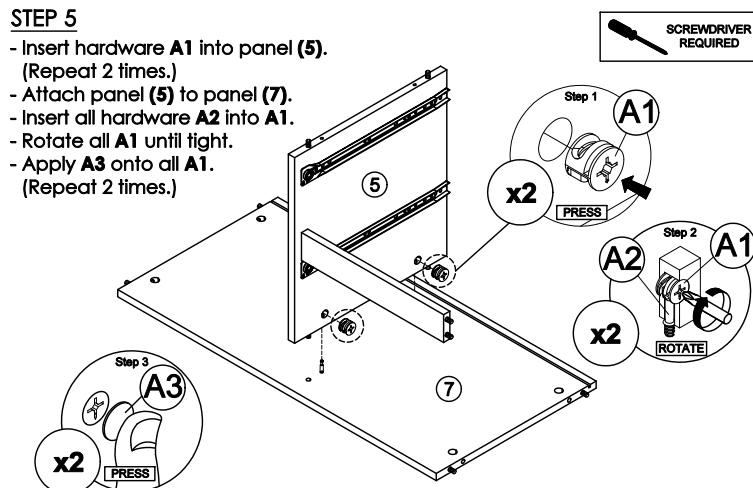


STEP 6

- Insert hardware **A1** into panel **(7)**.
(Repeat 4 times.)
- Attach panel **(3)** and **(4)** to panel **(7)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 4 times.)

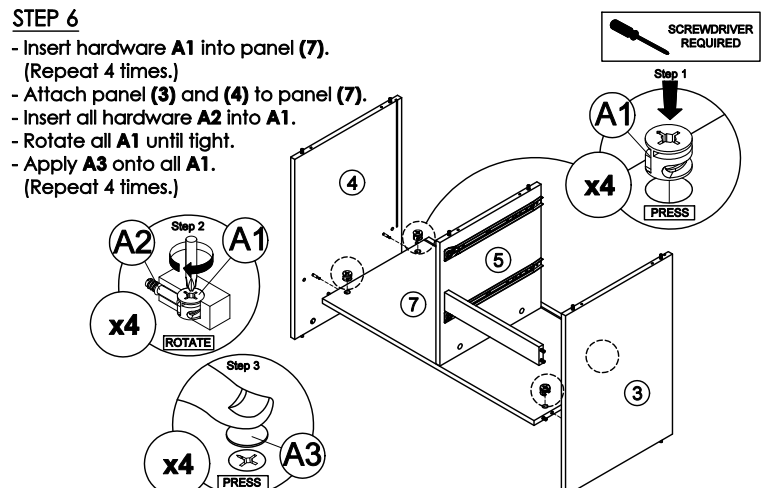


CODING
- 124097

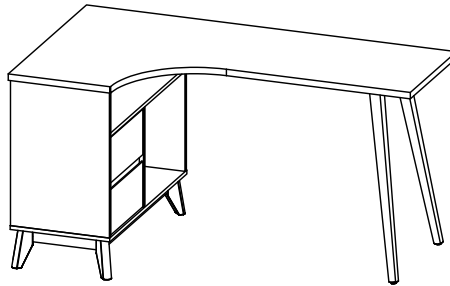

ISO 9001:2015
Reg. No. 000-GS-1-INT-1-QM8


STEP 7

- Insert hardware **A1** into panel **(3)** and **(4)**.
(Repeat 4 times.)
- Attach panel **(3)** and **(4)** to panel **(1)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 4 times.)

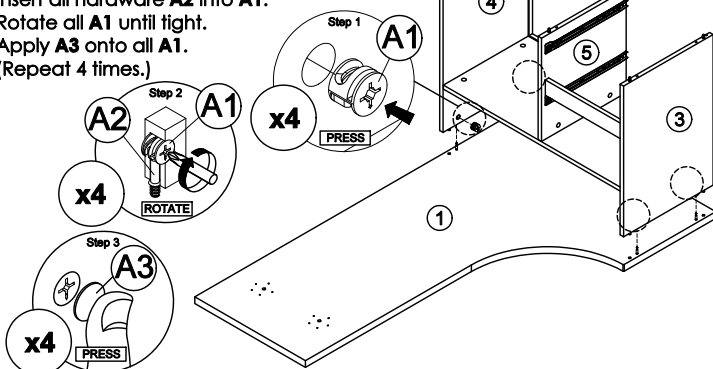


STEP 8

- Insert the panel **(8)** along the slot.
(Repeat 1 times.)

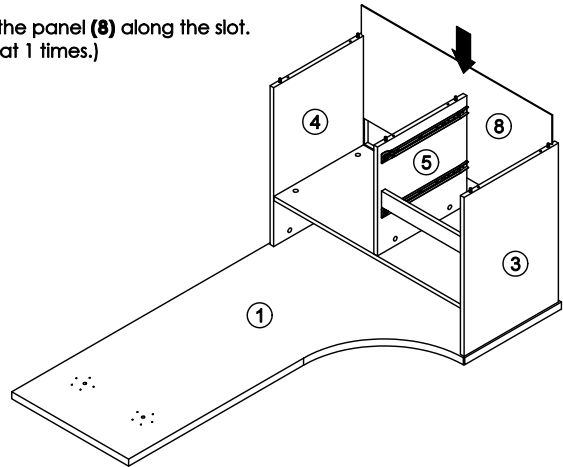


STEP 9

- Connect panel **(2)** to panel **(3)**, **(4)** and **(5)** by using hardware **C** and **D**.
(Repeat 6 times.)

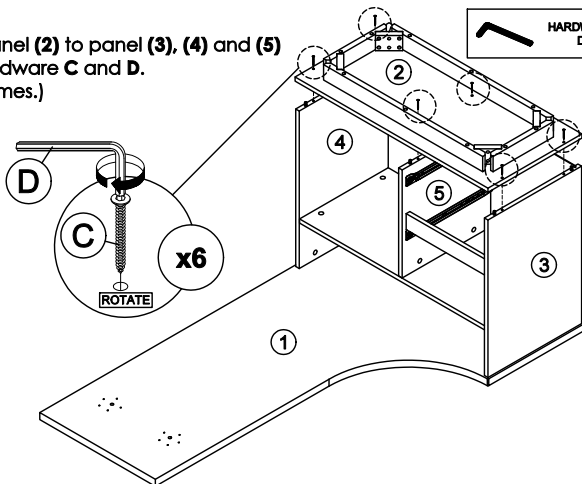


STEP 10

- Assemble part **15** into panel **(2)** by using hardware **D**, **I**, **J** and **K**.
(Repeat 2 times for each Leg.)

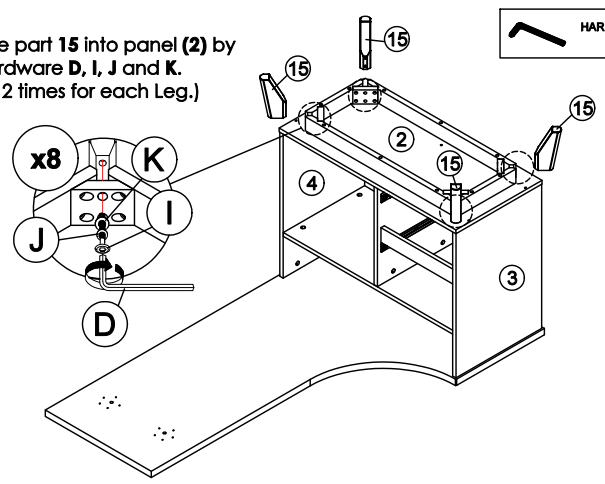


STEP 11

- Fix hardware **H** onto panel **(1)** by using hardware **E**.
(Repeat 5 times for each hardware.)

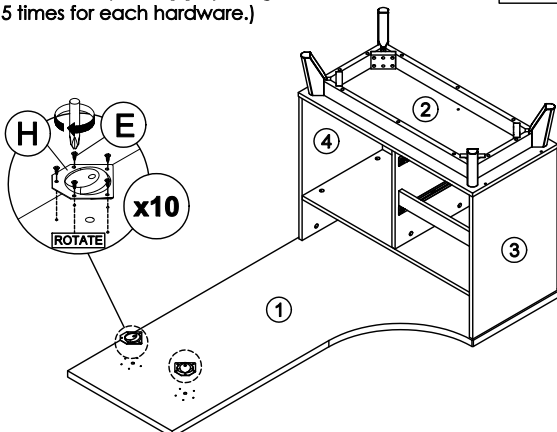


STEP 12

- Assemble part **(14)** into hardware **H**.
(Repeat 2 times.)

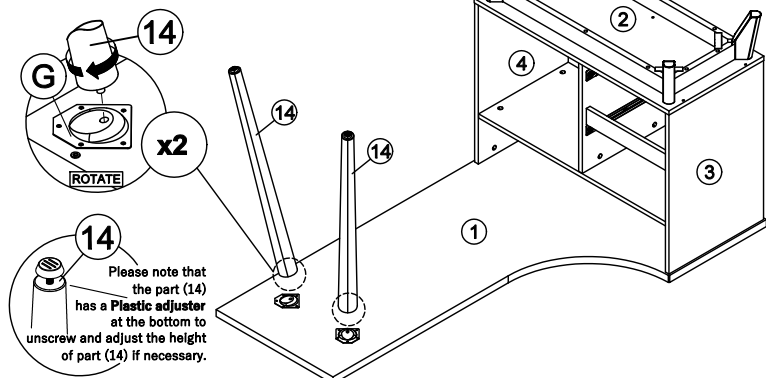


CODING
- 124097

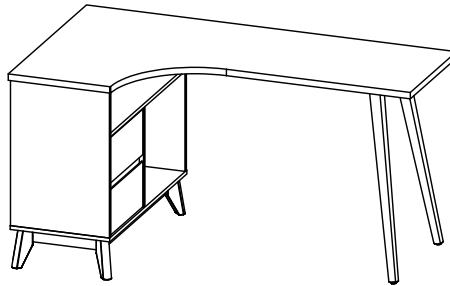

ISO 9001:2015
Reg. No. 000-GS-1-2017-1-Q008


STEP 13

- Insert hardware **A2** onto panel **(9)**.
(Repeat 8 times.)
- Insert hardware **B** into panel **(11)** and **(12)**.
(Repeat 4 times.)

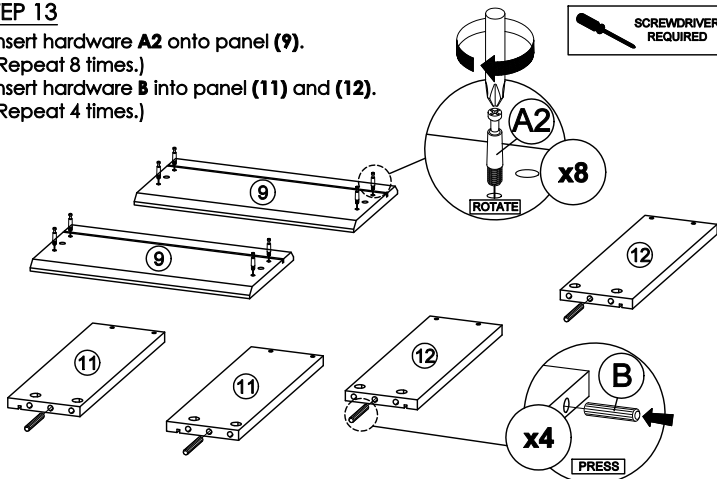


STEP 14

- Assemble panel **(11)** and **(12)** to panel **(10)** by using hardware **F**.
(Repeat 8 times.)

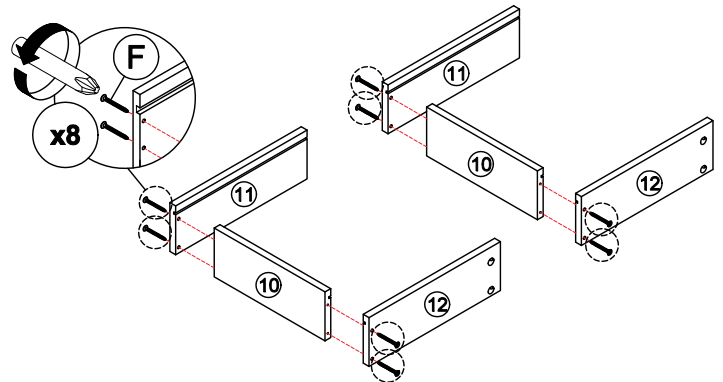


STEP 15

- Insert the panel **(13)** along the slot.
(Repeat 2 times.)

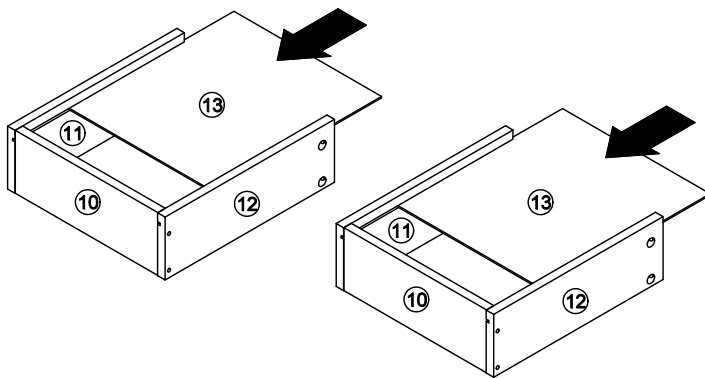


STEP 16

- Insert hardware **A1** into panel **(11)** and **(12)**.
(Repeat 8 times.)
- Attach panel **(9)** to panel **(11)** and **(12)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 8 times.)

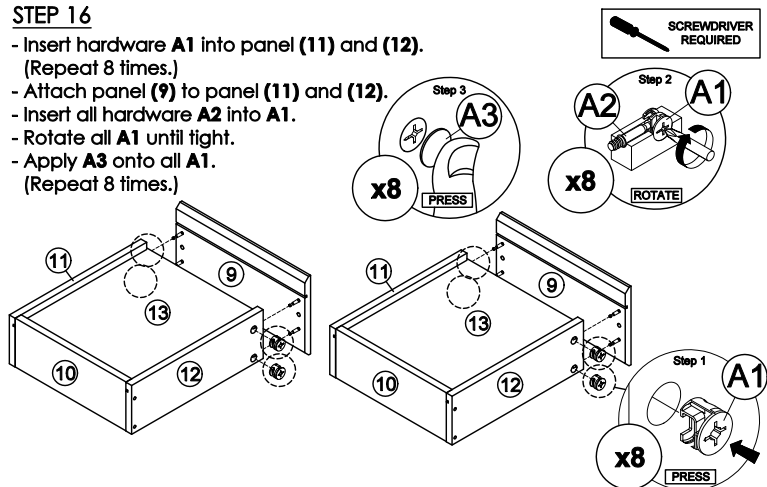

STEP 17

- Assemble hardware **G2 (L/R)** to panel **(11)** and **(12)** by using hardware **E**.
(Repeat 3 times for each hardware.)

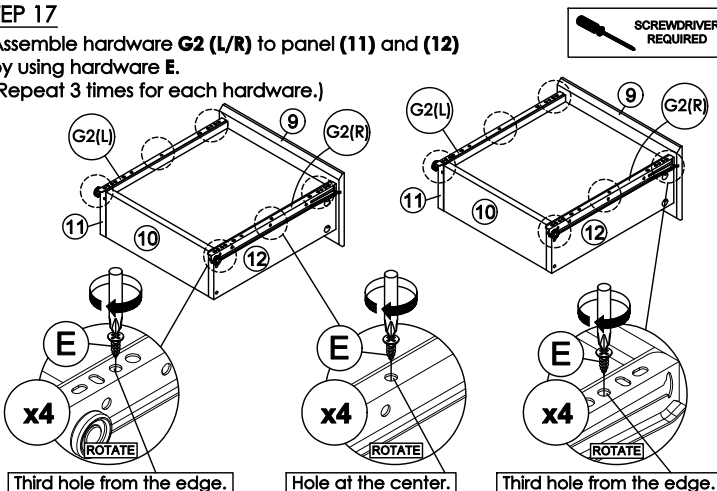

STEP 18

- Put all the drawer in place along the drawer slides.

