


CODING
-125010


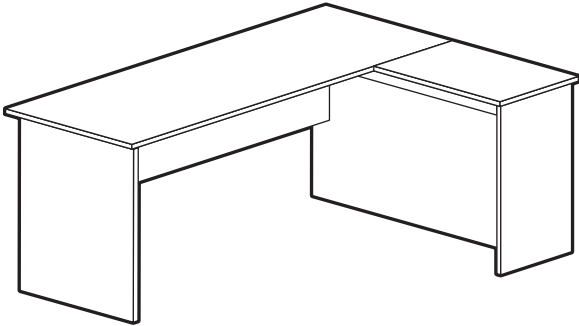


ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS


Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

ITEM	HARDWARE LIST		QTY
①		M4 x 45mm Chipboard Screw	9
②		M3.5 x 16mm Chipboard Screw	22
③		Wood Dowel 6 x 25mm	12
④		Minifix Pin	4
⑤		Minifix Cam	4
⑥		Square Leg	5
⑦		Square Leg (Center)	1
⑧		L Bracket	3
⑨		2 Hole Plate	2


ITEM	PART LIST		QTY
Ⓐ	Left/s Desktop Panel 		1
Ⓑ	Right/s Desktop Panel 		1
Ⓒ	Left Side Panel 		1
Ⓓ	Right Side Panel 		1
Ⓔ	Left/s Back Panel 		1
Ⓕ	Right/s Back Panel 		1
Ⓖ	Right/s Brace Panel 		1

CODING
-125010

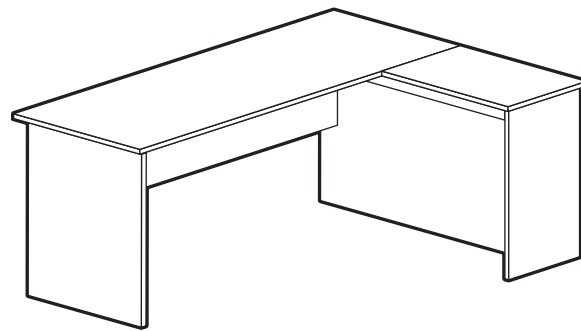


ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS


Step 1

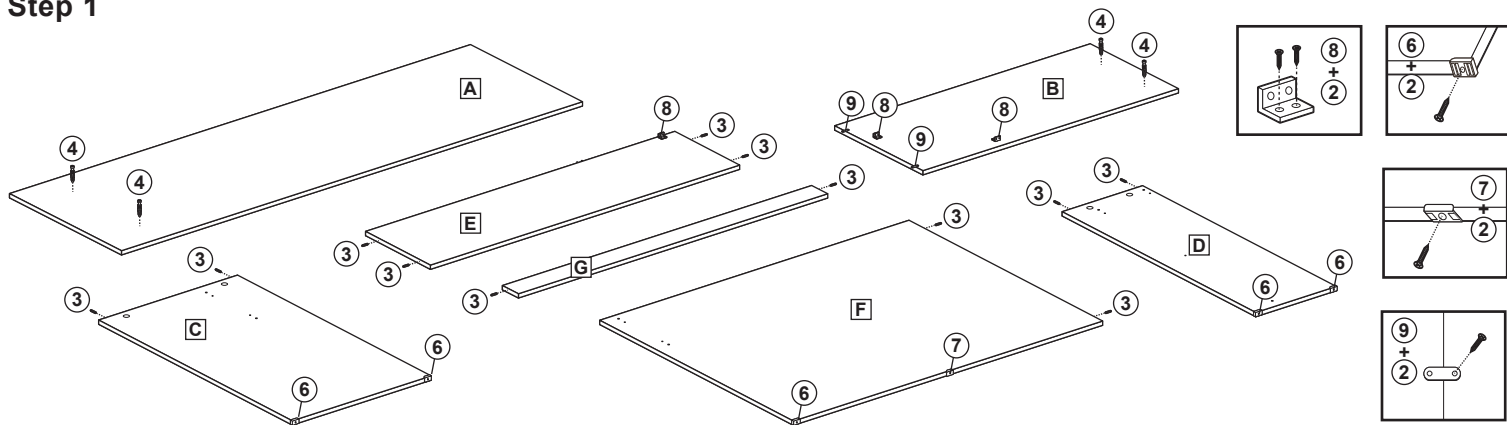


Step 2

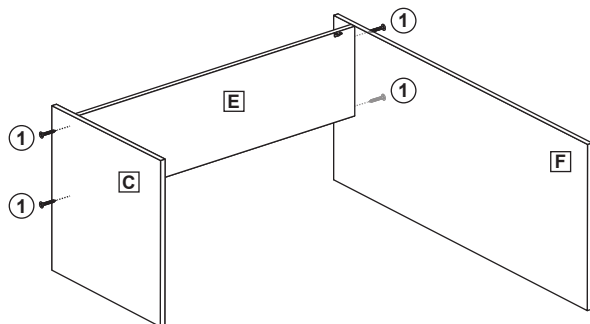

Step 3

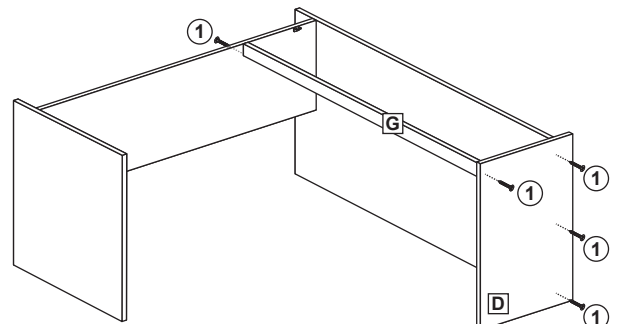

Step 4

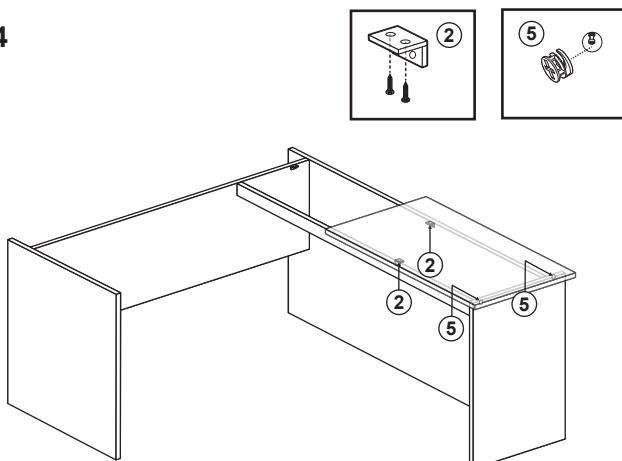

Step 5

