


CODING

-131116

-131117

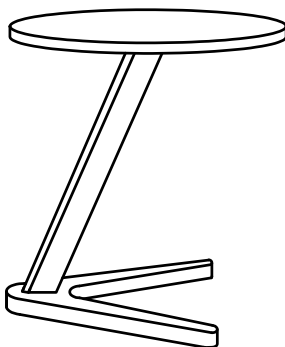

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

Read the instruction carefully. Remove all the wrapping material , staples and straps from the carton . Refer to the hardware and furniture part list for guidance . Be sure that you have all the parts before you start assembling . Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubberma to prevent from scratches .

Caution


KEEP ALL PARTS OUT OF REACH OF CHILDREN.

ITEM	HARDWARE LIST	QTY
Ⓐ	JCBC SCREW M6 X 45MM 	4
Ⓑ	JCBC SCREW M6 X 30MM 	4
Ⓒ	WOOD DOWEL M6 X 30MM 	2
Ⓓ	SPRING WASHER 5/16" 	8
Ⓔ	FLAT WASHER 5/16" 	8
Ⓕ	ALLEN KEY M5 	1

ITEM	PART LIST	QTY
①	TOP 	1
②	CENTER 	1
③	CENTER SUPPORT 	1
④	BOTTOM 	1


CODING

-131116
-131117

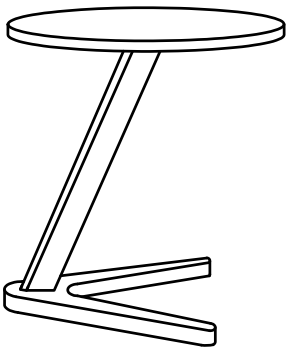

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

1

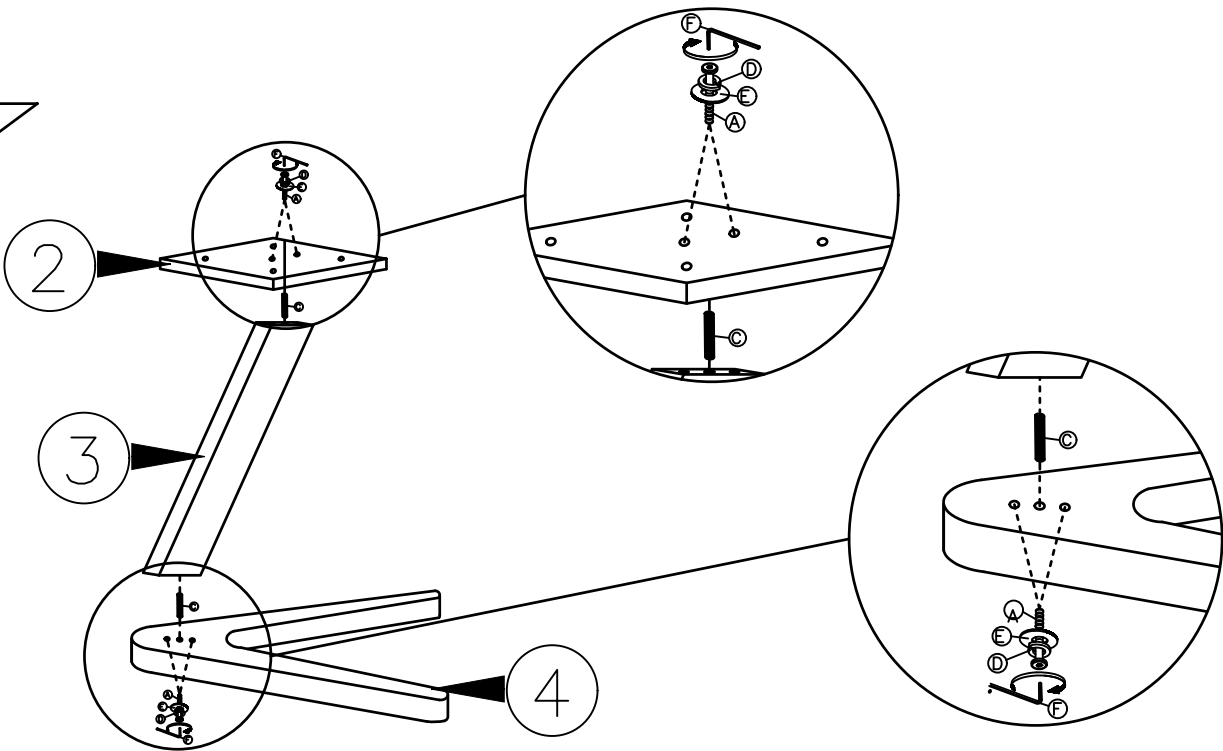

2

