


CODING

-131123

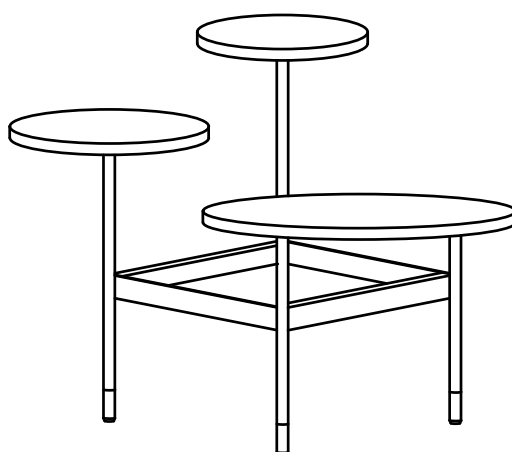


ISO 9001:2015
Reg. No. 000435-I-MY-I-QMS

Read the instruction carefully. Remove all the wrapping material , staples and straps from the carton . Refer to the hardware and furniture part list for guidance . Be sure that you have all the parts before you start assembling . Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches .


Caution
KEEP ALL PARTS OUT OF REACH OF CHILDREN.

ITEM	HARDWARE LIST	QTY
(A)	JCBC SCREW M8 X 20MM 	8
(B)	JCBC SCREW M6 X 15MM 	16
(C)	SPRING WASHER 5/16" 	24
(D)	FLAT WASHER 5/16" 	24
(E)	ALLEN KEY 4MM 	1
(F)	ALLEN KEY 5MM 	1

ITEM	PART LIST	QTY
(1)	BODY SMALL (Ø300) 	1
(2)	BODY MEDIUM (Ø350) 	1
(3)	BODY BIG (Ø400) 	1
(4)	LEG SHORT 	1
(5)	LEG TALL 	1
(6)	CENTER SUPPORT 	2


CODING

-131123

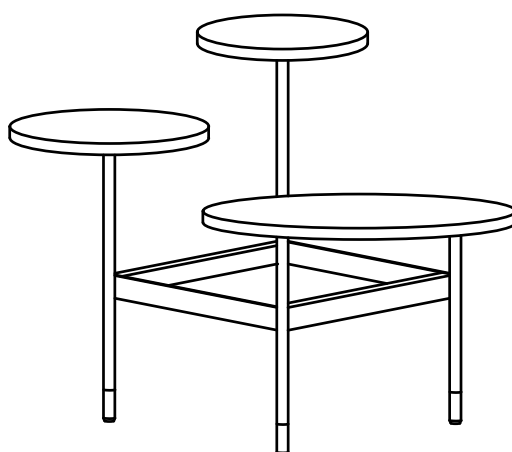

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

1

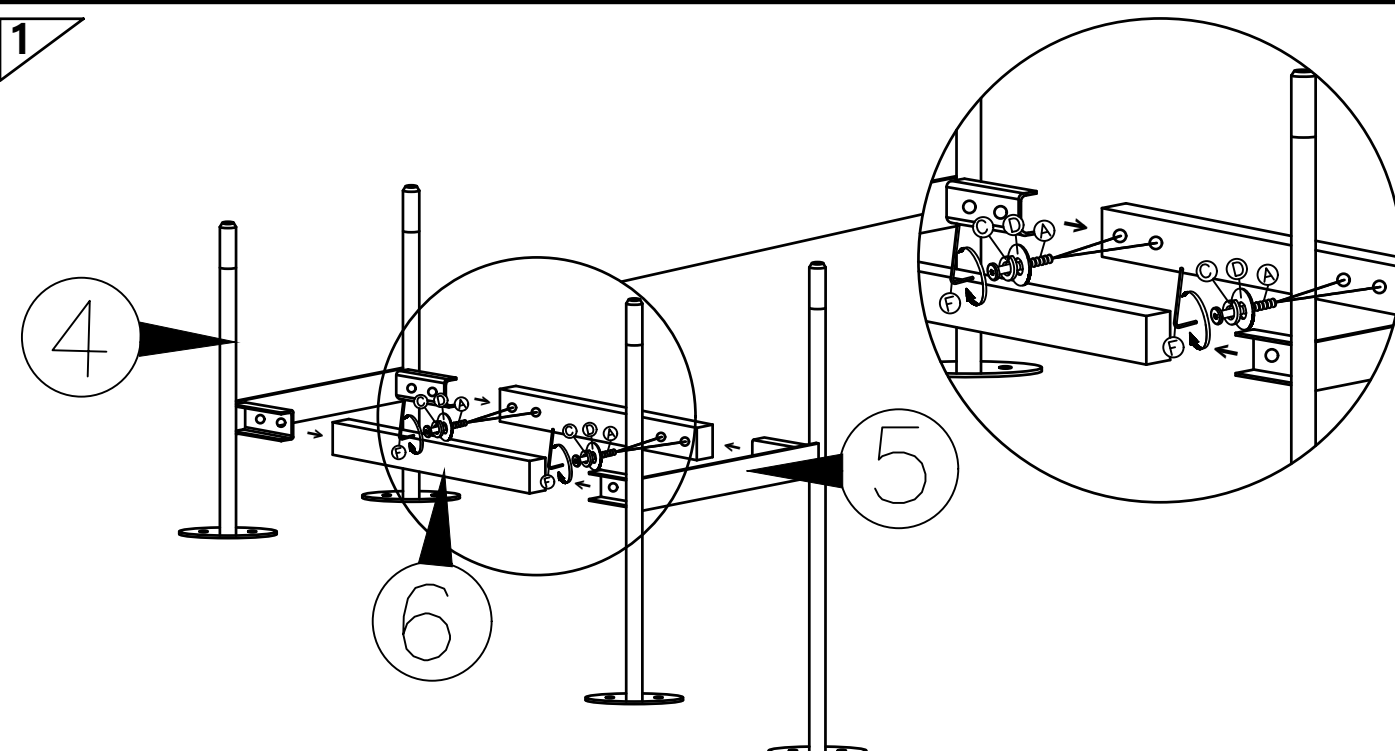

2

