


CODING

- 131202

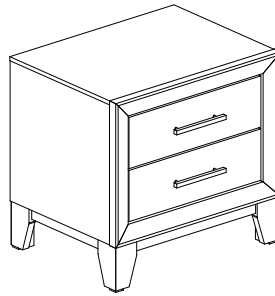



ISO 9001:2015
Reg. No. 000405-1-2017-1-Q005

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION

KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.



ITEM	PHOTO	HARDWARE NAME	QTY
(A)		JCBC BOLT 1/4" x 1 9/16"	4
(B)		SPRING WASHER 1/4" x 1/2"	4
(C)		FLAT WASHER 1/4" x 3/4"	4
(D)		WOOD DOWEL 5/16" x 1 3/16"	4
(E)		ALLEN KEY 1/4" x 2 3/8"	1

ITEM	PHOTO	PARTS NAME	QTY
(1)		Bravon Side Table 191	1
(2)		Leg	4

A line drawing of a square bedside table. It features a flat top surface, a front panel with two drawers, and four legs. The drawers have simple horizontal handles. The table is shown from a three-quarter perspective.

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

1

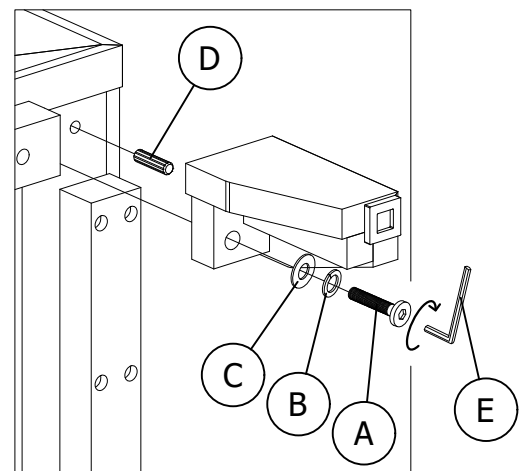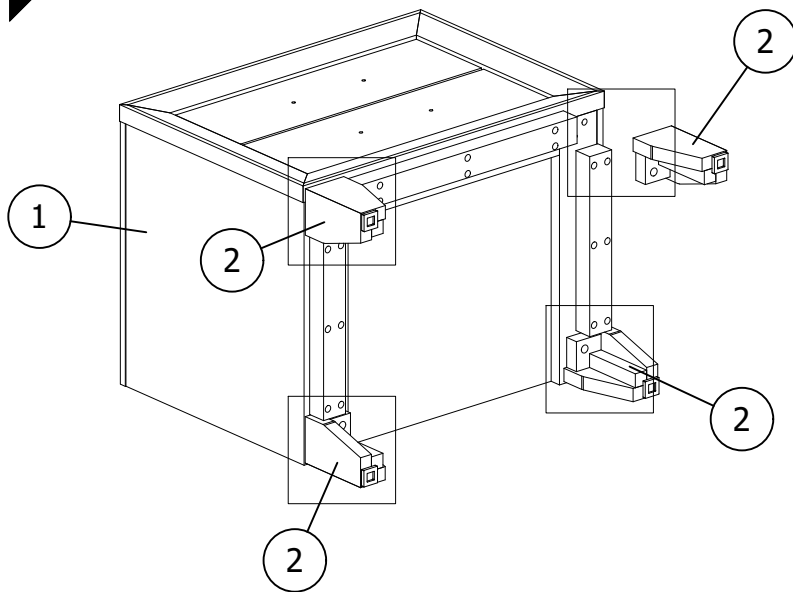

2

