

CODING

- 132010


ISO 9001:2015

Reg. No. 000435-1-MY-1-QMS

Read the instruction carefully. Remove all the wrapping material, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure that you have all the parts before you start assembling. Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches.

CAUTION

KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

ITEM	PHOTO	HARDWARE NAME	QTY
(A)		DIA 1/4"X16MM SCREW	2
(B)		DIA 1/4"X12MM ADJUSTABLE FOOT	4
(C)		10X40MM BUMPER PAD	4
(D)		DIA 16MM TUBE PLUG	4
(E)		4MM ALLEN KEY	1
(F)		DIA 1/4" WASHER	2


ITEM	PHOTO	PARTS NAME	QTY
(1)		TABLE TOP	1
(2)		PART 2 LEG	1
(3)		PART 3 LEG	1

CODING
- 132010




ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

1

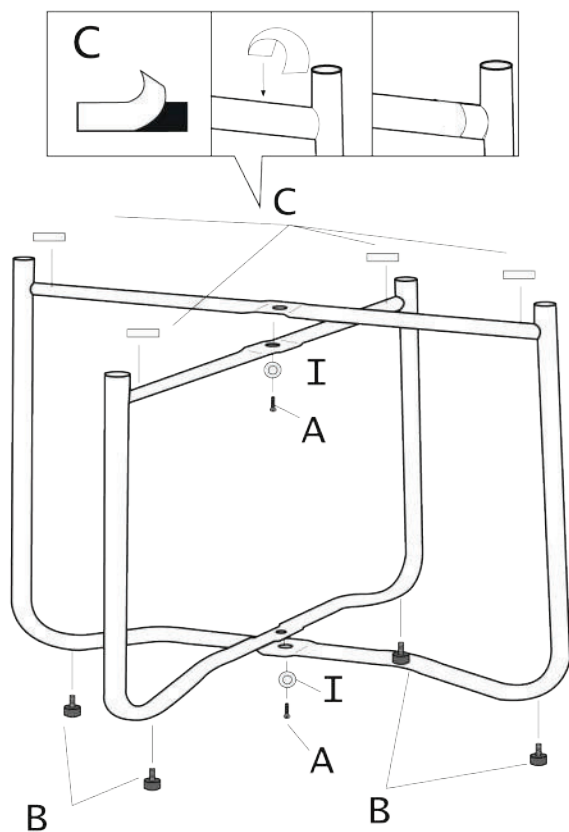

2

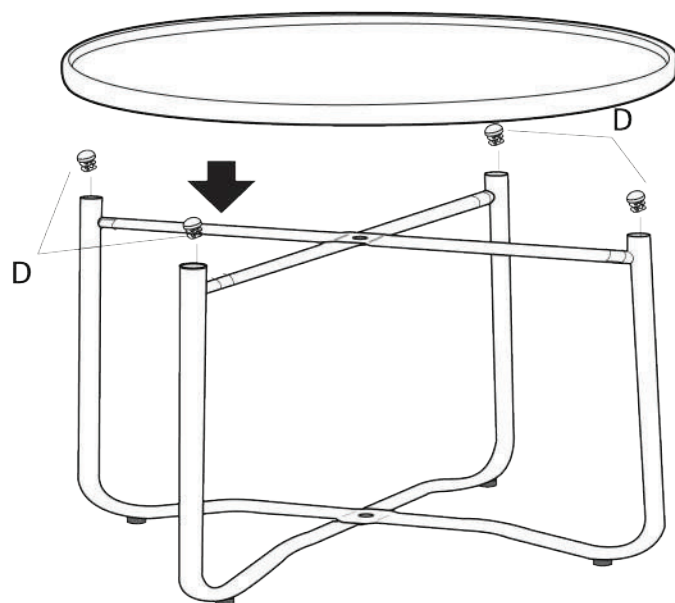

3

