

CODING
-132039



ISO 9001:2015
Reg.No. 000435-1-MY-1-QMS

Read the instruction carefully. Remove all the wrapping material, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure that you have all the parts before you start assembling. Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches.

CAUTION
KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

ITEM	PHOTO	HARDWARE NAME	QTY
(A)		Bolt M6x25	4
(B)		Bolt M6x30	4
(C)		Glass holder Ø30	4
(D)		Allen key 4 mm	1


ITEM	PHOTO	PARTS NAME	QTY
①		Top plate	1
②		Top frame	1
③		Leg frame	2
④		Rail	2

CODING
-132039




ISO 9001:2015
Reg.No. 000435-1-MY-1-QMS

1

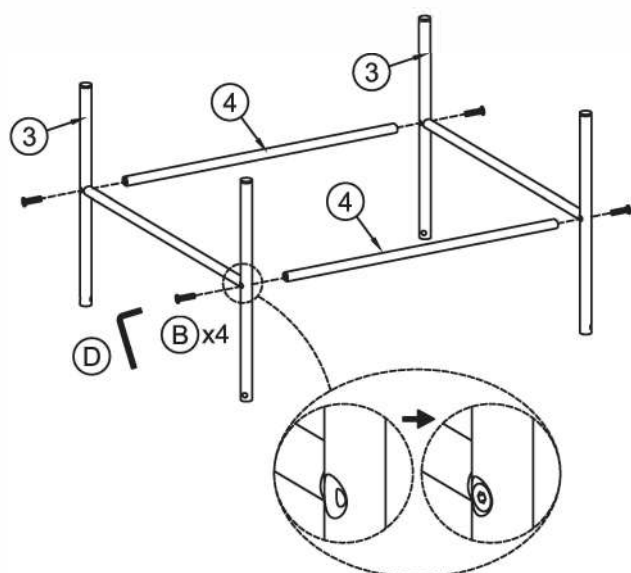

2

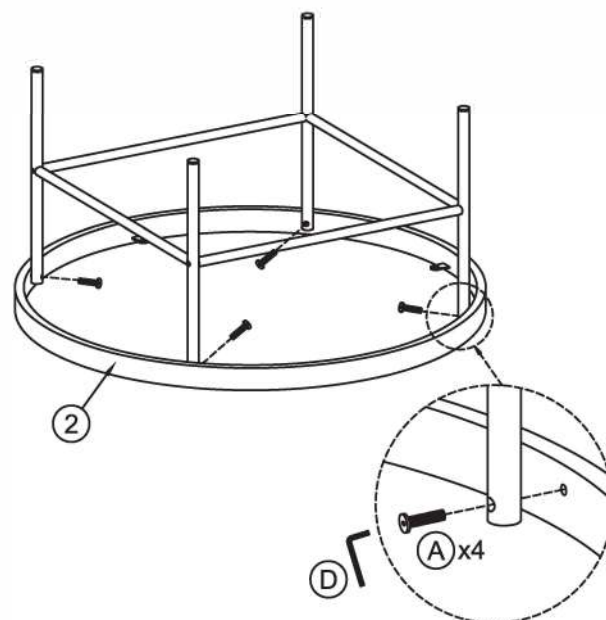


CODING
-132039



ISO 9001:2015
Reg.No. 000435-1-MY-1-QMS

3

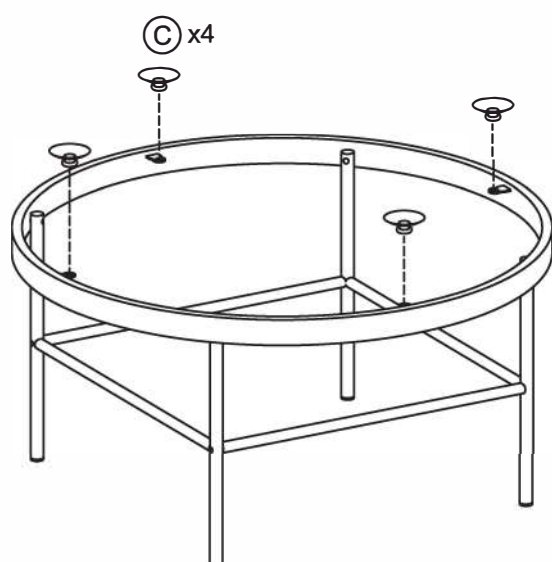

4

