


## CODING

-132054

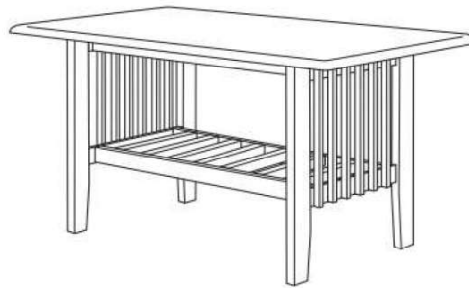

ISO 9001:2015  
Reg. No. 000435-1-KYLIE-QMS

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

### CAUTION


KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

| ITEM | PHOTO                                                                               | HAREWARE NAME      | QTY |
|------|-------------------------------------------------------------------------------------|--------------------|-----|
| (A)  |  | JCBCW M6 x 40mm    | 8   |
| (B)  |  | CSK M4 x 30mm      | 4   |
| (C)  |  | Allen Key M4       | 1   |
| (D)  |  | Wood Dowel M8 x 30 | 4   |

| ITEM | PARTS NAME   | QTY |
|------|--------------|-----|
| (1)  | Table Top    | 1   |
| (2)  | Apron        | 2   |
| (3)  | Table Side   | 2   |
| (4)  | Table Bottom | 1   |


CODING

-132054

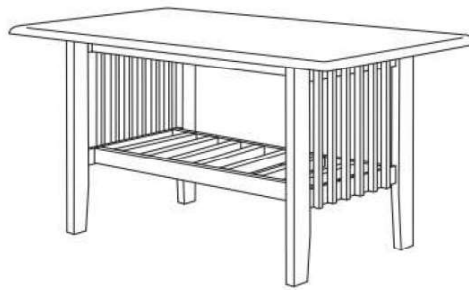

ISO 9001:2015  
Reg. No. 000435-1-KYLIE-QM&S

1

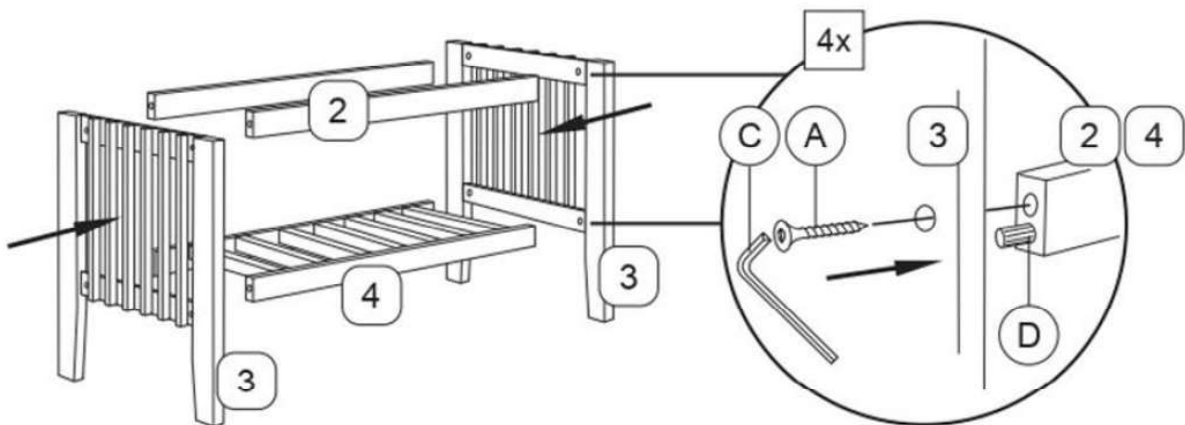

2

