

CODING  
- 132122




ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION  
KEEP ALL THE PARTS OUT OF CHILDREN’S REACH.

| ITEM | PHOTO                                                                               | HAREWARE NAME  | QTY |
|------|-------------------------------------------------------------------------------------|----------------|-----|
| (A)  |  | ALLEN KEY M4   | 1   |
| (B)  |  | JCBC M6 X 60MM | 8   |
| (C)  |  | U WASHER M6    | 8   |


| ITEM | PHOTO                                                                                | PARTS NAME | QTY |
|------|--------------------------------------------------------------------------------------|------------|-----|
| ①    |  | Table Top  | 1   |
| ②    |  | Table Leg  | 2   |

**CODING**  
- 132122



ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS

1

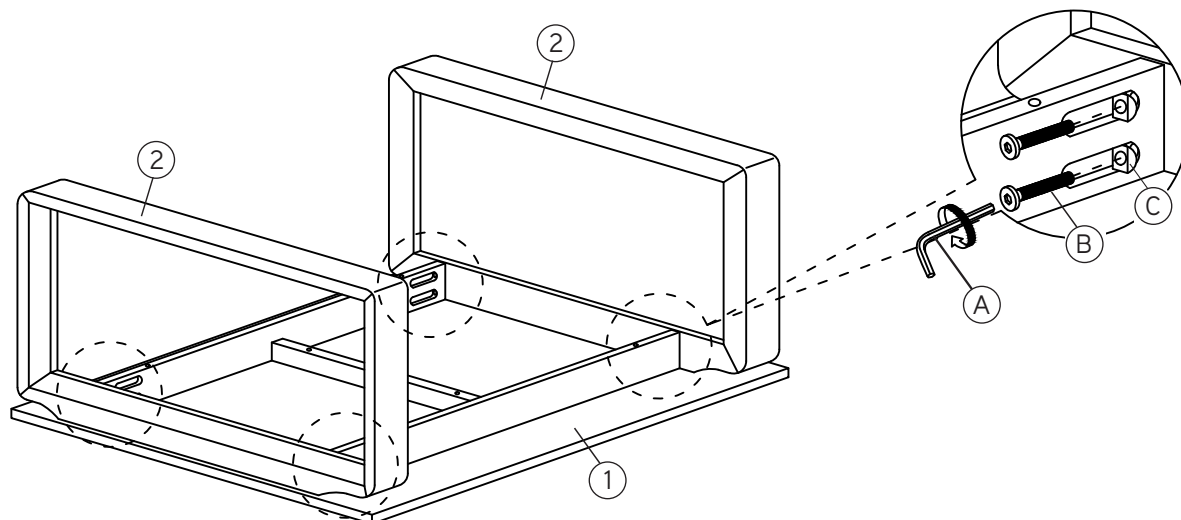

2

