

CODING

- 133097
- 133098




ISO 9001:2015
Reg.No.000485-1-MY-1-QMS

Read the instruction carefully. Remove all the wrapping material, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure that you have all the parts before you start assembling. Place all the wooden furniture part on a assembling. Place all the wooden furniture part on a to prevent from scratches.

CAUTION

KEEP ALL THE PARTS OUT OF REACH OF CHILDREN .

ITEM	PHOTO	HAREWARE NAME	CHAIR
A		CSK Screw M4x32mm	3 pcs
B		JCBC Bolts M6x16mm	2 pcs
C		Allen Key M4x65mm	1 pc

ITEM	PHOTO	PARTS NAME	CHAIR
1		Top Panel	1 pc
2		Metal Leg	1 pc
3		Metal Leg	1 pc


CODING

- 133097
- 133098




ISO 9001:2015
Reg.No.000485-1-MY-1-QMS

1

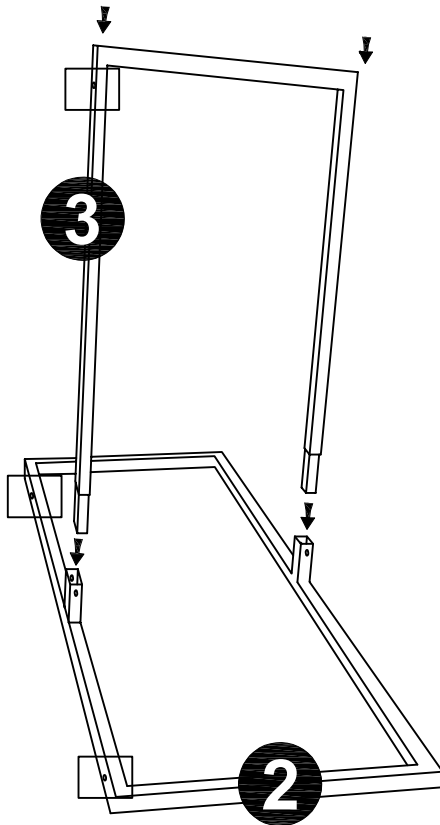

2

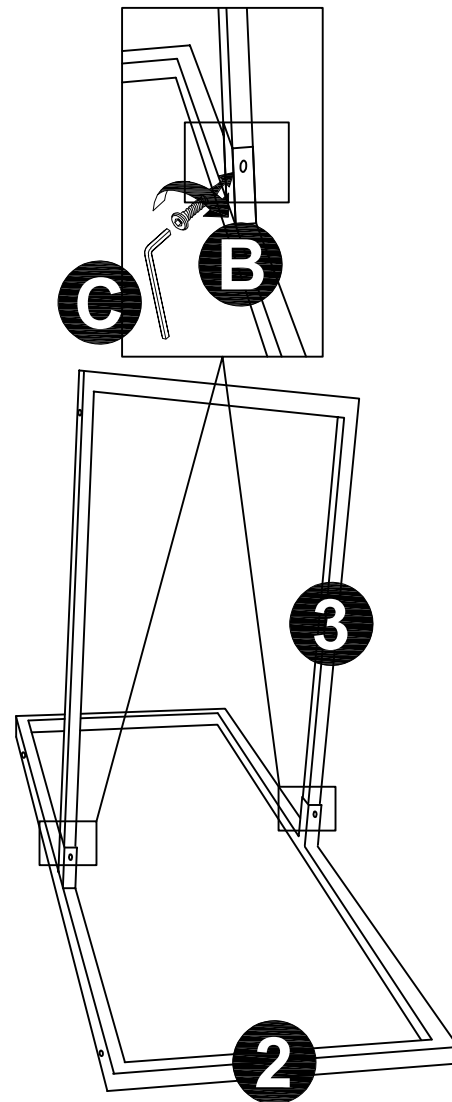

CODING

- 133097
- 133098



ISO 9001:2015
Reg.No.000485-1-MY-1-QMS

3

