

CODING
- 133119











ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

ITEM	PHOTO	HARDWARE NAME	QTY
①		Minifix Bolt	12
②		Cam 12/15	12
③		Hinges 7/8" (Slow Closed)	2
④		Wood Dowel 6 x 30	14
⑤		Csk Screw 3.5 x 15	26
⑥		Unitar Screw 6.3 x 40	8
⑦		Solidwood Leg (150)	4
⑧		Metal Braket 1.5 x 82 x 82	4
⑨		Door Stopper	1
⑩		Aluminium Handle	1
⑪		Allen Key M4	1


ITEM	PHOTO	PARTS NAME	QTY
Ⓐ		Side Panel Left	1
Ⓑ		Side Panel Right	1
Ⓒ		Top Panel	1
Ⓓ		Bottom Panel	1
Ⓔ		Center Panel	1
Ⓕ		Shelf Panel	1
Ⓖ		Back Panel	1
Ⓗ		Door Panel	1

CODING
- 133119




ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS


1

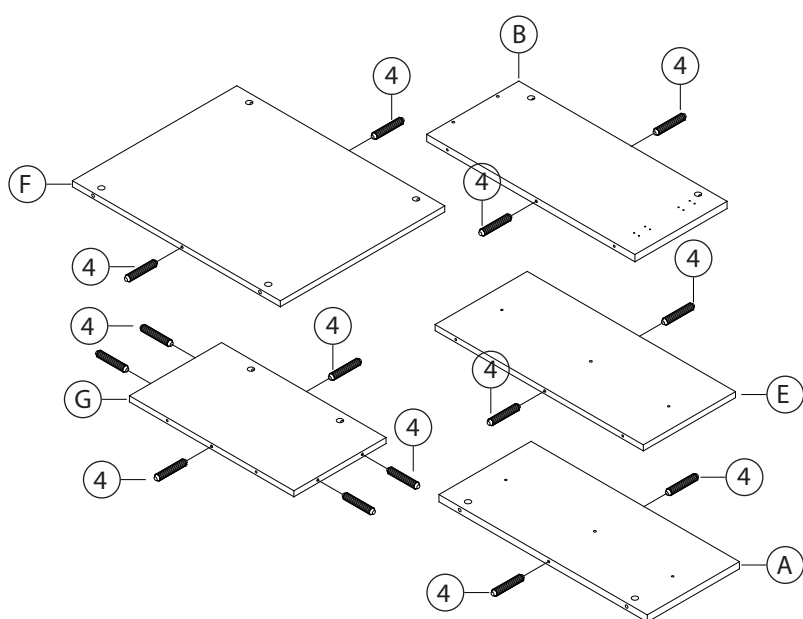


2

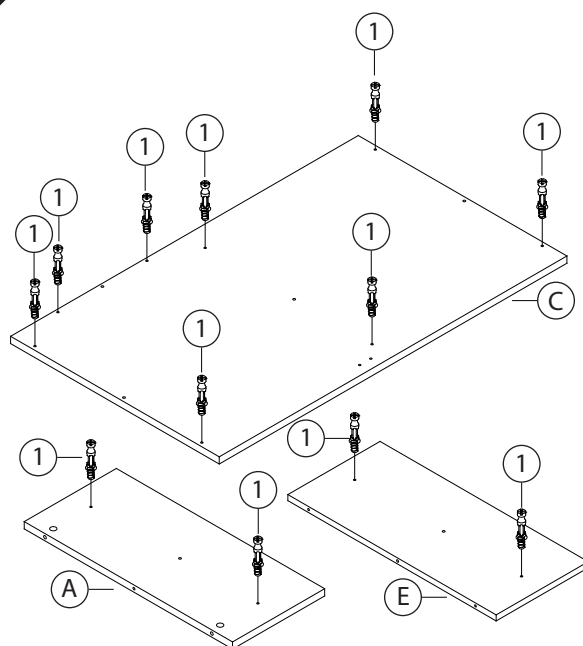

3

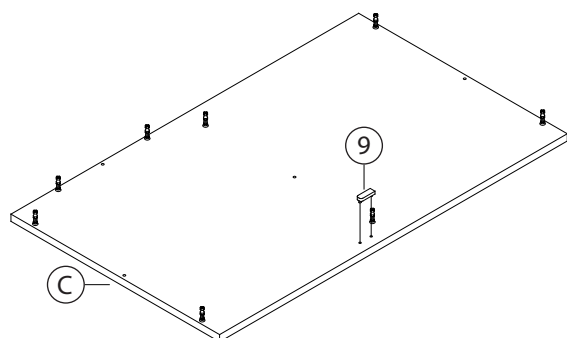

4

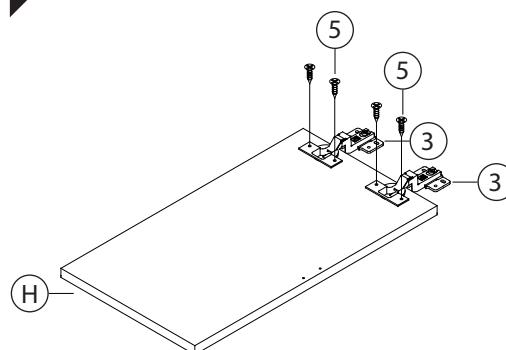


CODING
- 133119




ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS


5

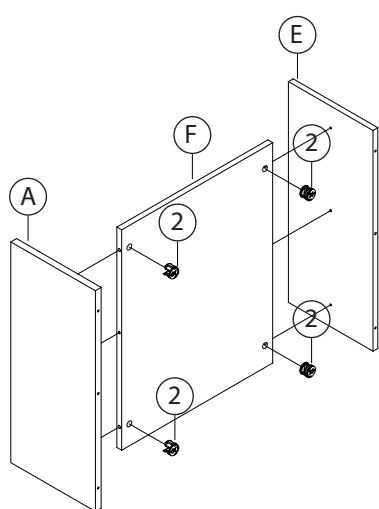


6

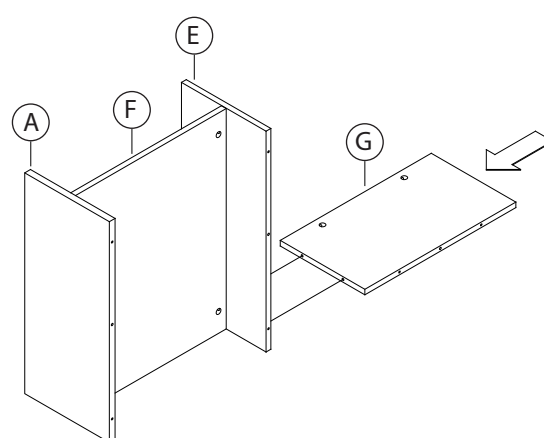

7

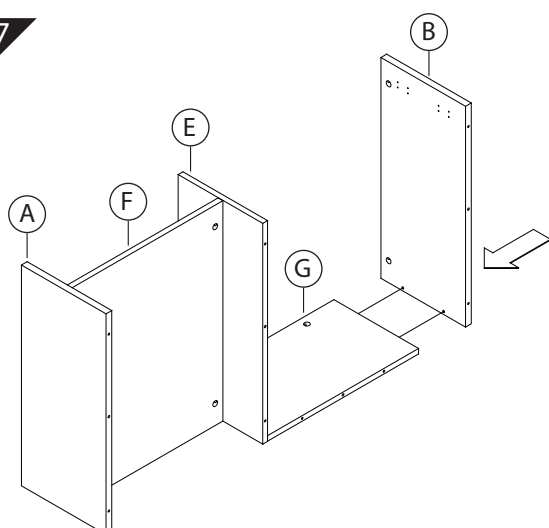

8

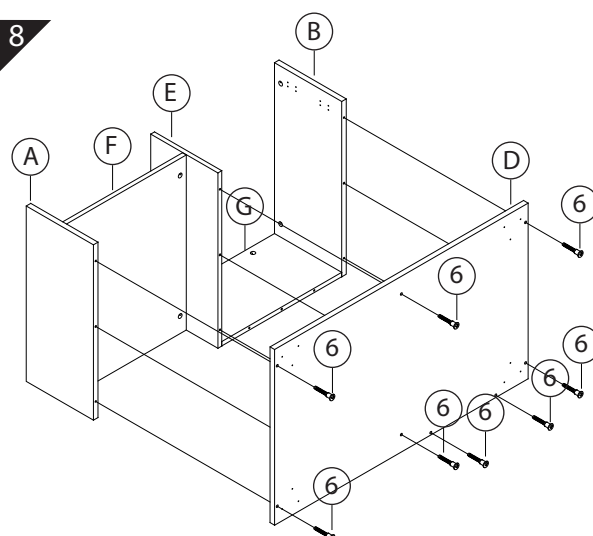


CODING
- 133119




ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS


9

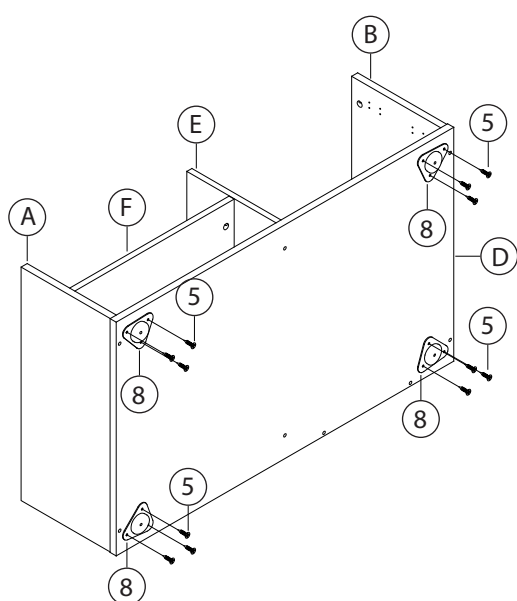


10

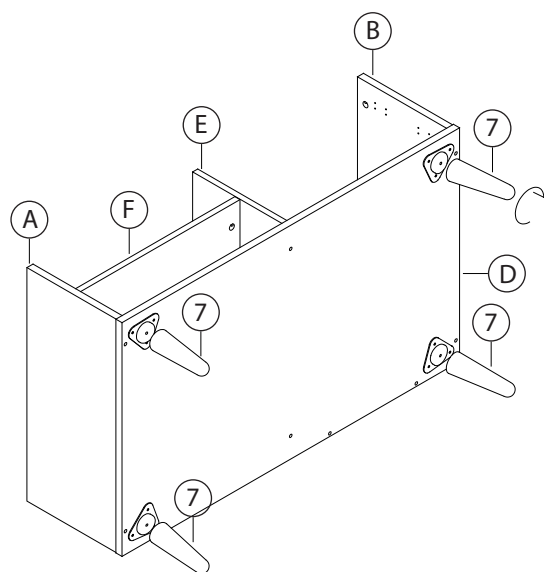

11

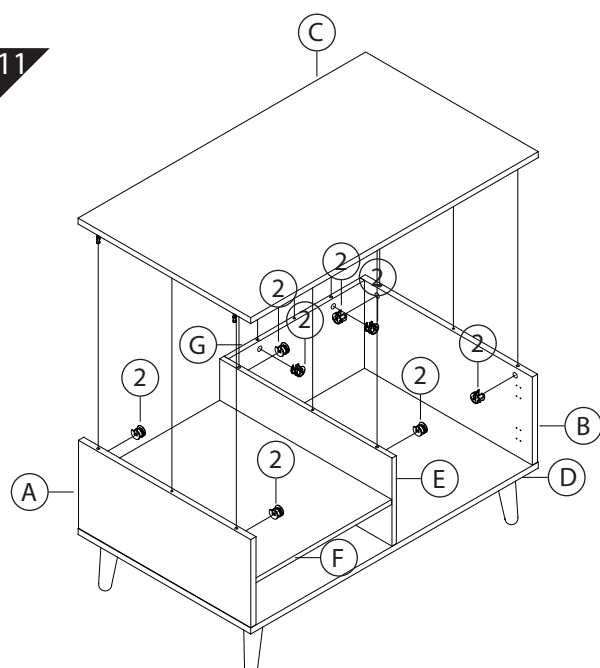

12

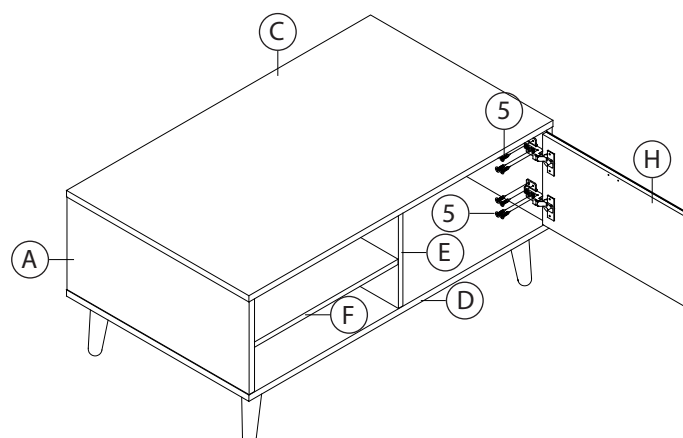


CODING
- 133119



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

13

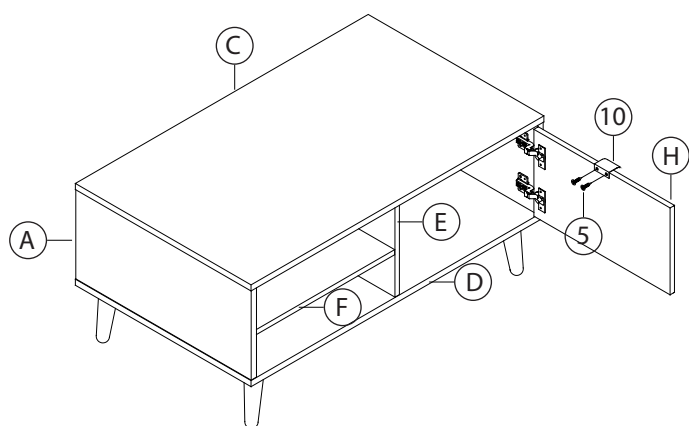

14

