

CODING
- 134045





ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN’S REACH.



NO	PHOTO	HAREWARE NAME	QTY
Ⓐ		JCBC SCREW M6 X 35MM	8PCS
Ⓑ		FLAT WASHER	8PCS
Ⓒ		CSK SCREW M4 X 32MM	4PCS
Ⓓ		WOOD DOWEL M10 X 30MM	4PCS
Ⓔ		ALLEN KEY	1PC

ITEM	PHOTO	PARTS NAME	QTY
①		TABLE TOP	1PC
②		TABLE LEG	4PCS
③		CENTER PANEL	1PC

CODING
- 134045



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

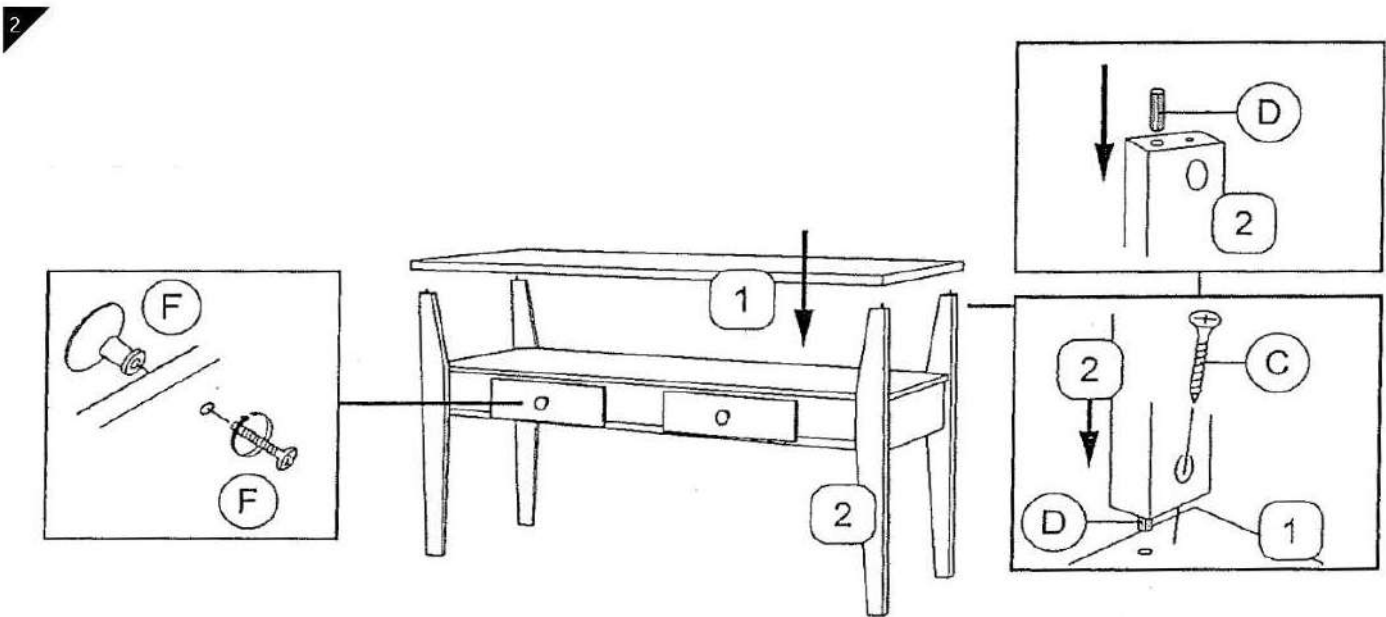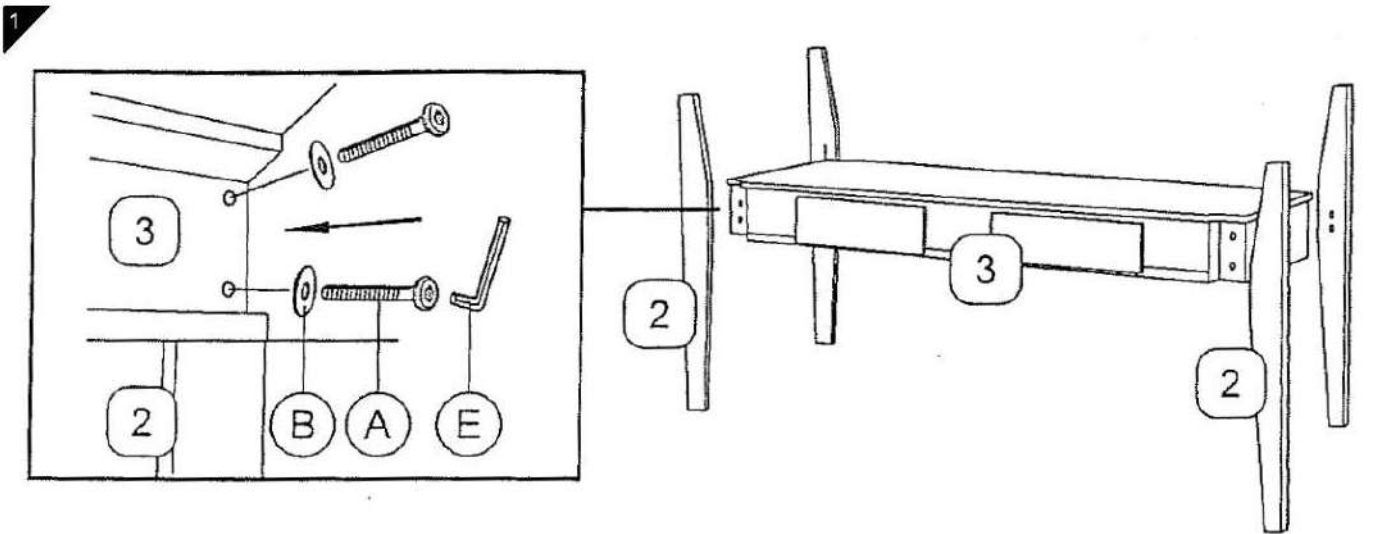

CODING
- 134045



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

3

