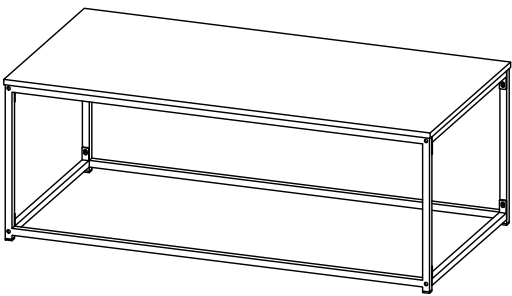


CODING
- 134093



ISO 9001:2015
Reg. No. 00905-1-MIT-1-QMS

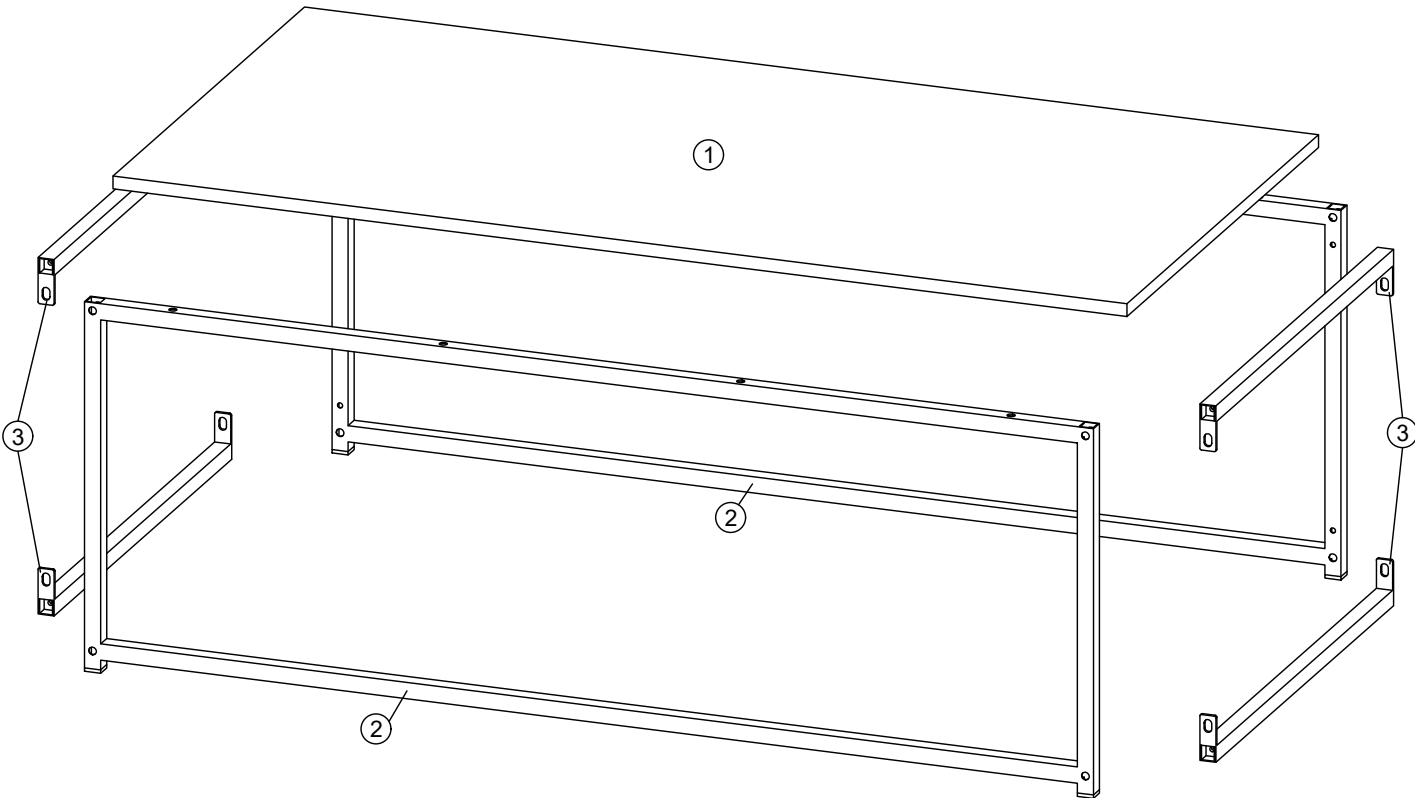
Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

HARDWARE			
A	ALLEN KEY M4		1 PC
B	JCBC Screw M6 x 20MM		8 PCS
C	JCBC SCREW M6 X 30MM		8 PCS
D	JCBC SCREW M6 X 40MM		8 PCS

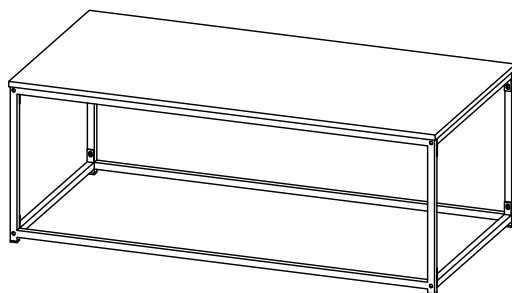
PART LIST		QTY
1	TOP PANEL	1 PC
2	METAL SIDE	2 PCS
3	METAL SUPPORT	4 PCS

SELF-PREPARED TOOLS: Tools below are NOT included in package.	
 SCREWDRIVER	 HAMMER




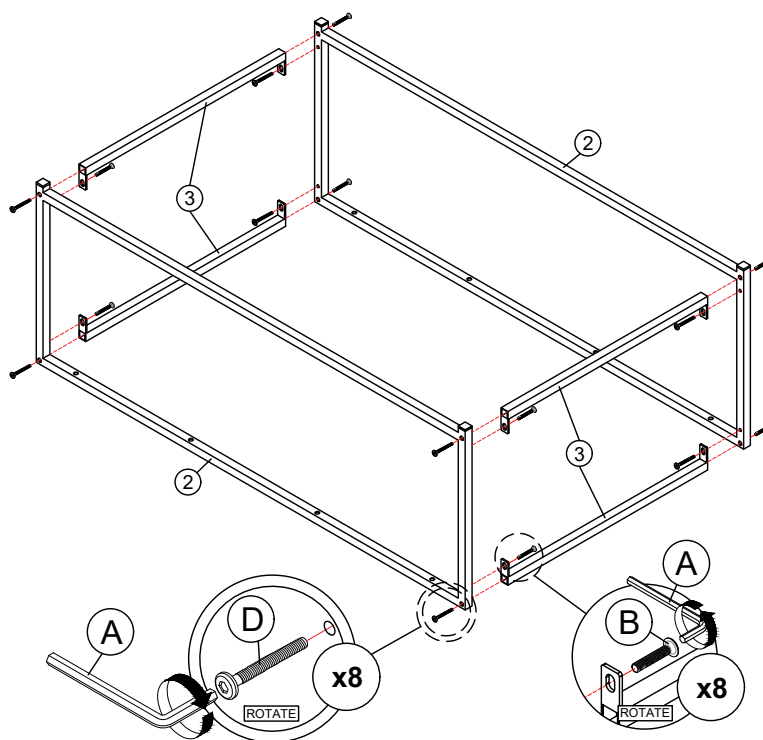
CODING

- 134093

ISO 9001:2015
Reg. No. 009-05-1-MT-1-QMS

STEP 1

Connect Metal Side (2) to Metal Support (3)
by using hardware A, B and D.
(Repeat 16 times.)

HARDWARE
A

STEP 2

Connect Metal Side (2) to Metal Support (3)
by using hardware A and C.
(Repeat 8 times.)

HARDWARE
A