

CODING
- 134102



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

ITEM	PHOTO	HARDWARE NAME	QT Y
(A)		Pan Head Screw 5/25" x 1 1/2"	4
(B)		Handle 5 7/8" x 7/8"x 1 2/16"	2

REMARK: HARDWARE FIXED INSIDE DRAWER

ITEM	PHOTO	PARTS NAME	QT Y
(1)		Coffee Table	1


CODING
- 134102



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

1

B

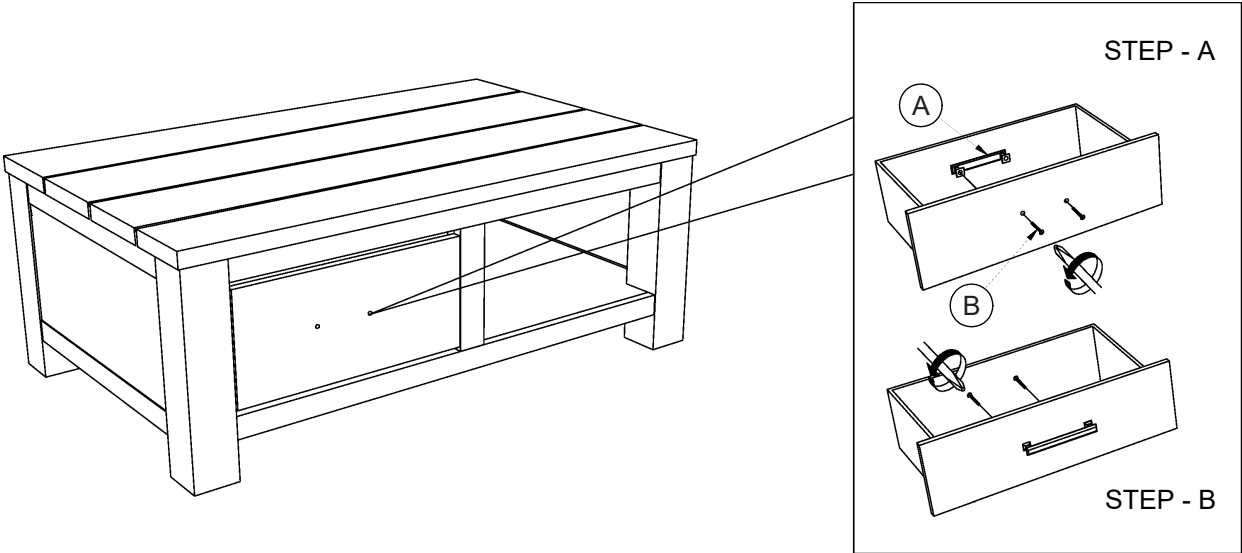

2

