


CODING
-134129

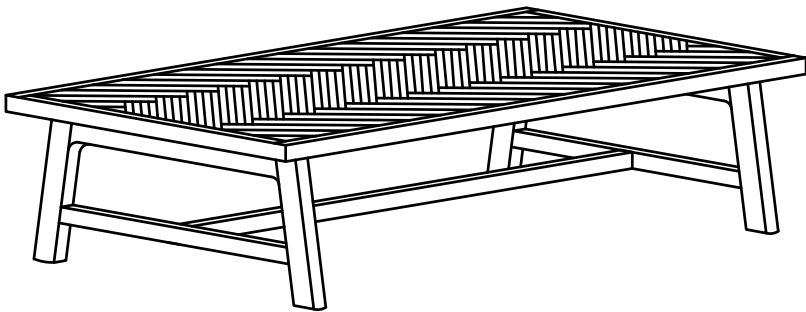

ISO 9001:2015
Reg. No. 000435-I-MY-I-QMS

Read the instruction carefully. Remove all the wrapping material , staples and straps from the carton . Refer to the hardware and furniture part list for guidance . Be sure that you have all the parts before you start assembling . Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches .


Caution
KEEP ALL PARTS OUT OF REACH OF CHILDREN.

ITEM	HARDWARE LIST	QTY
Ⓐ	JCBC SCREW M8 X 40MM 	14
Ⓑ	SPRING WASHER 5/16" 	14
Ⓒ	FLAT WASHER 5/16" 	12
Ⓓ	ALLEN KEY 5MM 	1

ITEM	PART LIST	QTY
①	TOP 	1
②	LEG (L&R) 	1
③	CENTER SUPPORT 	1


CODING

-134129

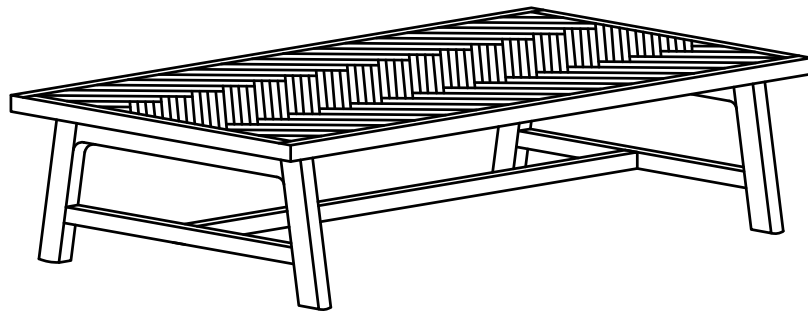

ISO 9001:2015
Reg. No. 000435-I-MY-I-QMS

1

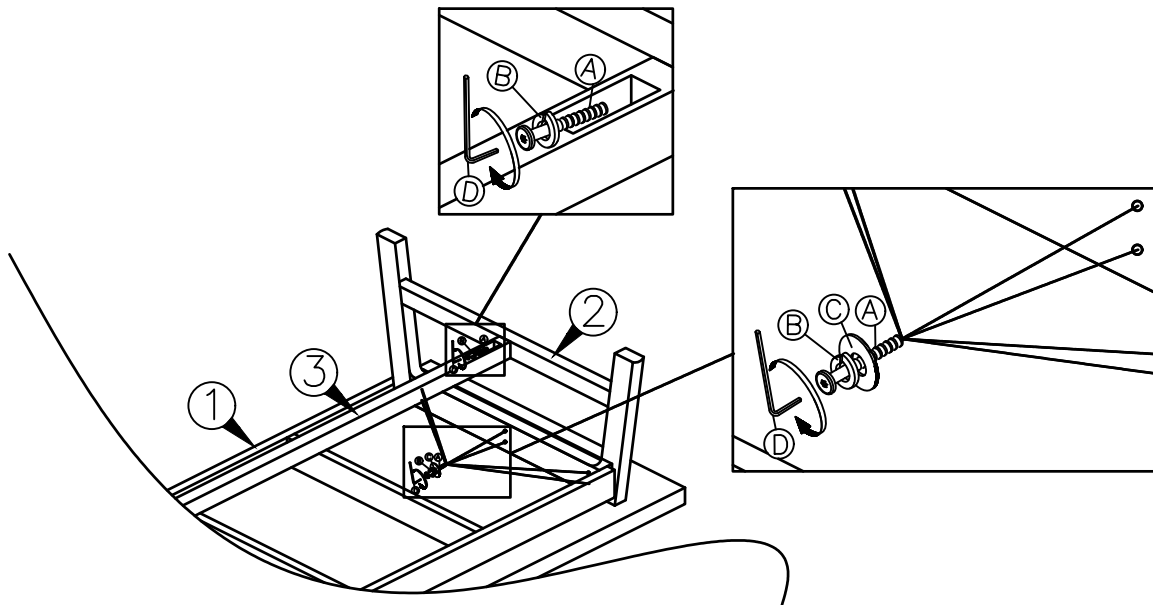

2

