


CODING
- 134144

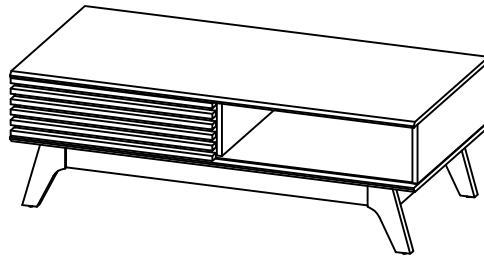

ISO 9001:2015
Reg. No. 000435-1-001-1-QMS

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.


CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

PART LIST		QTY
1	TOP PANEL	1 PC
2	BOTTOM PANEL	1 PC
3	SIDE PANEL - L	1 PC
4	SIDE PANEL - R	1 PC
5	CENTER PANEL	1 PC
6	SLIDING DOOR	2 PCS
7	APRON SHORT	2 PCS
8	CABINET LEG	2 PCS


HARDWARE				
A	MINI FIX	A1 A2 A3	10 SETS	
B	M8 X 30MM WOOD DOWEL		20 PCS	
C	M6 X 50MM CSK CAP WOOD SCREW		6 PCS	
D	ALLEN KEY M4		1 PC	
E	M3 X 12MM C.B SCREW		16 PCS	
F	M4 X 65MM C.B SCREW		14 PCS	
G	5/8 PVC NAIL LEG		4 PCS	
H	U 480 ROLLER	H1 H2	4 SETS	

SELF-PREPARED TOOLS: Tools below are NOT included in package.	
SCREWDRIVER	HAMMER


CODING
- 134144

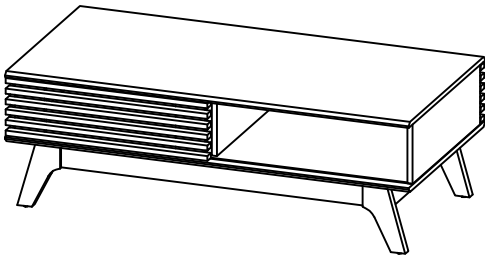

ISO 9001:2015
Reg. No. 000435-1-001-1-QM8

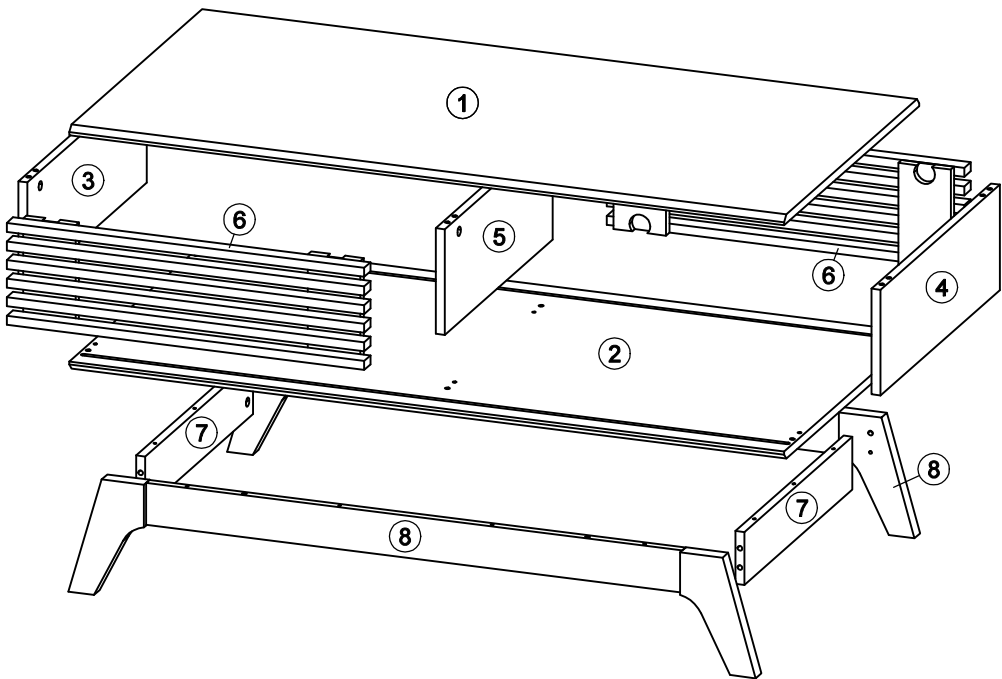


CODING - 134144

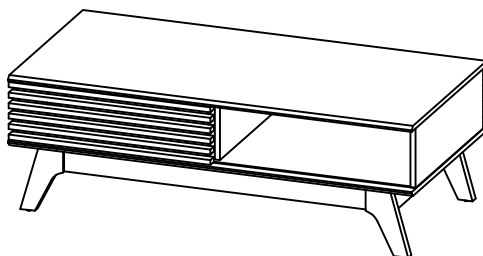

ISO 9001:2015
Reg. No. 000435-1-INT-1-QMS


STEP 1

- Insert hardware **A2** onto panel (1).
(Repeat 6 times.)

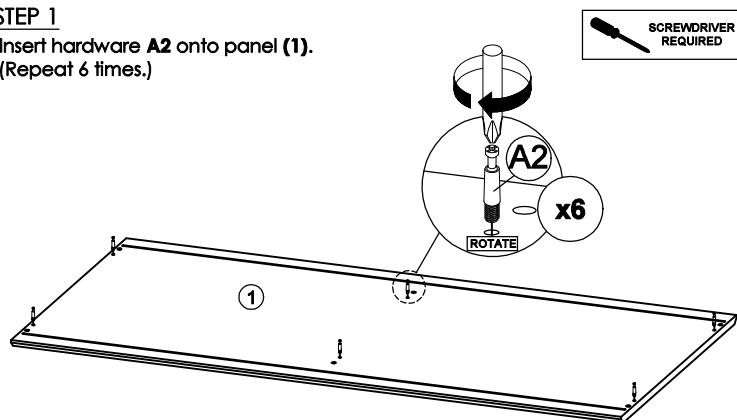


STEP 2

- Insert hardware **A1** onto panel (3), (4) and (5).
(Repeat 6 times.)
- Insert hardware **B** onto panel (3), (4) and (5).
(Repeat 12 times.)

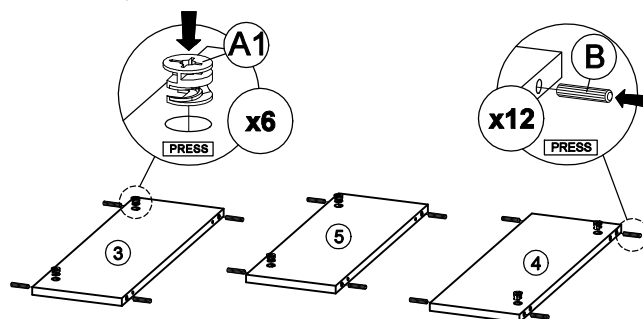

STEP 3


- Insert hardware **A1** onto panel (7).
(Repeat 4 times.)
- Insert hardware **A2** onto panel (8).
(Repeat 4 times.)
- Insert hardware **B** onto panel (7) and (8).
(Repeat 8 times.)

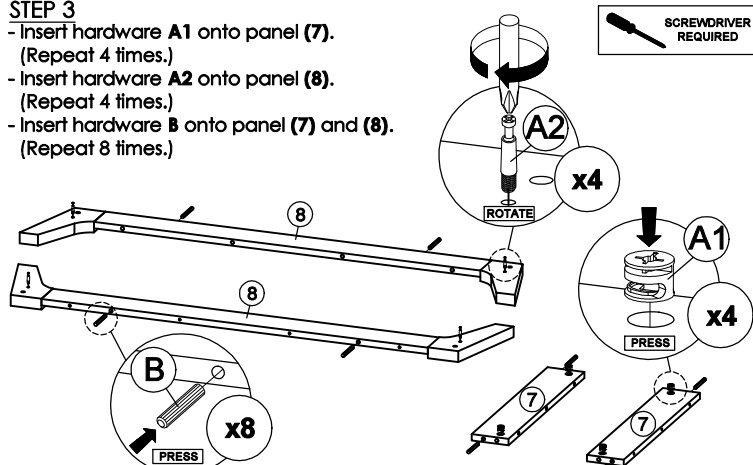

* Ensure the arrows on hardware **A1** point towards mounting positions.

STEP 5


- Connect panel (2) to panel (3), (4) and (5) by using hardware **C** and **D**.
(Repeat 6 times.)

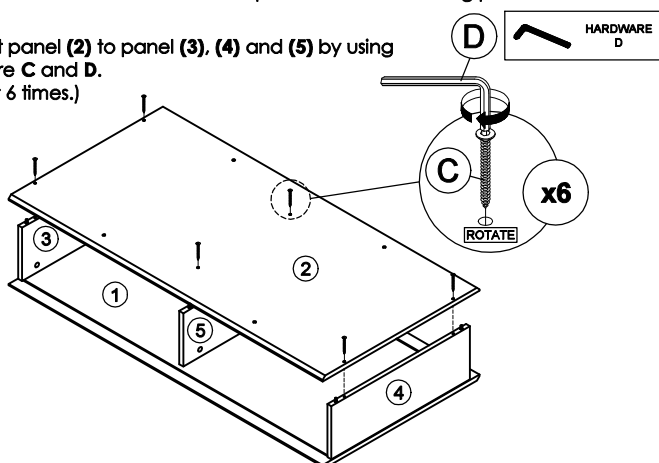

* In this step hardware **B** are pre-inserted.

STEP 4


- Attach panel (1) to panel (3), (4) and (5).
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 6 times.)

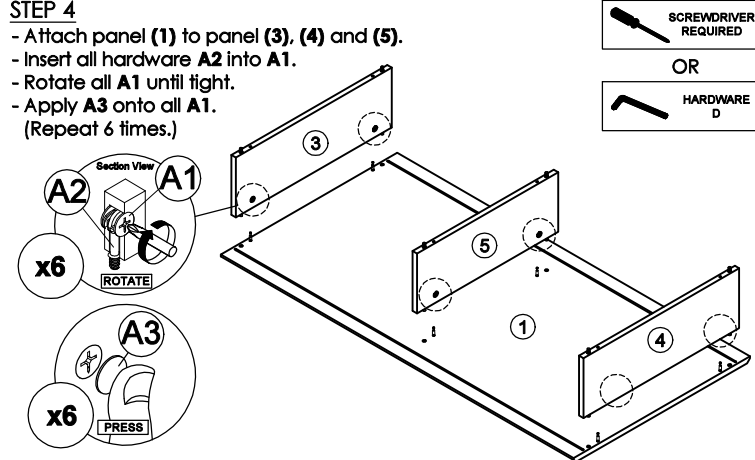

* In this step hardware **A1**, **A2** and **B** are pre-inserted.


STEP 6

- Attach panel (7) to panel (8).
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 4 times.)

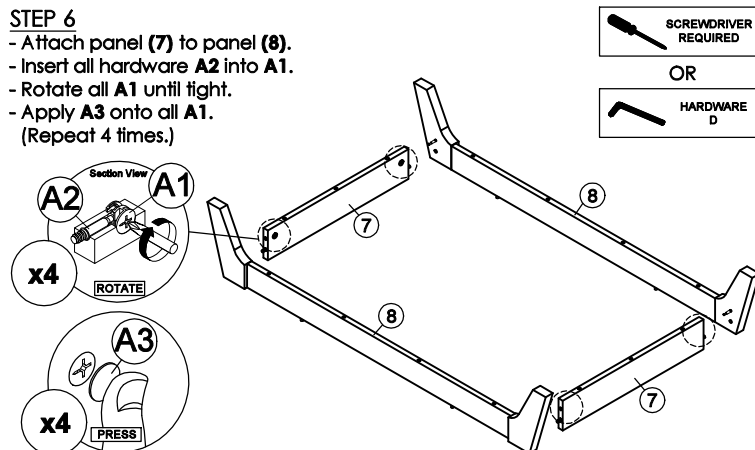

* In this step hardware **A1**, **A2** and **B** are pre-inserted.


CODING - 134144

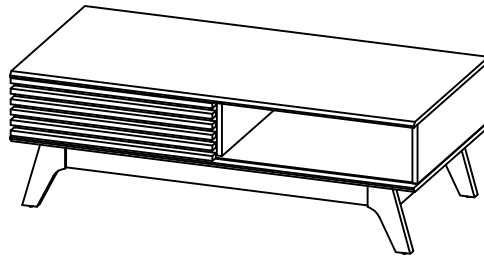

ISO 9001:2015
Reg. No. 000435-1-MY-1-QM8

STEP 7

- Connect panel (7) and (8) to panel (2) by using hardware F. (Repeat 14 times.)

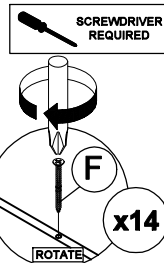

STEP 8



- Hit hardware G into bottom of panel (8). (Repeat 4 times.)



* In this step hardware B are pre-inserted.


STEP 9

- Assemble hardware H1 and H2 to two panel (6) with hardware E. (Repeat 2 times for each hardware.)

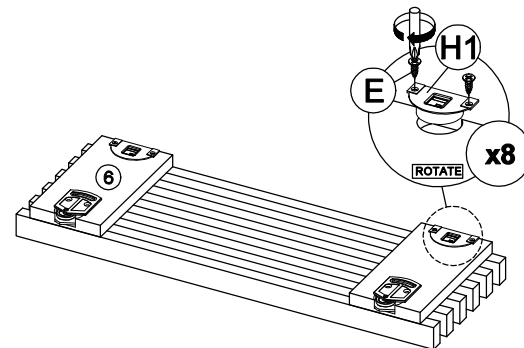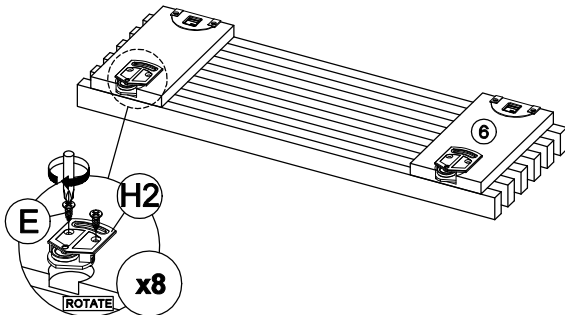

STEP 10


- Put the panel (6) in place. (Repeat 1 times.)

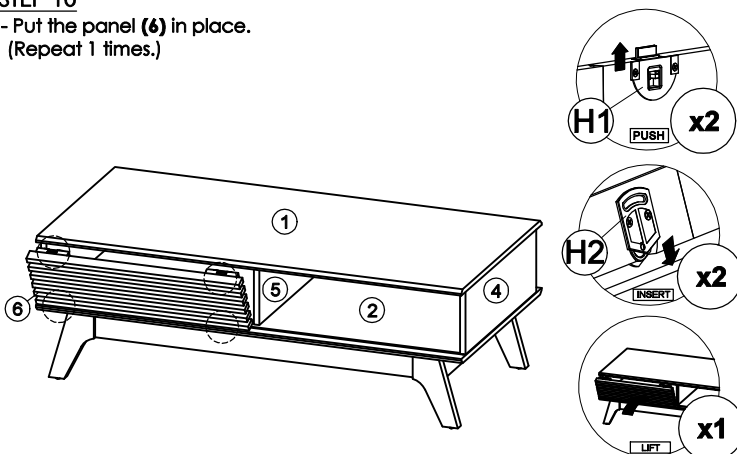

* In this step hardware H1 and H2 are pre-inserted.

STEP 11

- Put the panel (6) in place. (Repeat 1 times.)

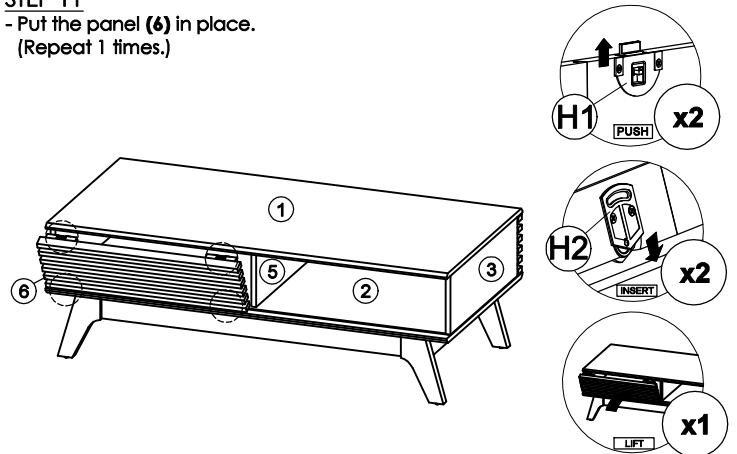

* In this step hardware H1 and H2 are pre-inserted.