




ISO 9001:2015
Ref. No. 000435-1-NY-1-OMR

PART LIST		QTY
1	TOP PANEL	1 PC
2	BOTTOM PANEL	1 PC
3	SIDE PANEL (L/R)	2 PCS
4	CENTER PANEL	1 PC
5	SLIDING DOOR	2 PCS


HARDWARE			
A	MINI FIX	A1  A2  A3 	6 SETS
B	M8 X 30MM WOOD DOWEL		8 PCS
C	M6 X 50MM CSK CAP WOOD SCREW		6 PCS
D	ALLEN KEY M4		1 PC
E	PAN HEAD SCREW M4 X 12MM		4 PCS
F	METAL BRACKET		2 PCS
G	M3.5 X 16MM C.B SCREW		4 PCS
H	PVC HANDLE 7050.96		2 PCS
I	ROSE METAL LEG		4 PCS

SELF-PREPARED TOOLS: Tools below are NOT included in package.	
 SCREWDRIVER	 HAMMER

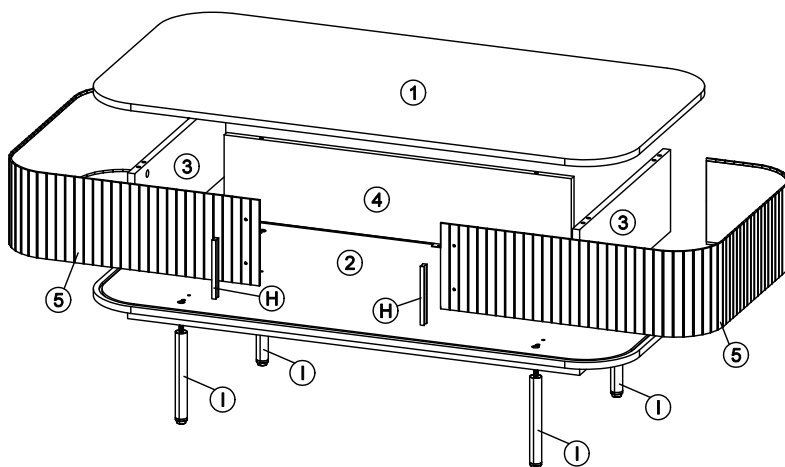

CODING


- 134145

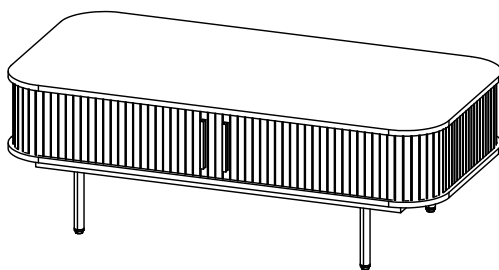

ISO 9001:2015
Reg. No. 00035-1-2017-1-Q008


STEP 1

- Insert hardware **A2** onto panel (1).
- (Repeat 6 times.)

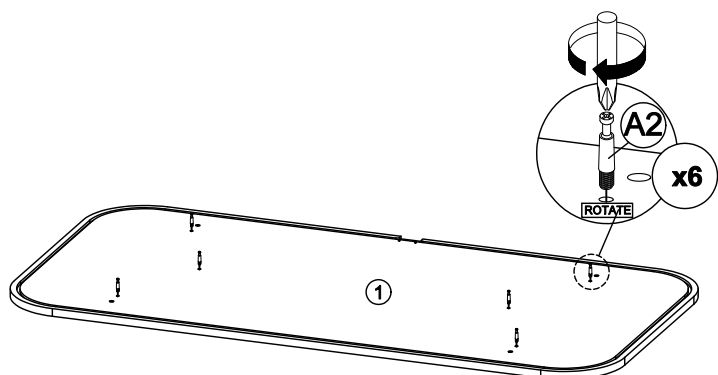


STEP 2

- Insert hardware **B** onto panel (3).
- (Repeat 8 times.)

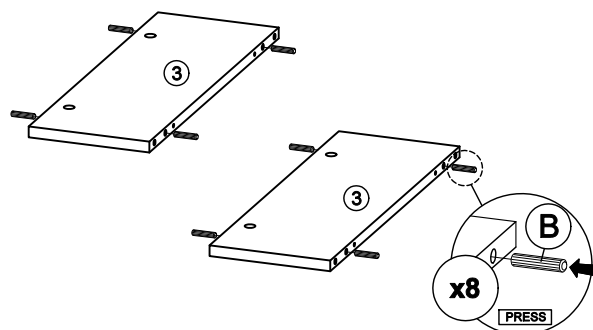


STEP 3

- Insert hardware **A1** onto panel (3).
- Attach panel (3) to panel (1).
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
- (Repeat 4 times.)

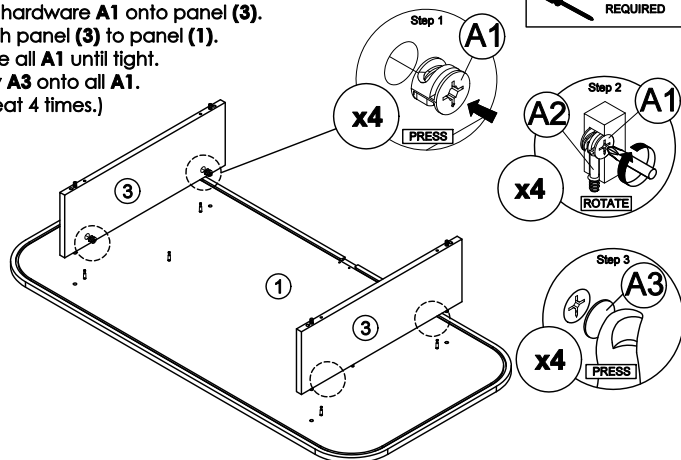


STEP 4

- Insert hardware **A1** onto panel (4).
- Attach panel (4) to panel (1).
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
- (Repeat 2 times.)

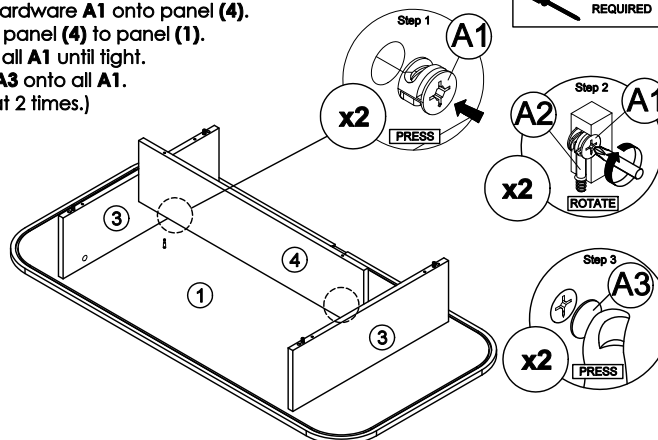


STEP 5

- Connect panel (2) to panel (3) and (4) by using hardware **C** and **D**.
- (Repeat 6 times.)

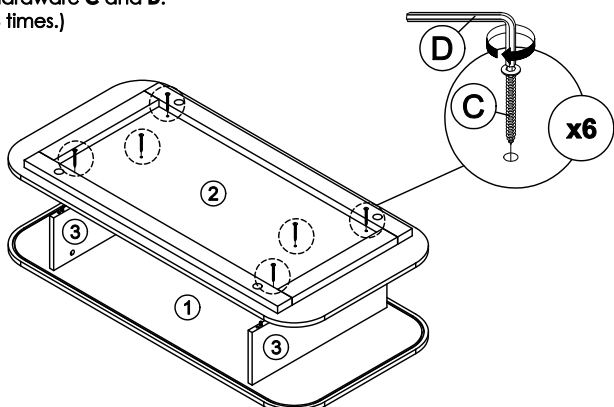


STEP 6

- Assemble hardware **I** into bottom of panel (2).
- (Repeat 4 times.)

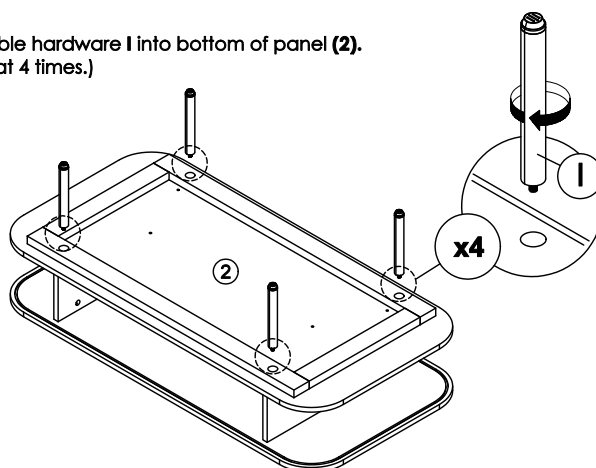


CODING
- 134145

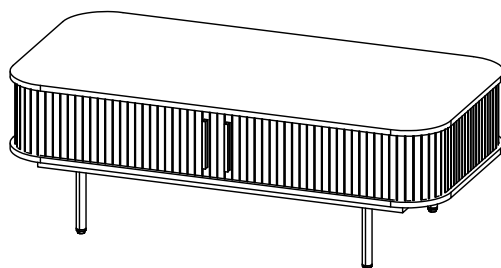

ISO 9001:2015
Reg. No. 00035-1-2017-1-Q008


STEP 7

- Fix hardware **H** onto panel **(5)** by using hardware **G**.
(Repeat 2 times for each hardware.)

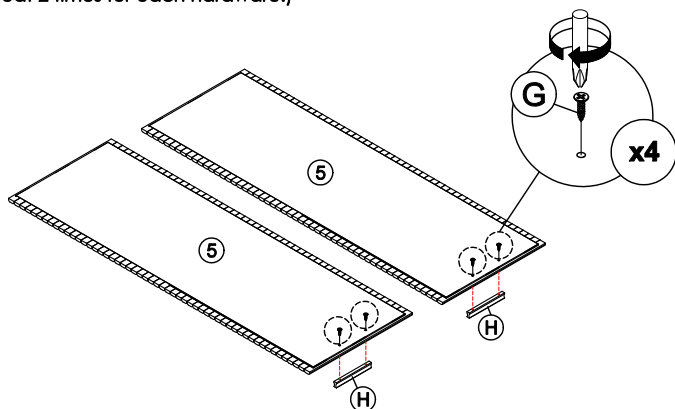


STEP 8

- Insert panel **(5)** into the panel grooves **(1)** and **(2)**.
(Repeat 1 times.)

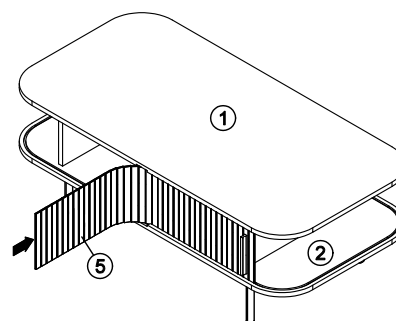

STEP 9

- Insert panel **(5)** into the panel grooves **(1)** and **(2)**.
(Repeat 1 times.)

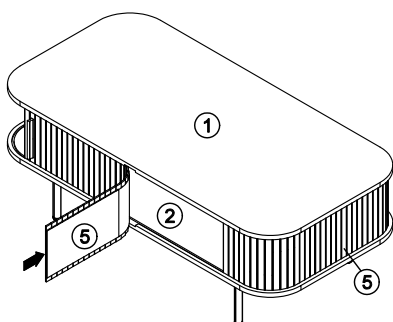

STEP 10

- Assemble the hardware **F** onto panel **(1)** and **(2)** by using hardware **E**.
(Repeat 2 times for each hardware.)

