


CODING
-144071

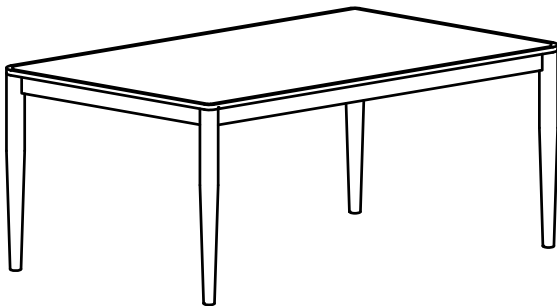

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

Read the instruction carefully. Remove all the wrapping material , staples and straps from the carton . Refer to the hardware and furniture part list for guidance . Be sure that you have all the parts before you start assembling . Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubberma to prevent from scratches .


Caution
KEEP ALL PARTS OUT OF REACH OF CHILDREN.

ITEM	HARDWARE LIST	QTY
Ⓐ	JCBC SCREW M8 X 60MM 	8
Ⓑ	SPRING WASHER M8 	8
Ⓒ	FLAT WASHER M8 	8
Ⓓ	ALLEN KEY M8 	1

ITEM	PART LIST	QTY
①	TOP 	1
②	LEG 	4

CODING

-144071

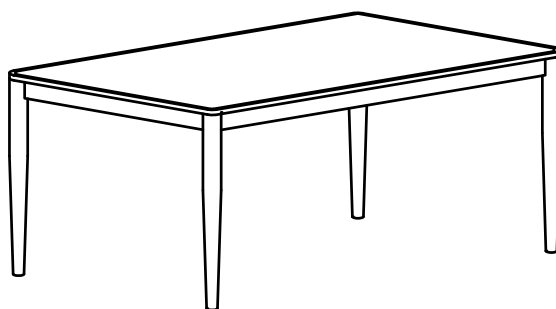

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

1

