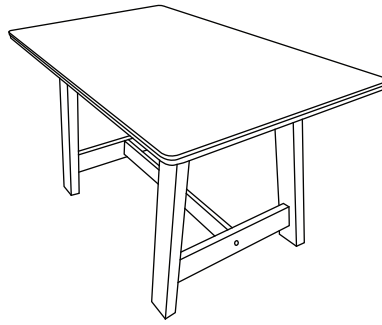


CODING

- 144115 & 146168


ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.


CAUTION

KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

ITEM	PHOTO	HAREWARE NAME	QTY
(A)		JCBC SCREW M8 x 60MM	2
(B)		JCBC SCREW M8 x 90MM	8
(C)		SPRING WASHER	10
(D)		FLAT WASHER	8
(E)		WOOD SCREW M4 X 38MM	4
(F)		WOOD DOWEL	4
(G)		WOOD BUTTON	2
(H)		ALLEN KEY	1

ITEM	PHOTO	PARTS NAME	QTY
(1)		Table Top	1
(2)		Leg (L)	2
(3)		Leg (R)	2
(4)		Leg Support	2
(5)		Leg Middle Support	1

CODING
- 144115 & 146168

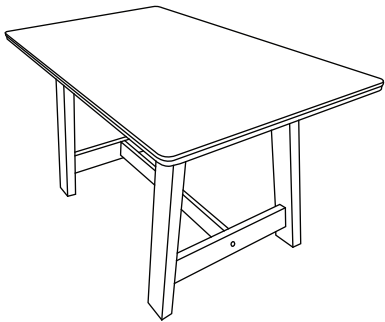

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

