


CODING
-145137

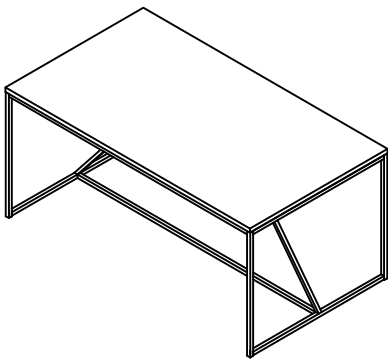


ISO 9001: 2015
Reg. No. 000435-1-MY-1-QMS


Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

ITEM	PHOTO	HARDWARE NAME	QTY
Ⓐ		Allen Key M4	1
Ⓑ		JCBC Screw M6x50 Spring+Flat Washer	6
Ⓒ		JCBC Screw M6x20 Spring+Flat Washer	8


ITEM	PHOTO	PART NAME	QTY
①		Top Panel	1
②		Metal Side Leg	2
③		Metal Centre Support	2
④		Metal Support Leg	1

CODING
-145137

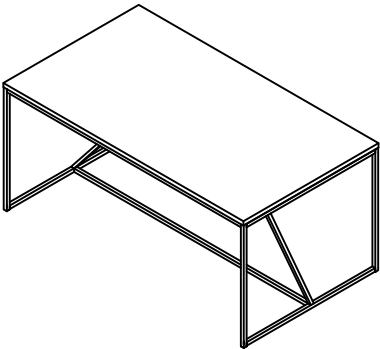


ISO 9001: 2015
Reg. No. 000435-1-MY-1-QMS


1

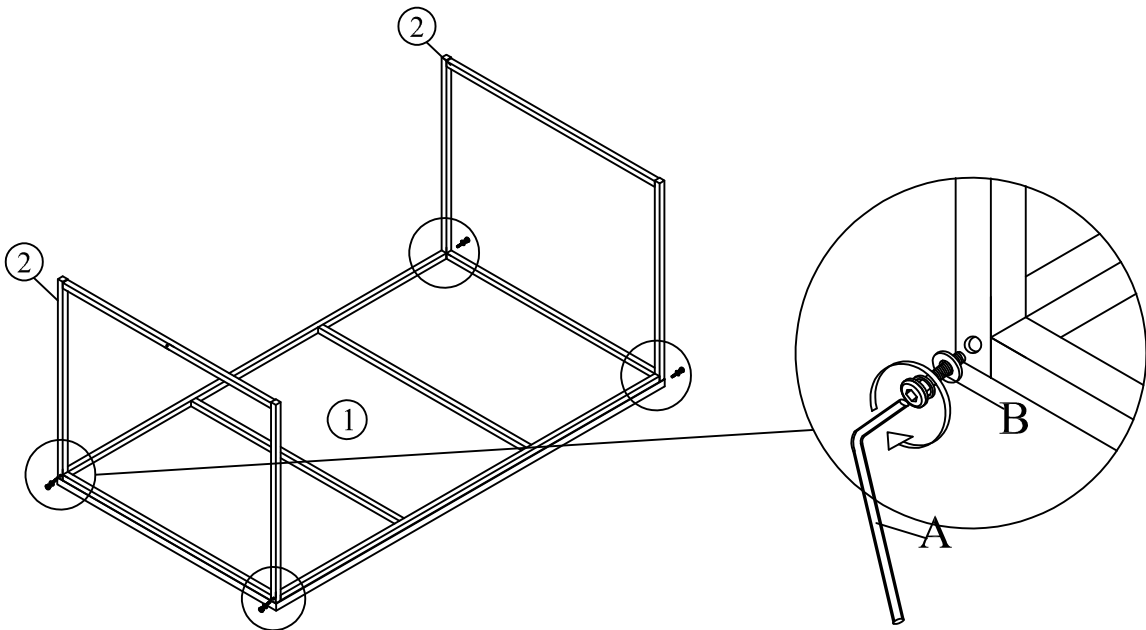

2

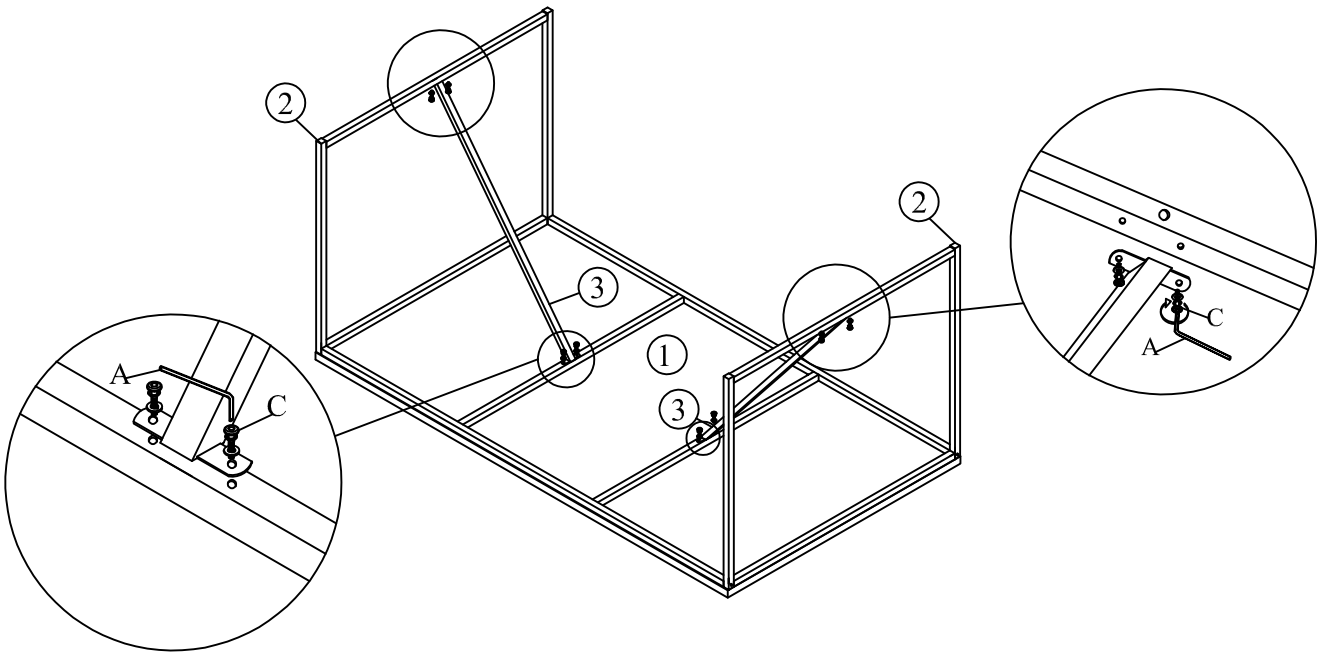


CODING
-145137

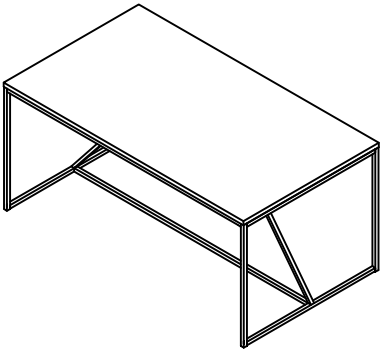

ISO 9001: 2015
Reg. No. 000435-1-MY-1-QMS

3

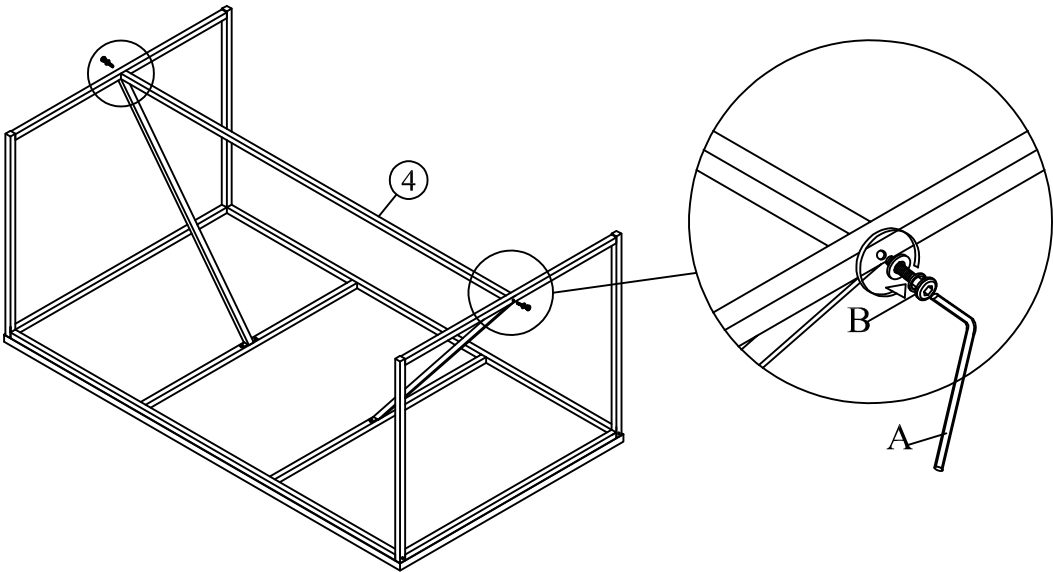

4

