

# COUPER

CODING

-145143



ISO 9001:2015  
Reg. No. 006051-MY-1-QMS

Read the instruction carefully. Remove all the wrapping material, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure that you have all the part before you start assembling. Place all the wooden furniture part on a clean and flat soft surface, such carpet or rubbermat to prevent from scratches.

CAUTION  
KEEP ALL THE PARTS OUT OF REACH OF CHILDREN

| ITEM | PHOTO | HARDWARE NAME             | QTY             |
|------|-------|---------------------------|-----------------|
| (A)  |       | JCBB BOLT M8 X 70MM (BLK) | 4<br>(+1 extra) |
| (B)  |       | ALLEN KEY M5              | 1               |
| (C)  |       | JCBC BOLT M6 X50MM (BLK)  | 4<br>(+1 extra) |
| (D)  |       | SPRING WASHER 5/16" (BLK) | 4<br>(+1 extra) |
| (E)  |       | ALLEN KEY M4 (BALL SHAPE) | 1               |

| ITEM | PHOTO | PART NAME | QTY |
|------|-------|-----------|-----|
| (1)  |       | TABLE TOP | 1   |
| (2)  |       | TABLE LEG | 2   |
| (3)  |       | TABLE LEG | 2   |
| (4)  |       | STRETCHER | 1   |

# COUPER





ASSEMBLY GUIDE

CODING

-145143



ISO 9001:2015  
Reg. No. 000035-1-MET-1-QMS

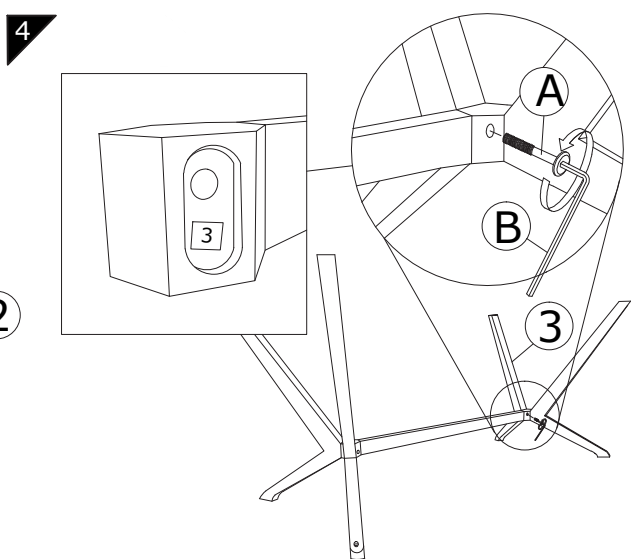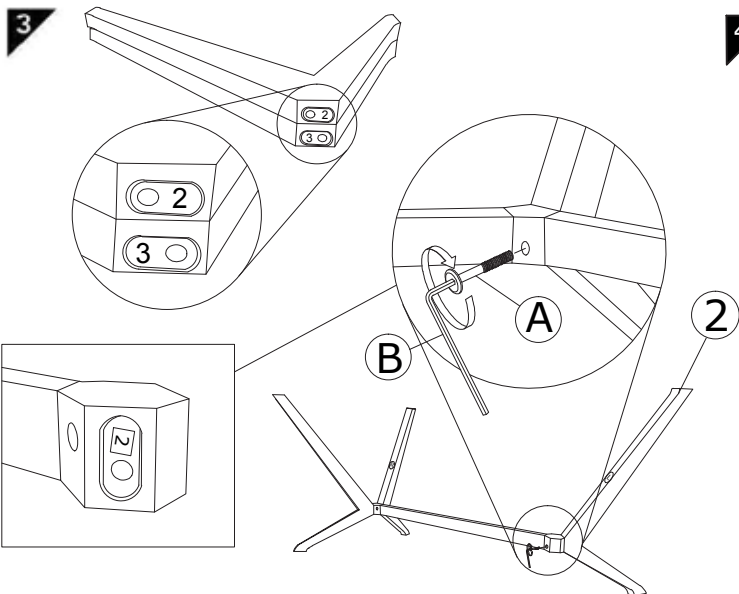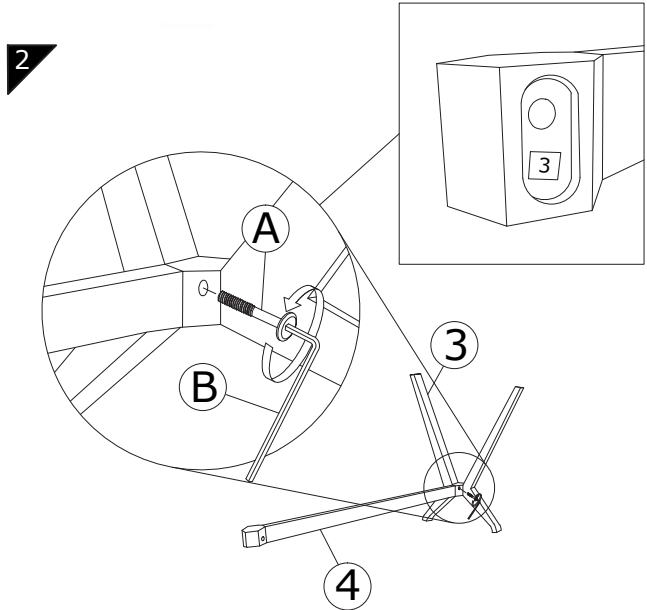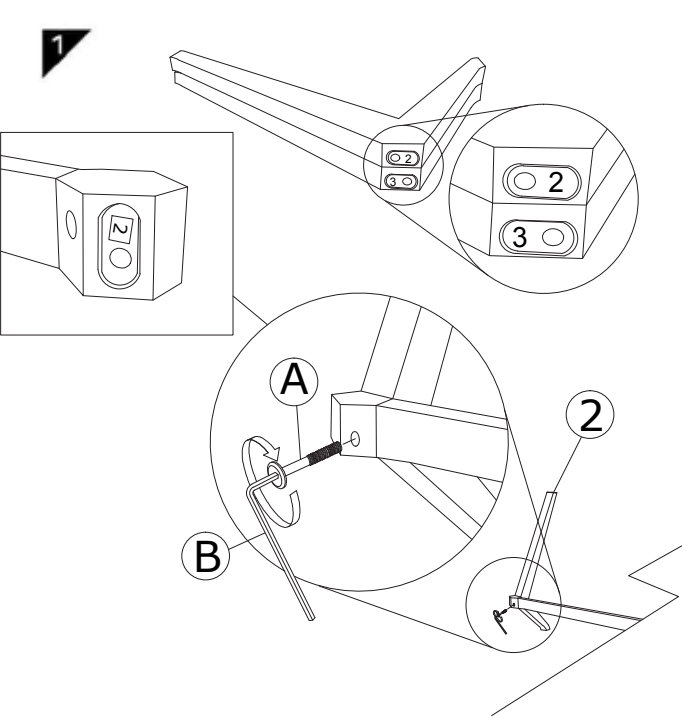

# COUPER

ASSEMBLY GUIDE

CODING

-145143



ISO 9001:2015  
Reg. No. 0004351-MY-1-QMS

5

