


**CODING**  
- 145190

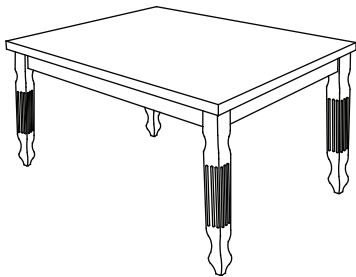


ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS


Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

**CAUTION**  
KEEP ALL THE PARTS OUT OF CHILDREN’S REACH.

| ITEM | PHOTO                                                                               | HAREWARE NAME           | QTY |
|------|-------------------------------------------------------------------------------------|-------------------------|-----|
| (A)  |  | JCBC SCREW<br>M8 x 60MM | 8   |
| (B)  |  | SPRING WASHER           | 8   |
| (C)  |  | FLAT WASHER             | 8   |
| (D)  |  | PVC NAIL                | 1   |


| ITEM | PHOTO                                                                                | PARTS NAME | QTY |
|------|--------------------------------------------------------------------------------------|------------|-----|
| (1)  |  | Table Top  | 1   |
| (2)  |  | Leg        | 4   |

CODING  
- 145190

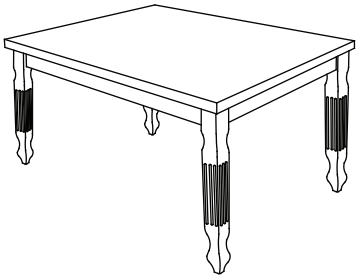

ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS

1

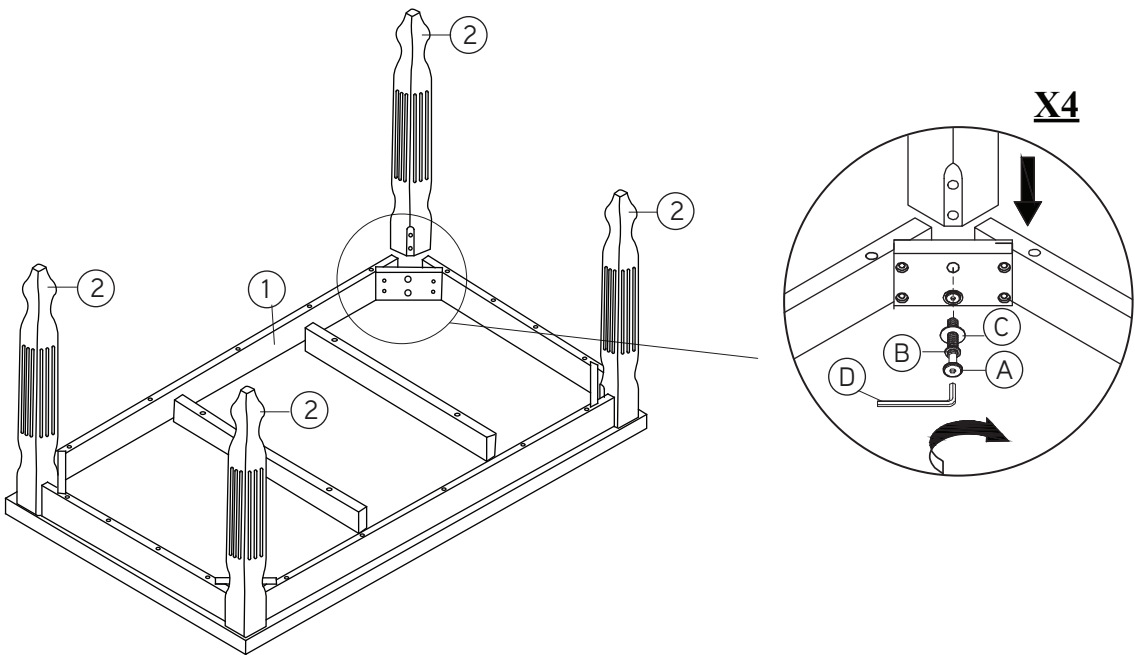

2

