


CODING
-146137

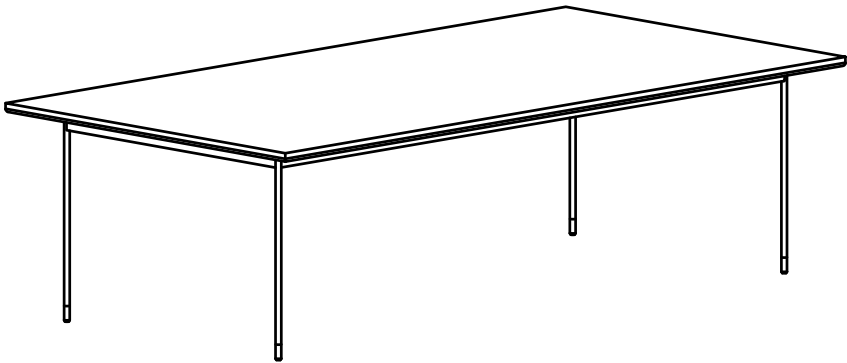

ISO 9001:2015
Reg. No. 000435-I-MY-I-QMS

Read the instruction carefully. Remove all the wrapping material , staples and straps from the carton . Refer to the hardware and furniture part list for guidance . Be sure that you have all the parts before you start assembling . Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches .


Caution
KEEP ALL PARTS OUT OF REACH OF CHILDREN.

ITEM	HARDWARE LIST	QTY
Ⓐ	JCBC SCREW M8 X 20MM 	8
Ⓑ	JCBC SCREW M6 X 15MM 	6
Ⓒ	SPRING WASHER 5/16" 	14
Ⓓ	FLAT WASHER 5/16" 	14
Ⓔ	ALLEN KEY 4MM 	1
Ⓕ	ALLEN KEY 5MM 	1

ITEM	PART LIST	QTY
①	TABLE TOP 	1
②	LEG (L&R) 	1

CODING

-146137

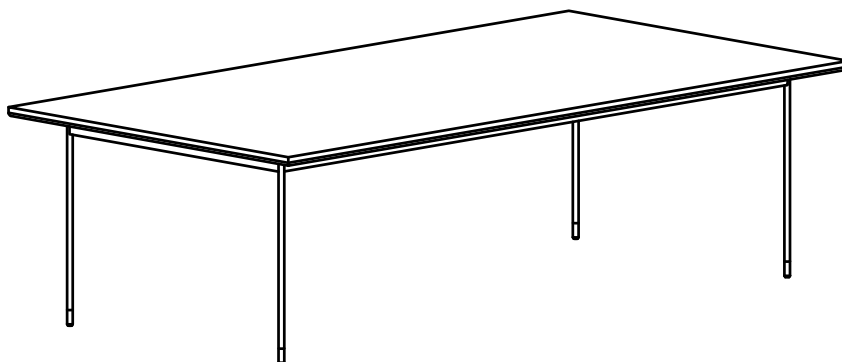

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

1

