


CODING
- 151061
- 151062

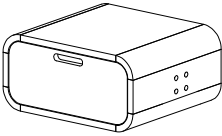
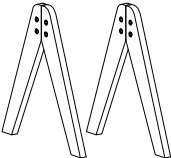


ISO 9001 : 2015
Reg. 000435-1-MY-1-QMS



Read the instruction carefully . Remove all the wrapping material staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure you have all part before you start assembling. Place all the wooden furniture part on a clean and flat surface, such as carpet or rubbermat to prevent scratches.

ITEM	PHOTO	HARDWARE NAME	QTY
A		JCBC M6 x 20 mm	8
B		WOOD BUTTON	8
C		ALLEN KEY M4	1

ITEM	PHOTO	PARTS NAME	QTY
1		BOX	1
2		LEG	2

CODING
- 151061
- 151062



ISO 9001 : 2015
Reg. 000435-1-MY-1-QMS

1	2
3	4 COMPLETED ASSEMBLY