

CODING
- 152010




ISO 9001:2015
Reg. No. 00905-1-MIT-1-QMS

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.


CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

HARDWARE			
A	MINI FIX	A1  A2  A3 	4 SETS
B	M8 X 30MM WOOD DOWEL		8 PCS
C	M6 X 50MM CSK CAP WOOD SCREW		4 PCS
D	ALLEN KEY M4		1 PC
E	JCBC SCREW M6 X 30MM		4 PCS
F	JCBC SCREW M6 X 40MM		8 PCS
G	M3 X 12MM C.B SCREW		2 PCS
H	M3.5 X 16MM C.B SCREW		24 PCS
I	M4 X 38MM C.B SCREW		16 PCS
J	5/8 NAIL		30 PCS
K	MODERN HANDLE L (100MM)		1 PC
L	14" DRAWER SLIDE	 L1 (L/R)  L2 (L/R)	2 SETS

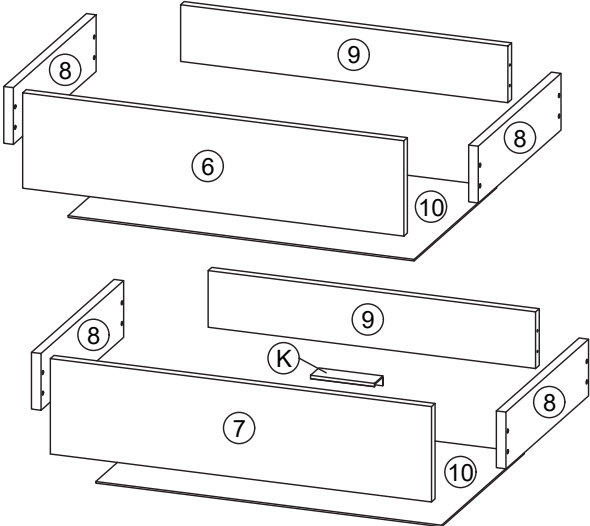

PART LIST		QTY
1	TOP PANEL	1 PC
2	BOTTOM PANEL	1 PC
3	SIDE PANEL (L)	1 PC
4	SIDE PANEL (R)	1 PC
5	BACK PANEL	1 PC
6	DRAWER FRONT (UP)	1 PC
7	DRAWER FRONT (DOWN)	1 PC
8	DRAWER SIDE	4 PCS
9	DRAWER BACK	2 PCS
10	DRAWER BOTTOM	2 PCS
11	METAL SIDE	2 PCS
12	METAL SUPPORT	4 PCS

SELF-PREPARED TOOLS: Tools below are NOT included in package.	
 SCREWDRIVER	 HAMMER

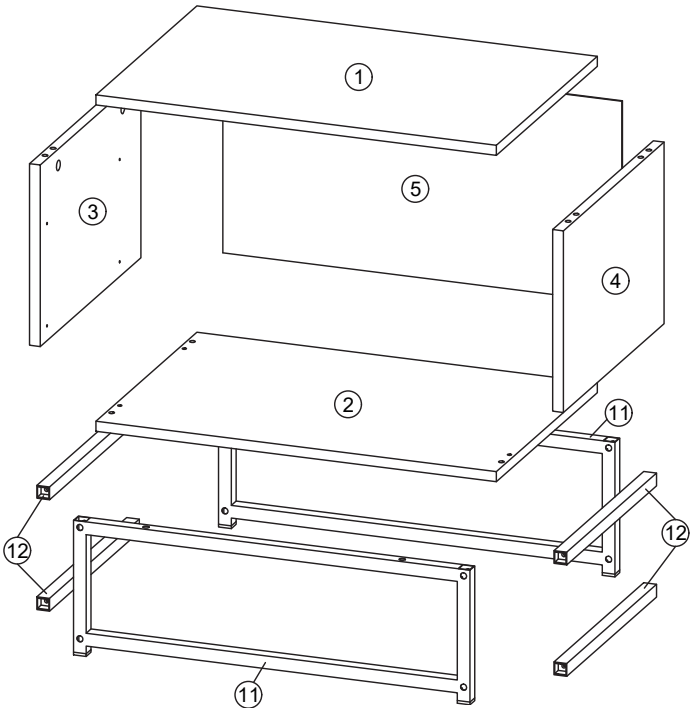


CODING
- 152010



ISO 9001:2015
Reg. No. 00505-1-MT-1-QMS

STEP 1


- Insert hardware **A1** onto panel (3) and (4).
(Repeat 4 times.)
- Insert hardware **A2** onto panel (1).
(Repeat 4 times.)
- Insert hardware **B** onto panel (3) and (4).
(Repeat 8 times.)

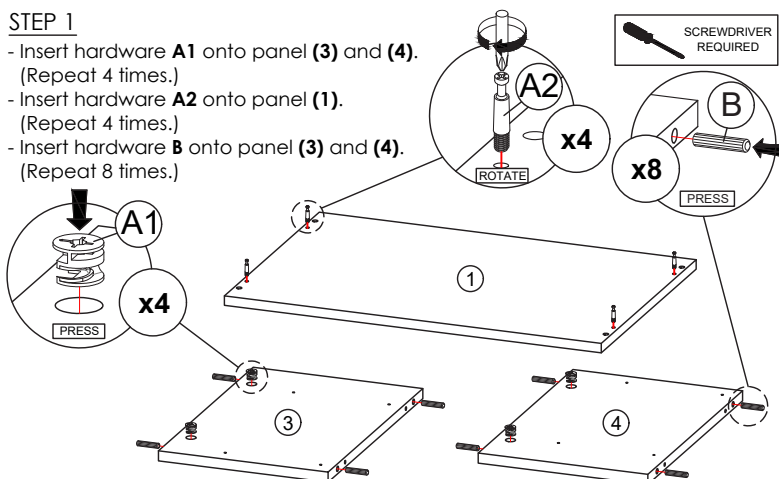

* Ensure the arrows on hardware **A1** point towards mounting positions.

STEP 3


- Attach panel (3) and (4) to panel (1).
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 4 times.)

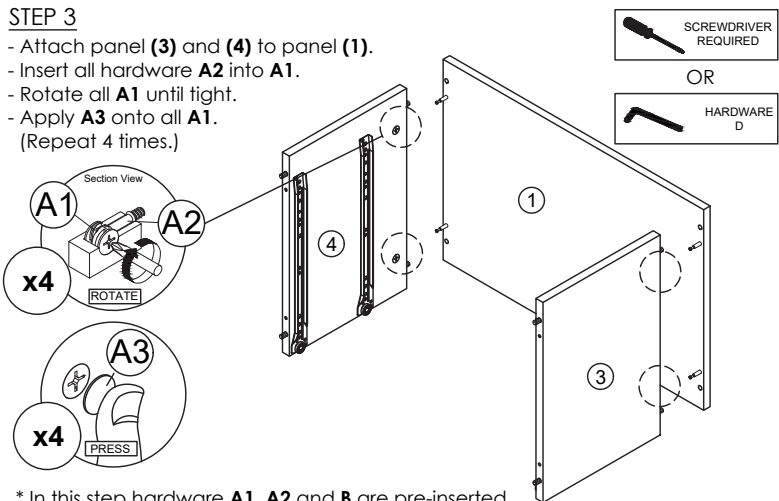

* In this step hardware **A1**, **A2** and **B** are pre-inserted.


STEP 5

- Assemble panel (5) to entire body with hardware **J**.
(Repeat 14 times.)

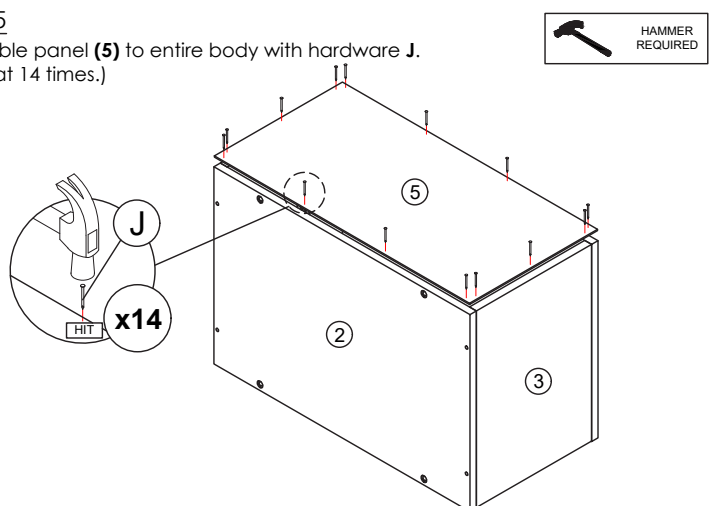

STEP 2

- Fix hardware **L1 (L/R)** into panel (3) and (4) with hardware **H**.
(Repeat 3 times for each hardware.)

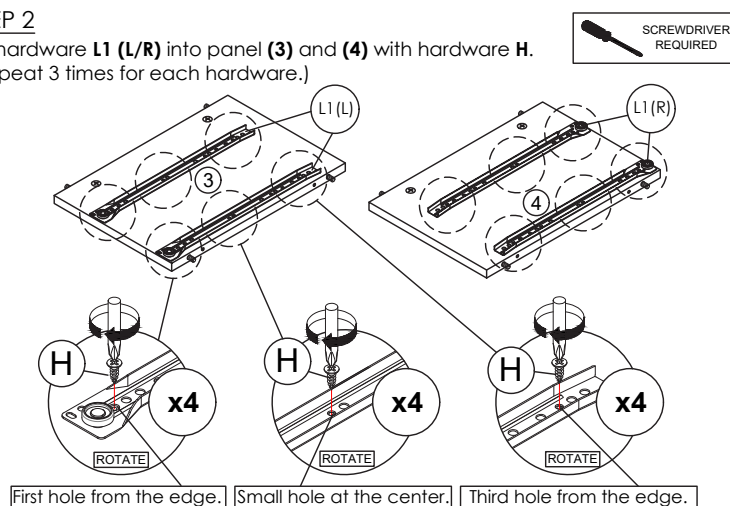


First hole from the edge.

Small hole at the center.

Third hole from the edge.

STEP 4


- Connect panel (2) to panel (3) and (4)
by using hardware **C** and **D**.
(Repeat 4 times.)

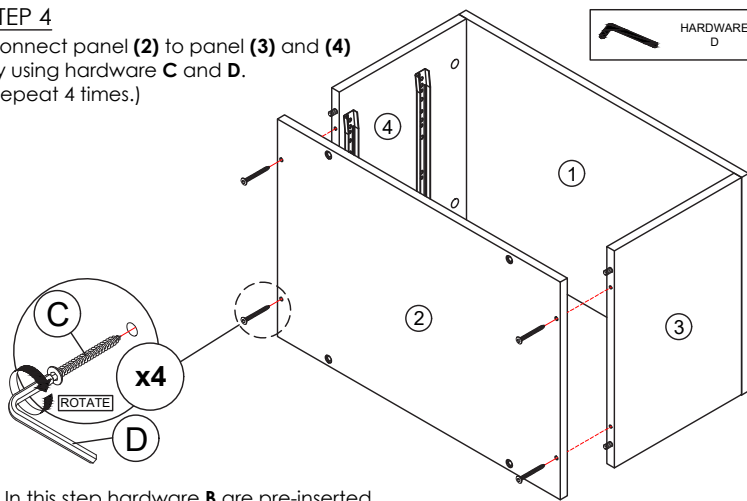

* In this step hardware **B** are pre-inserted.

STEP 6


- Connect Metal Side (11) to Metal Support (12)
by using hardware **D** and **F**.
(Repeat 8 times.)

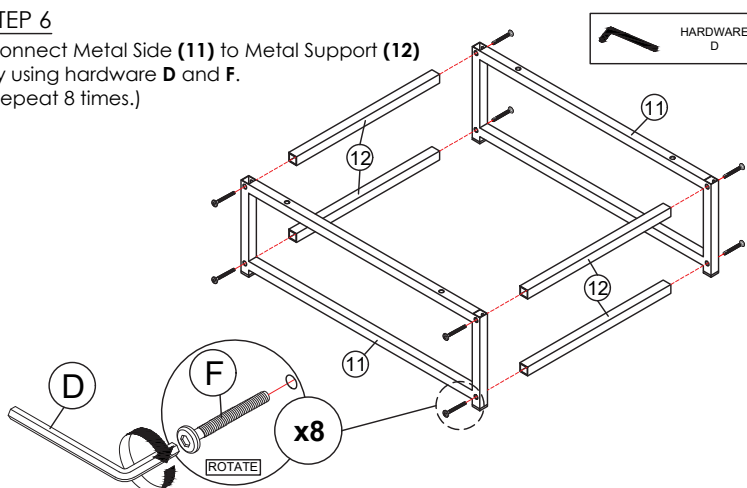


A dark wood chest of drawers with two drawers and a black metal frame. The drawers have a horizontal grain pattern. The frame is made of black metal bars.

ISO 9001:2015
 Ref. No. QMS-1-INT-1-0001


Connect Metal Side **(11)** to panel **(2)** by using hardware **D** and **E**.
(Repeat 4 times.)

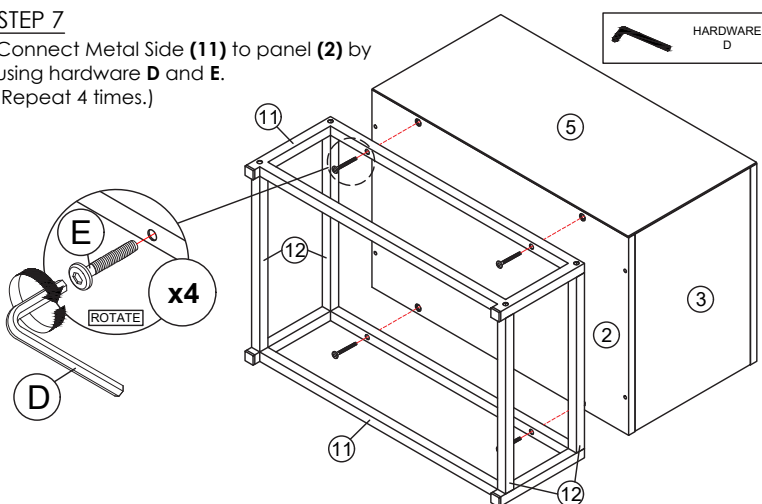


Assemble panel **(10)** to entire body with hardware **J**.
(Repeat 16 times.)

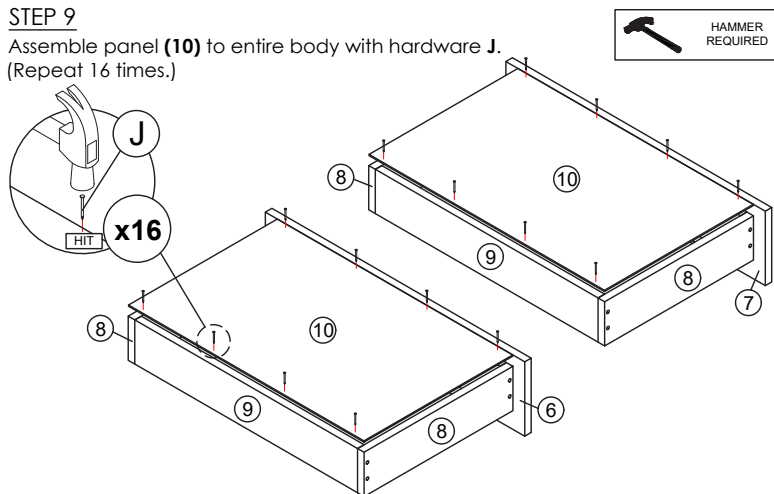


Fix hardware **K** onto panel **(7)** by using hardware **G**.
(Repeat 2 times.)

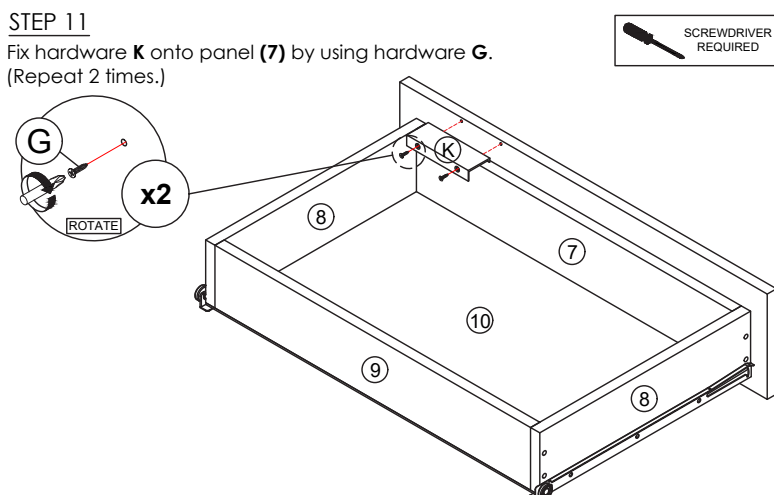

Assemble panel **(8)** with panel **(6)** or **(7)** and **(9)** by using hardware **I**.
(Repeat 16 times.)

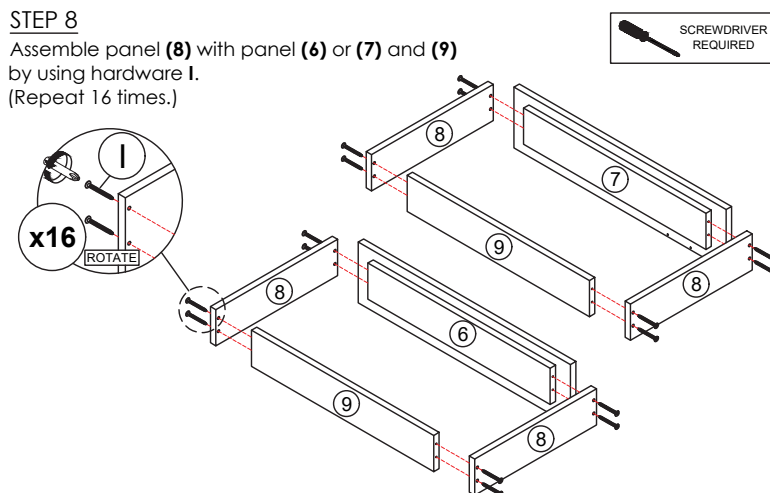

Assemble hardware **L2 (L/R)** to panel **(10)** by using hardware **H**. (Repeat 3 times for each hardware.)

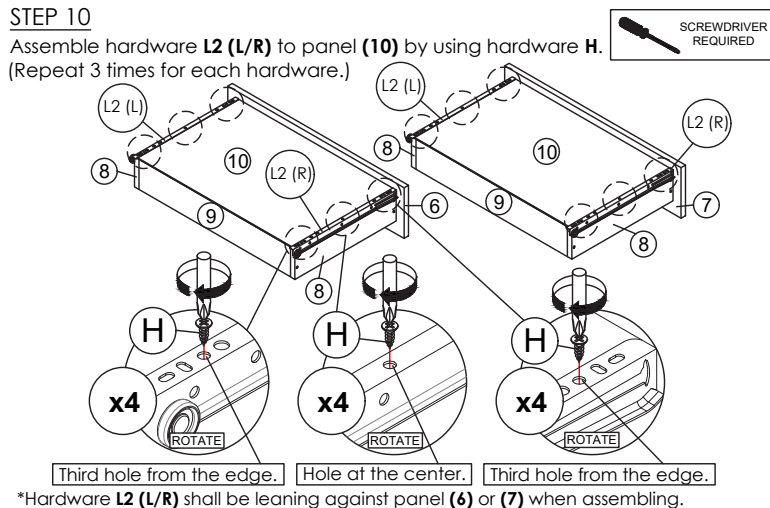

Put all the drawer in place along the drawer slides.

