

CODING
-231262



ISO 9001:2015
Reg. No. 000435-I-MY-I-QMS

Read the instruction carefully. Remove all the wrapping material, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure that you have all the parts before you start assembling. Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches.

CAUTION
KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

ITEM	PHOTO	HARDWARE NAME	QTY
A		JCBC BOLT M6 X 90MM (RB)	2 (+1 extra)
B		JCBC BOLT M6 X 70MM (RB)	2 (+1 extra)
C		JCBC BOLT M6 X 50MM (RB)	4 (+1 extra)
D		JCBC BOLT M6 X 30MM (RB)	2 (+1 extra)
E		SPRING WASHER 5/16" (RB)	10 (+2 extra)
F		FLAT WASHER 6 X 13MM (RB)	4 (+1 extra)
G		SCREW PIN 15 x 15MM	4 (+1 extra)
H		WOOD DOWEL M10 x 30MM	8 (+2 extra)
I		ALLEN KEY (BALL SHAPE)	1
J		WOOD BUTTON (BIG)	2 (+1 extra)


ITEM	PHOTO	PART NAME	QTY
①		CHAIR BACK	1
②		ARM LEG (L & R)	2
③		FRONT RAIL	1
④		CHAIR FRAME	1
⑤		CUSHION BACK	1
⑥		CUSHION SEAT	1

CODING
-231262




ISO 9001:2015
Reg. No. 000435-1-MY-1-Q&S


1

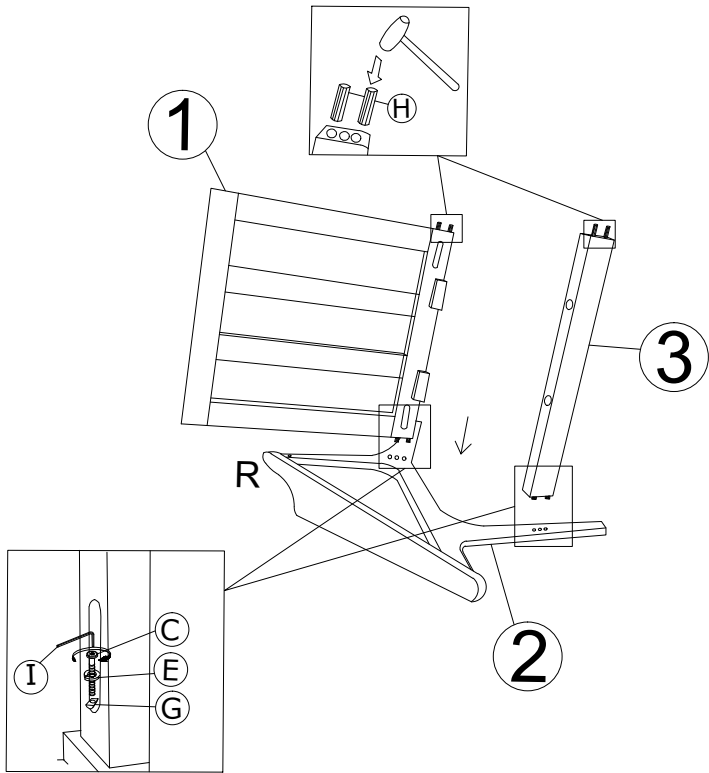

2

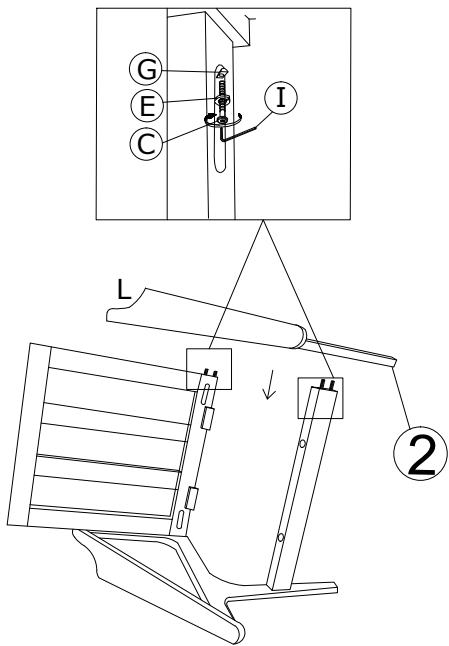

3

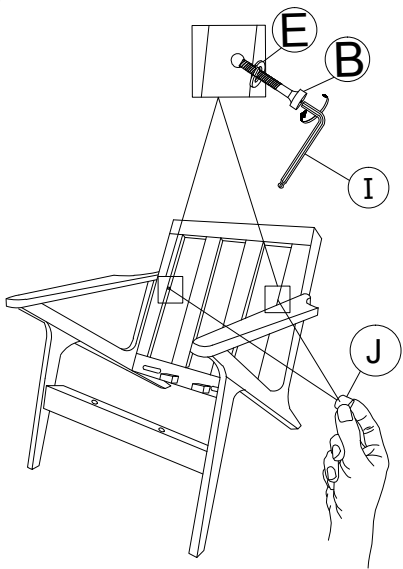

4

