

CODING

- 232177
- 232178






ISO 9001:2015
Reg. No. 000455-I-MTY-I-QMB

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION

KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

ITEM	PHOTO	HAREWARE NAME	QTY
1		JCBC SCREW M6 x 60MM	6 PCS
2		SPRING WASHER 1/4"	6 PCS
3		ALLEN KEY M4 (BALL SHAPE)	1 PC
4		WOOD DOWEL Ø10 x 40MM	8 PCS
5		CSK SCREW #8 x 32MM	8 PCS

ITEM	PHOTO	PARTS NAME	QTY
A		SOFA ARM (LEFT)	1 PC
B		SOFA ARM (RIGHT)	1 PC
C		BACK FRAME	1 PC
D		SEAT FRAME	1 PC
E		FRONT STRETCHER	1 PC
F		BACK CUSHION	2 PCS
G		SEAT CUSHION	2 PCS

ATIVA

ASSEMBLY GUIDE

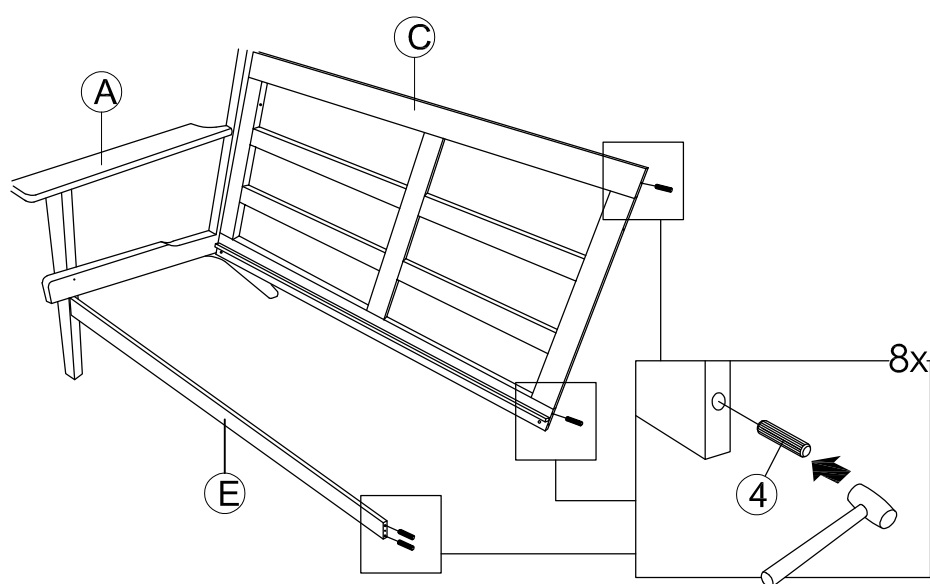
CODING

- 232177
- 232178

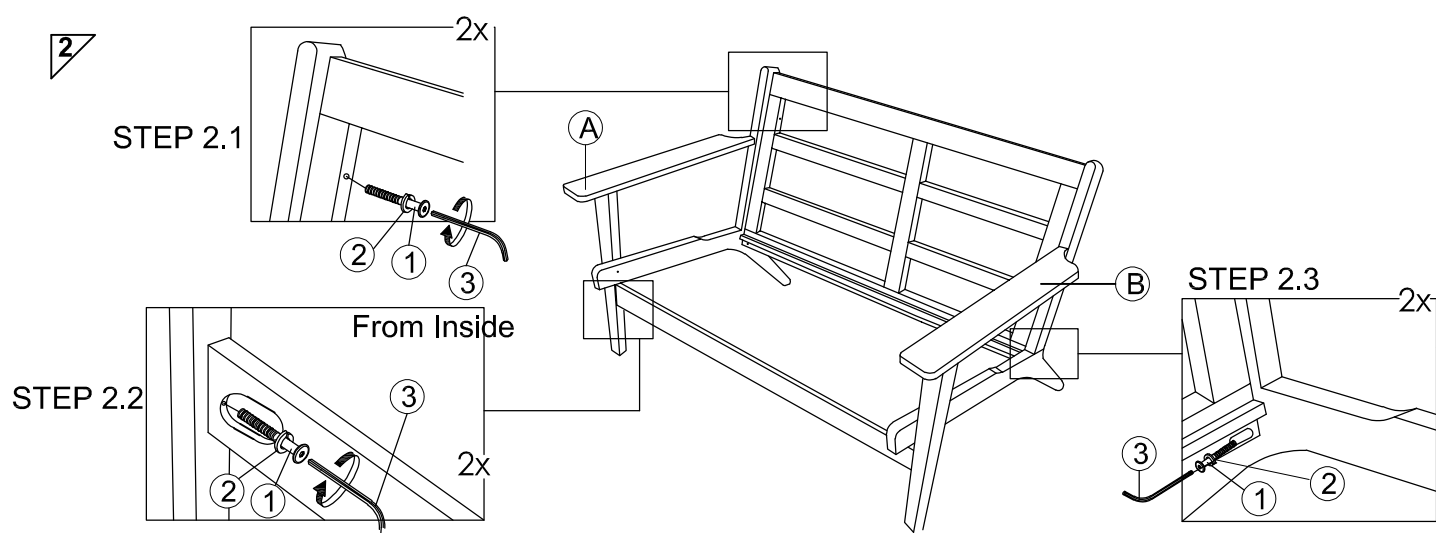


ISO 9001:2015
Reg. No. 000455-I-ATV-I-QMS

1



2



ATIVA

ASSEMBLY GUIDE

CODING
- 232177
- 232178



ISO 9001:2015
Reg. No. 900435-1-017-1-0245

