

Auris

WARRANTY & ASSEMBLY GUIDE

CODING

- 233166



ISO 9001:2015
Reg. No. 0004351-MY-1-QMS

Read the instruction carefully. Remove all the wrapping material, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure that you have all the parts before you start assembling. Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches.

CAUTION

KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

ITEM	PHOTO	HARDWARE NAME	QTY
(A)		WOODEN LEG DIA 65/DIA35X183MM	8 PCS
(B)		SOCKET HEAD SCREW M6, 32MM	24 PCS
(C)		ALLEN KEY	1 PC
(D)		CONNECTION JOINT	2 PCS

ITEM	PHOTO	PARTS NAME	QTY
(1)		SOFA	1 PC


CODING

- 233166



ISO 9001:2015
Reg. No. 000455-1-MY-1-QM5

1

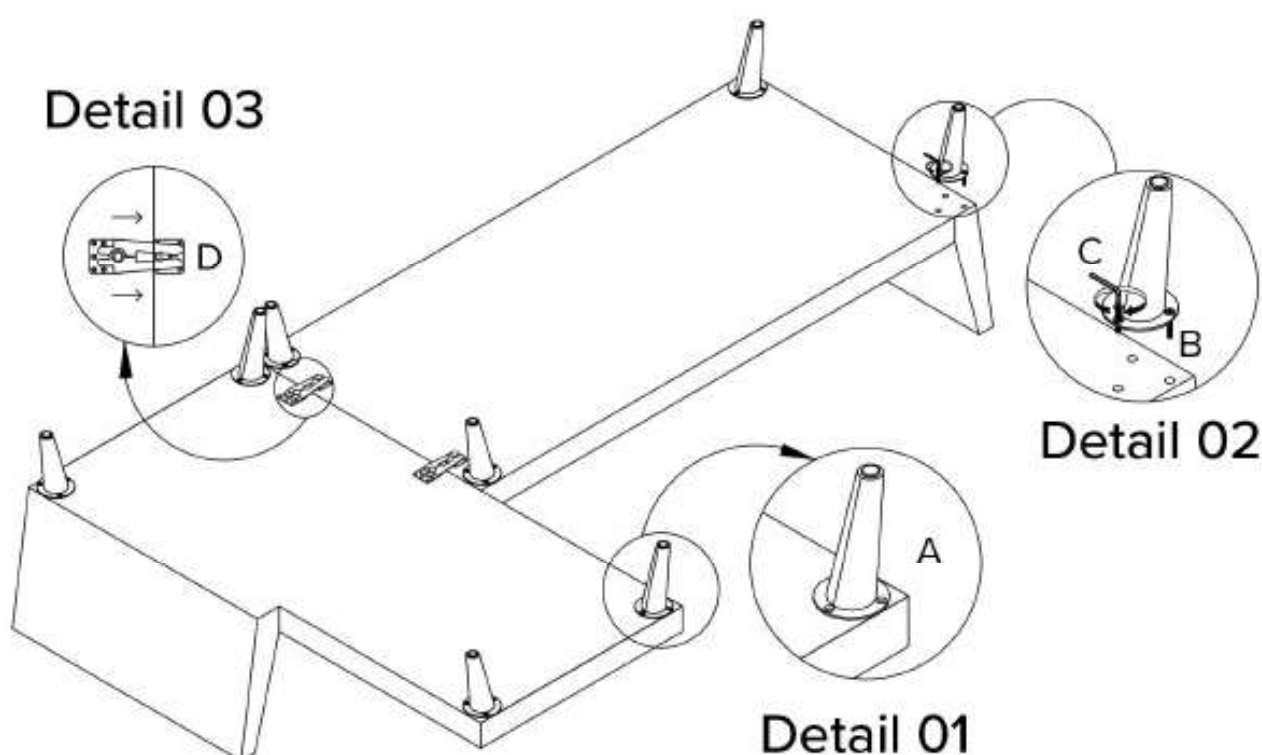

STEP 1: Align a leg (A) with the holes at the bottom of the sofa - see detail 01

STEP 2: Use socket head screws (B) and Allen key (C) to attach the leg - see detail 02

STEP 3: Attach the remaining legs by following the steps 1-2

STEP 4: Use the connection joints (D) to attach the sofa modules - see detail 03