

## CODING

- 233209
- 233210










ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

## CAUTION

KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

| ITEM | PHOTO                                                                               | HAREWARE NAME       | QTY |
|------|-------------------------------------------------------------------------------------|---------------------|-----|
| (A)  |  | Leg                 | 4   |
| (B)  |  | M8 x 50mm JCBC Bolt | 19  |
| (C)  |  | Spring washer       | 19  |
| (D)  |  | Flat washer         | 15  |
| (E)  |  | M 5 Allen key       | 1   |

| ITEM | PHOTO                                                                                | PARTS NAME        | QTY |
|------|--------------------------------------------------------------------------------------|-------------------|-----|
| (1)  |  | Back rest         | 1   |
| (2)  |  | Seat frame        | 1   |
| (3)  |  | Arm - R           | 1   |
| (4)  |  | Arm - L           | 1   |
| (5)  |  | Back rail support | 1   |
| (6)  |  | Back cushion      | 3   |
| (7)  |  | Seat cushion      | 3   |


## CODING

- 233209
- 233210




ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS

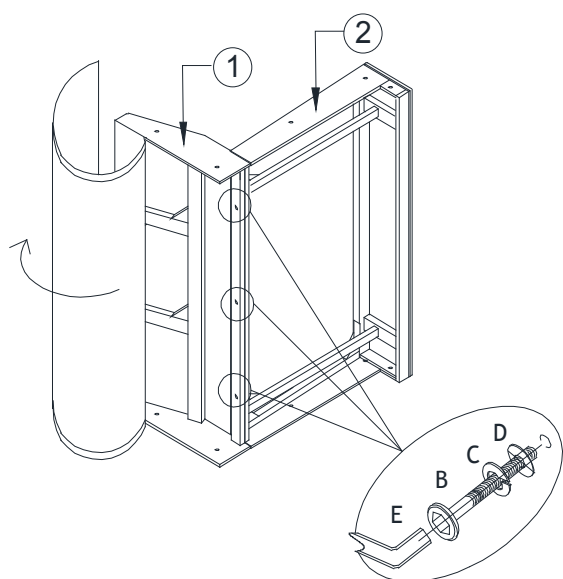
1



2

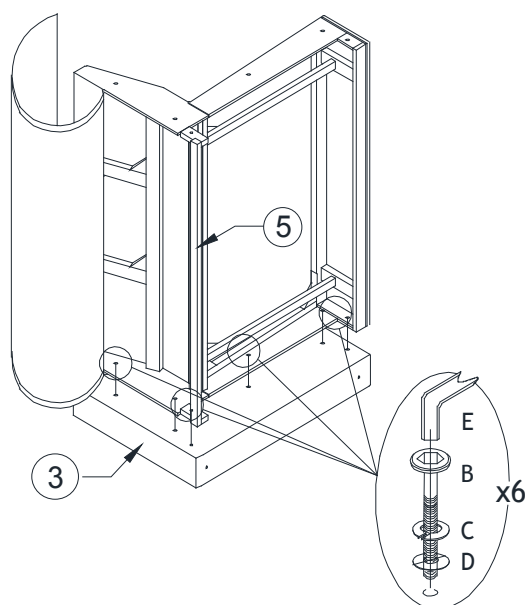

3

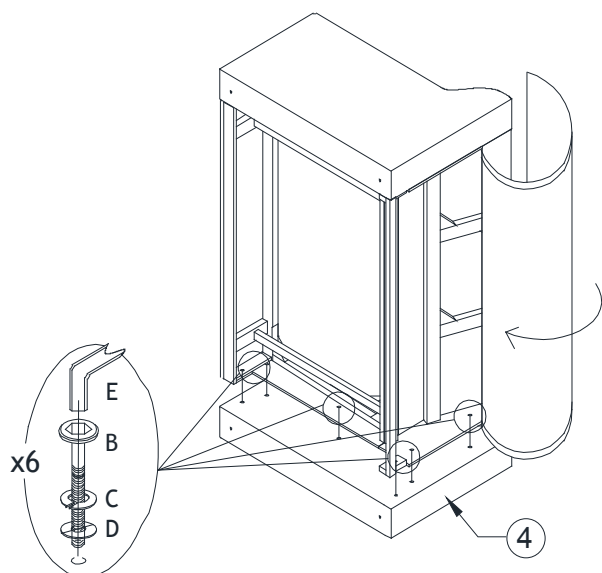

4

