

CODING

-24092407
-24092408
-24092227




ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

Read the instruction carefully. Remove all the wrapping material. Staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure that you have all the parts before you start assembling. Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches

CAUTION

KEEP ALL THE PARTS OUT REACH OF CHILDREN

ITEM	HARDWARE LIST	QTY	SPARE QTY
①	JCBC SCREW M6 x 60MM 	4	
②	SPRING WASHER 1/4" 	4	
③	PAN HEAD WOOD SCREW M5 X 32mm 	4	
④	AJUSTABLE SCREW 	4	
⑤	M4 ALLEN KEY (BALL SHAPE) LONG 	1	

ITEM	PART LIST	SPARE QTY
Ⓐ	CHAIR BACK 	1
Ⓑ	SIDE LEG(L & R) 	2
Ⓒ	STRETCHERS 	2


CODING

-24092407
-24092408
-24092227




ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

1

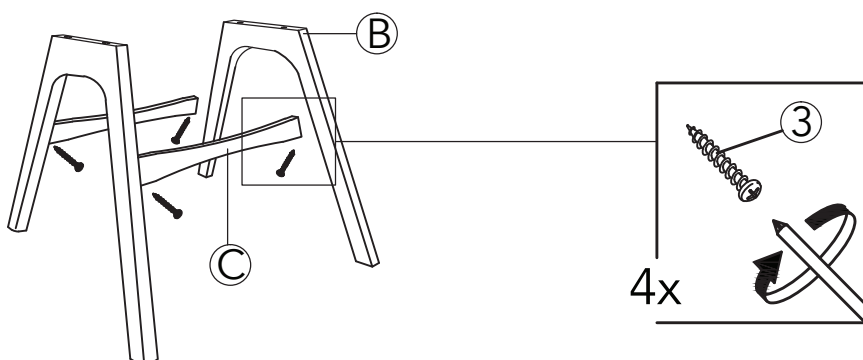

2

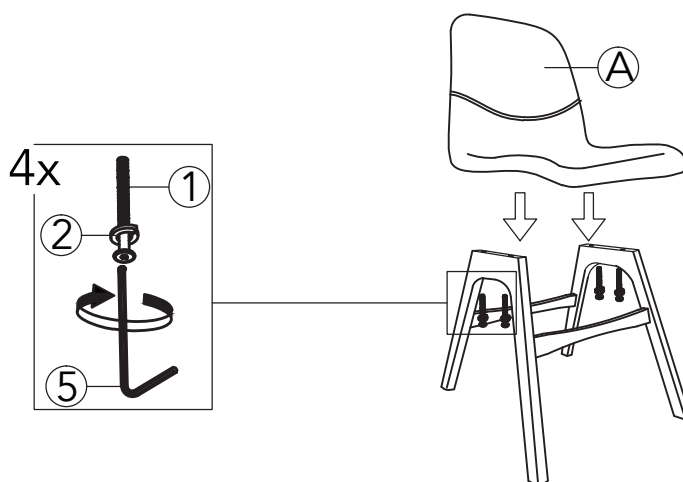

3

