

CODING
-24092406



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

Read the instruction carefully. Remove all the wrapping material. Staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure that you have all the parts before you start assembling. Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches

CAUTION
KEEP ALL THE PARTS OUT REACH OF CHILDREN

ITEM	HARDWARE LIST	QTY
1	SPECIAL JCBB M8 x 40MM 	4 PCS
2	SPRING WASHER 5/16" 	4 PCS
3	ALLEN KEY M5 	1 PC


ITEM	PART LIST	QTY
A	CHAIR LEG	1 PC
B	CUSHION SEAT	1 PC

CODING
-24092406



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

1

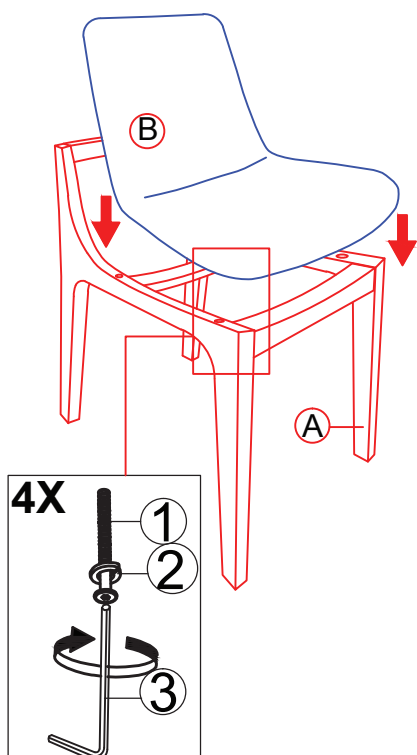

2

