

## CODING

-24092659/8530-825  
-24092662/8530-825  
-24092657/83500-825  
-24092658/83400-825  
-24092660/86406-825  
-24092661/86202-825




ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS

Read the instruction carefully. Remove all the wrapping material. Staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure that you have all the parts before you start assembling. Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches

**CAUTION**  
**KEEP ALL THE PARTS OUT REACH OF CHILDREN**

| HARDWARE LIST |                    |                                                                                     |     |           |
|---------------|--------------------|-------------------------------------------------------------------------------------|-----|-----------|
| ITEM          | DESCRIPTION        |                                                                                     | QTY | Spare QTY |
| 1             | FH SCREW #5 X 32MM |  | 4   | 1         |
| 2             | PVC STOPPER        |  | 4   | 1         |
| 3             | SCREW 6 X 5/8      |  | 4   | 1         |
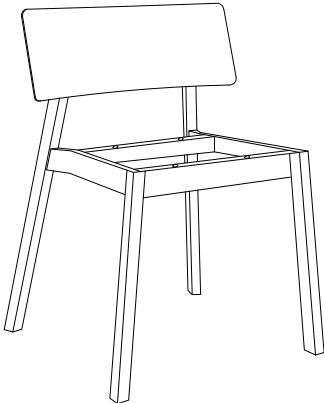
| PART LIST |                                                                                                      |     |
|-----------|------------------------------------------------------------------------------------------------------|-----|
| ITEM      | DESCRIPTION                                                                                          | QTY |
| A         | CHAIR SET UP<br> | 1   |
| B         | CHAIR SEAT<br>  | 1   |


## CODING

-24092659/8530-825  
-24092662/8530-825  
-24092657/83500-825  
-24092658/83400-825  
-24092660/86406-825  
-24092661/86202-825




ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS

1

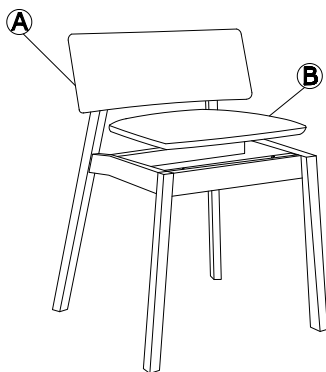

2

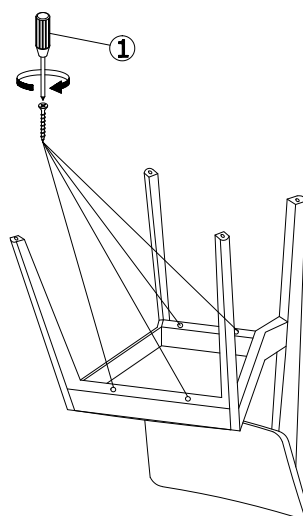

3

