

CODING

- 241030
- 241029
- 241032
- 241031






ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

Read the instruction carefully. Remove all the wrapping material. Staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure that you have all the parts before you start assembling. Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches

CAUTION
KEEP ALL THE PARTS OUT REACH OF CHILDREN

HARDWARE LIST				
ITEM	DESCRIPTION		QTY	Spare Qty
1	JCBC SCREW M6 X 50MM		6	1
2	SCREW PIN		6	1
3	SPRING WASHER M6		6	1
4	L - BRACKET		4	
5	CSK CB SCREW M5 X 32MM		6	
6	CSK CB SCREW M3.5 X 12MM		8	2
7	WOOD DOWEL M10 X 30MM		6	1
8	ALLEN KEY M4 (BALL SHAPE)		1	

PART LIST		
ITEM	DESCRIPTION	QTY
A	FRONT LEG 	1
B	BACK LEG 	1
C	SIDE RAIL (L&R) 	2
D	CHAIR SEAT 	1


CODING

-241030
-241029
-241032
-241031




ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS


1

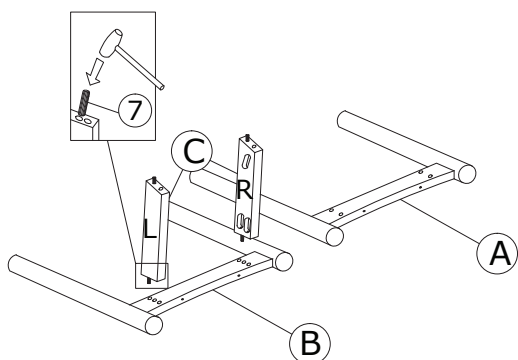

2

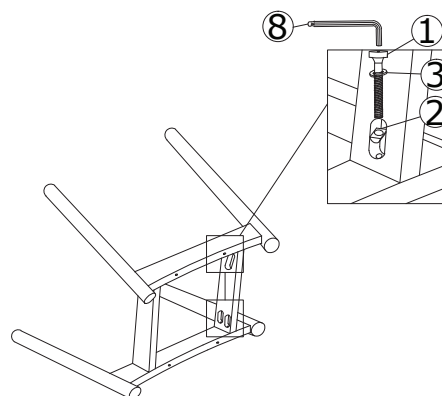

3

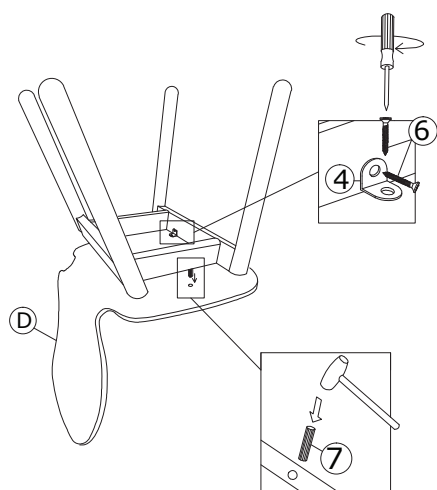

4

