


CODING

- 241601
- 241448
- 241434

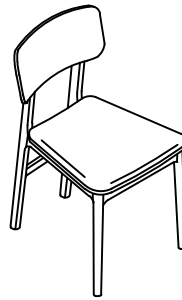


ISO 9001:2015
Reg. No. 22015-1-147-1 QMS

Read the instruction carefully. Remove all the wrapping material staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure you have all parts before you start assembling. Place all the wooden furniture part on a clean and flat surface, such as carpet or rubbermat to prevent scratches.

CAUTION


KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

ITEM	PHOTO	HAREWARE NAME	QTY
(A)		JCBC SCREW M6 x 50MM	4
(B)		SPRING WASHER 1/4"	4
(C)		PAN HEAD WOOD SCREW M5 x 32mm	7
(D)		WOOD DOWEL DIA 8 x 35MM	8
(E)		M4 ALLEN KEY (BALL SHAPE) LONG	1

ITEM	PHOTO	HAREWARE NAME	QTY
(1)		BACK REST	1
(2)		CUSHION SEAT	1
(3)		FRONT LEG	1
(4)		RAIL LEFT & RIGHT	2


CODING

- 241601
- 241448
- 241434

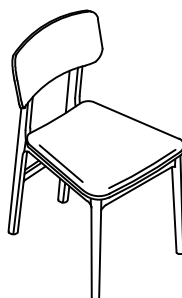

ISO 9001:2015
Reg. No. 88935-1-DE-1-Q002

1

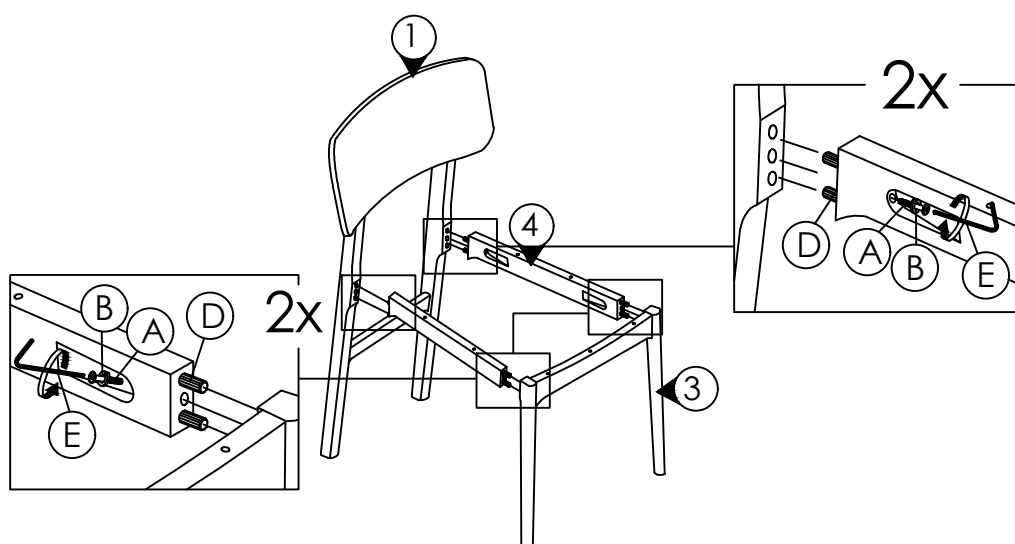

2

