

## CODING

-241629

-241630



**ISO 9001:2015**  
Reg. No. 000435-1-MY-1-QMS

Read the instruction carefully. Remove all the wrapping, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

## CAUTION

**KEEP ALL PARTS OUT OF CHILDREN'S REACH.**

| ITEM | HARDWARE LIST (FOR 2 CHAIRS)                                                                                | QTY    |
|------|-------------------------------------------------------------------------------------------------------------|--------|
| F    | M6 X 35MM<br>JCBC BOLT   | 12 PCS |
| G    | M6 X 60MM<br>JCBC BOLT   | 12 PCS |
| H    | 1/4 SPRING WASHER        | 24 PCS |
| I    | M4 X 25MM<br>WOOD SCREW  | 4 PCS  |
| J    | 15.0MM WOOD BUTTON       | 4 PCS  |
| K    | M4 ALLEN KEY (SHORT)     | 1 PC   |

| ITEM | PART LIST    | QTY   |
|------|--------------|-------|
| A    | CAPRAIL      | 2 PCS |
| B    | LEG FRAME    | 4 PCS |
| C    | CORNER BLOCK | 2 PCS |
| D    | BACK CUSHION | 2 PCS |
| E    | SEAT CUSHION | 2 PCS |

# OLSEN

## ASSEMBLY GUIDE

### CODING


-241629

-241630




ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS


Step 1

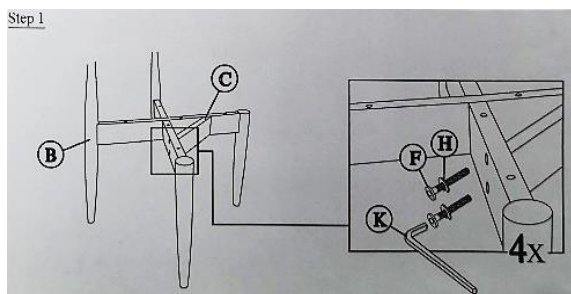

Step 2

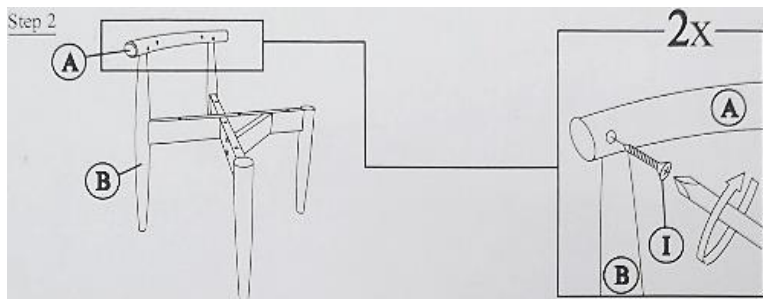

Step 3

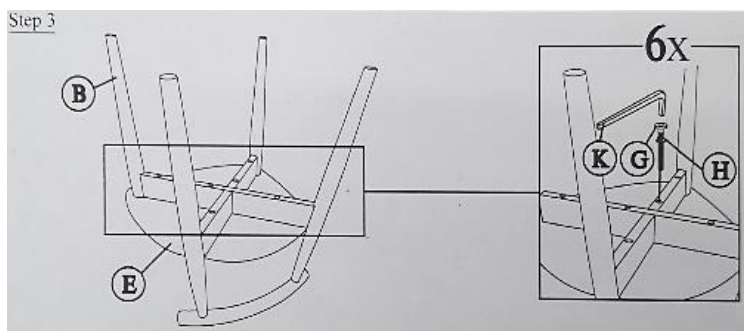

Step 4

