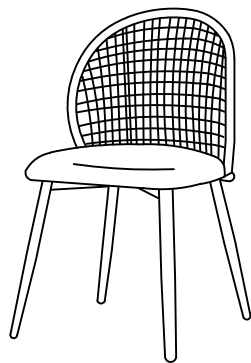


CODING
- 241636ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS


Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

ITEM	PHOTO	HAREWARE NAME	QTY
(A)		M6x20	4
(B)		M6x40	4
(C)		M6x50	4
(D)		M6	12
(E)		M5	1


ITEM	PHOTO	PARTS NAME	QTY
(1)		Backrest	1
(2)		Seat cushion	1
(3)		Chair legs	1
(4)		Chair legs	1
(5)		Base connector	1
(6)		Base connector	1

CODING
- 241636

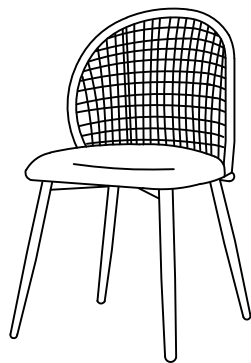


ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

1

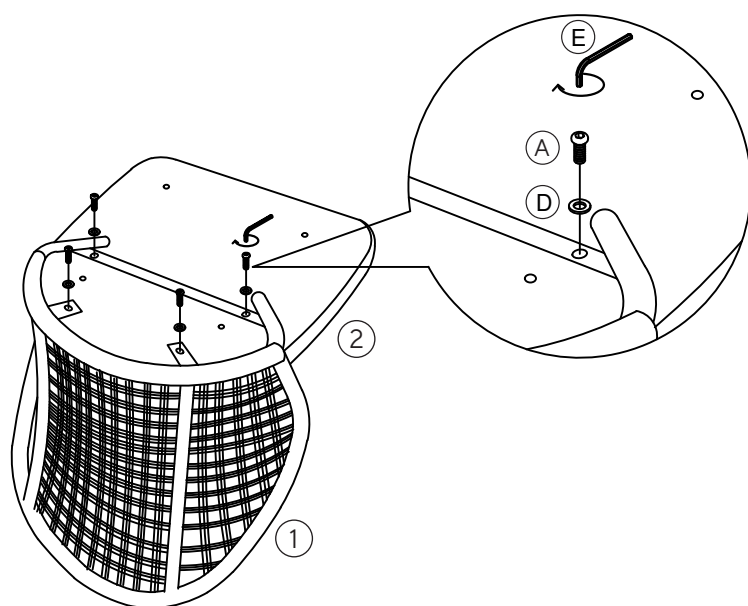

2

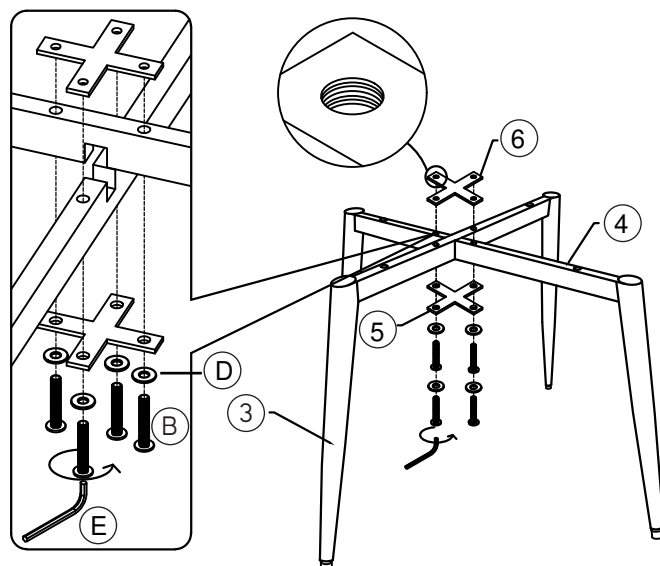

3

