

CODING

- 241506
- 241507
- 241508
- 241509



ISO 9001:2015
Reg. No. 000435-I-MY-I-QMS

Read the instruction carefully. Remove all the wrapping material, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure that you have all the parts before you start assembling. Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches.

CAUTION
KEEP ALL THE PARTS OUT OF REACH OF CHILDREN .

ITEM	PHOTO	HARDWARE NAME	QTY
1		JCBC SCREW M6X60MM	4
2		JCBC SCREW-W M7X25MM	4
3		WOOD DOWEL M10X40MM	4
4		BARREL BUT M6	4
5		C/B SCREW M4 X 32MM	4
6		ALLEN KEY M4	1

ITEM	PHOTO	PART NAME	QTY
A		LEG (L&R)	2
B		TOP	1
C		RAIL	2
D		SEAT	1


CODING

-241506
-241507
-241508
-241509




ISO 9001:2015
Reg. No. 000435-1-MY-I-QMS

1

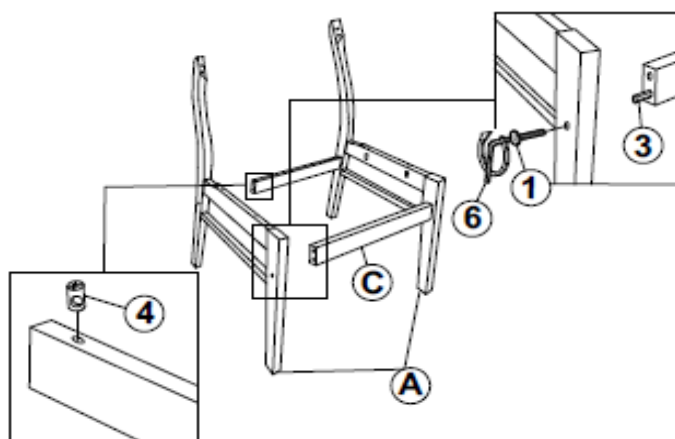

2

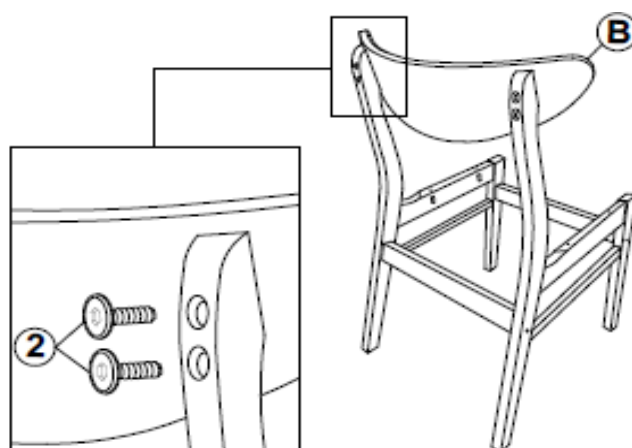

3

