


CODING
- 241742

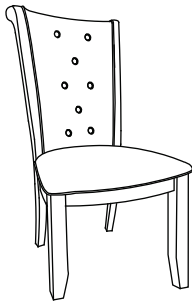

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS


Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN’S REACH.

ITEM	PHOTO	HAREWARE NAME	QTY
Ⓐ		JCBC SCREW M6 x 80MM	4
Ⓑ		JCBC SCREW M6 x 60MM	4
Ⓒ		JCBC SCREW M6 x 40MM	2
Ⓓ		SPRING WASHER	10
Ⓔ		FLAT WASHER	10
Ⓕ		WOOD SCREW M4 x 32MM	3
Ⓖ		M4 ALLEY KEY	1


ITEM	PHOTO	PARTS NAME	QTY
①		Chair Back	1
②		Box Seatl	1
③		Chair Leg	2
④		Chair Seat	1

CODING
- 241742

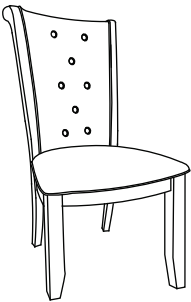


ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS


1

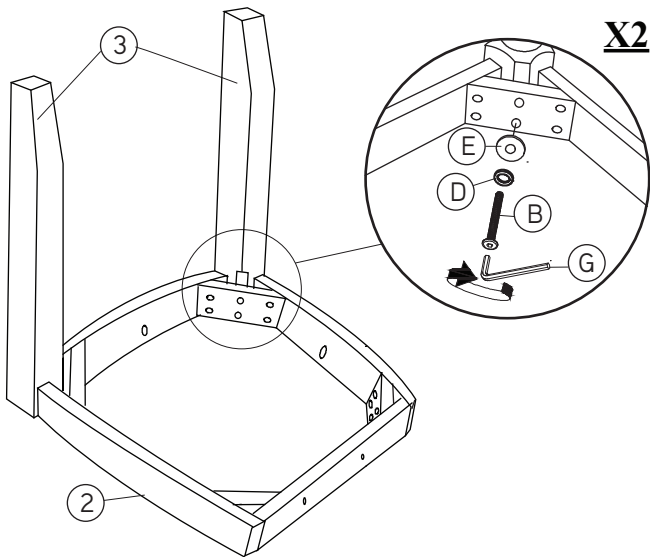

2

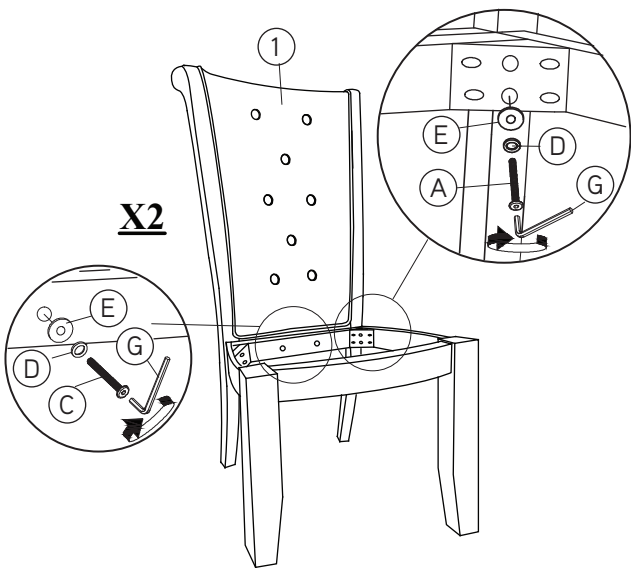

3

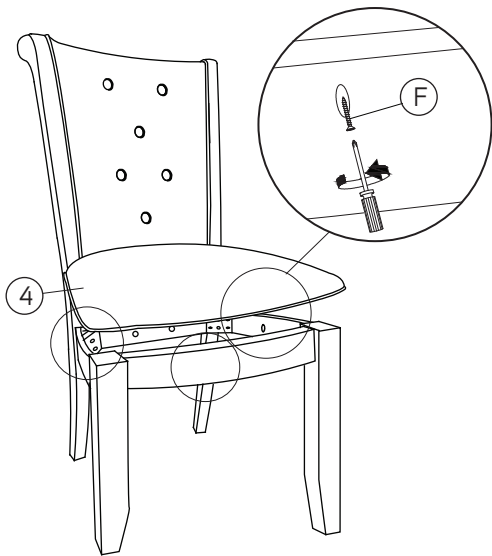

4

