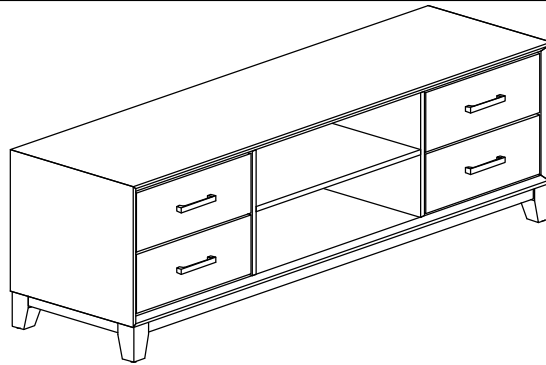


CODING
- 335071





ISO 9001:2015
Reg. No. 009-05-1-247-1-QMS

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

ITEM	PHOTO	HARDWARE NAME	QTY
(A)		JCBC BOLT 1/4" x 2 3/8"	4
(B)		SPRING WASHER 1/4" x 1/2"	4
(C)		FLAT WASHER 1/4" x 1/2"	4
(D)		WOOD DOWEL 5/16" x 1 1/4"	4
(E)		ALLEN KEY 1/4" x 2 3/8"	1

ITEM	PHOTO	PARTS NAME	QTY
(1)		Oregon 1.65M TV Cabinet 179	1
(2)		Leg (i)	2
(3)		Leg (i)	2
(4)		Center Support Leg	2

A line drawing of a long, low cabinet or console table. It features a central open shelving area flanked by drawers. On the left side, there are two drawers stacked vertically. On the right side, there are also two drawers stacked vertically. The cabinet has a simple, modern design with straight lines and small, angled legs at the ends.

ISO 9001:2015
Reg. No. 00033-1-MY-1-QMS

