


CODING  
-335075

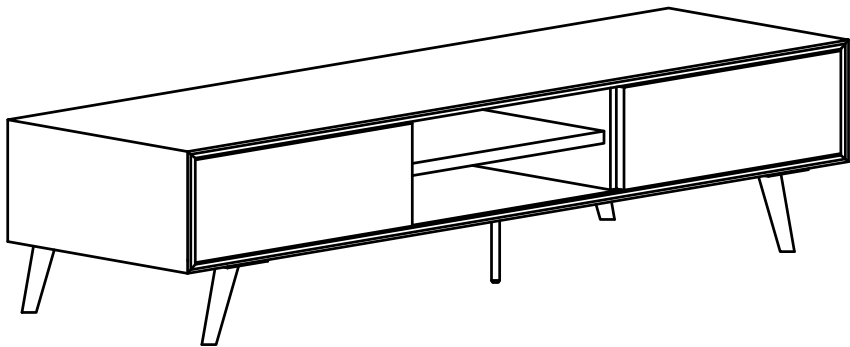


ISO 9001:2015  
Reg. No. 000435-I-MY-I-QMS

Read the instruction carefully. Remove all the wrapping material , staples and straps from the carton . Refer to the hardware and furniture part list for guidance . Be sure that you have all the parts before you start assembling . Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches .


**Caution**  
**KEEP ALL PARTS OUT OF REACH OF CHILDREN.**

| ITEM | HARDWARE LIST                                                                                            | QTY |
|------|----------------------------------------------------------------------------------------------------------|-----|
| Ⓐ    | JCBC SCREW M6 X 15MM  | 18  |
| Ⓑ    | FLAT WASHER 5/16"     | 18  |
| Ⓒ    | ALLEN KEY 4MM         | 1   |

| ITEM | PART LIST                                                                                         | QTY |
|------|---------------------------------------------------------------------------------------------------|-----|
| ①    | BODY         | 1   |
| ②    | LEG (L&R)    | 4   |
| ③    | SUPPORT LEG  | 1   |

## CODING

-335075

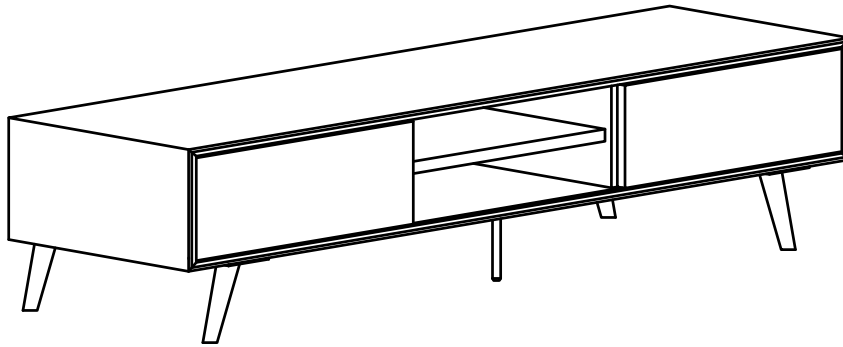

**ISO 9001:2015**  
Reg. No. 000435-I-MY-I-QMS

1

