


CODING
- 335084

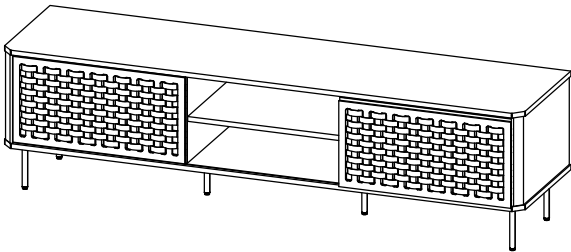

ISO 9001:2015
Reg. No. 000435-1-001-1-QMS


Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.


HARDWARE					
A	MINI FIX	A1 	A2 	A3 	12 SETS
B	M8 X 30MM WOOD DOWEL				20 PCS
C	M6 X 50MM CSK CAP WOOD SCREW				8 PCS
D	ALLEN KEY M4				1 PC
E	M3.5 X 16MM C.B SCREW				24 PCS
F	METAL CENTER LEG (50 x 50 x H140MM)				6 PCS

PART LIST		QTY
1	TOP PANEL	1 PC
2	BOTTOM PANEL	1 PC
3	SIDE PANEL (L)	1 PC
4	SIDE PANEL (R)	1 PC
5	CENTER PANEL (L)	1 PC
6	CENTER PANEL (R)	1 PC
7	MIDDLE PANEL	1 PC
8	BACK PANEL	1 PC
9	DOOR (L/R)	2 PCS

SELF-PREPARED TOOLS: Tools below are NOT Included In package.	
 SCREWDRIVER	 HAMMER

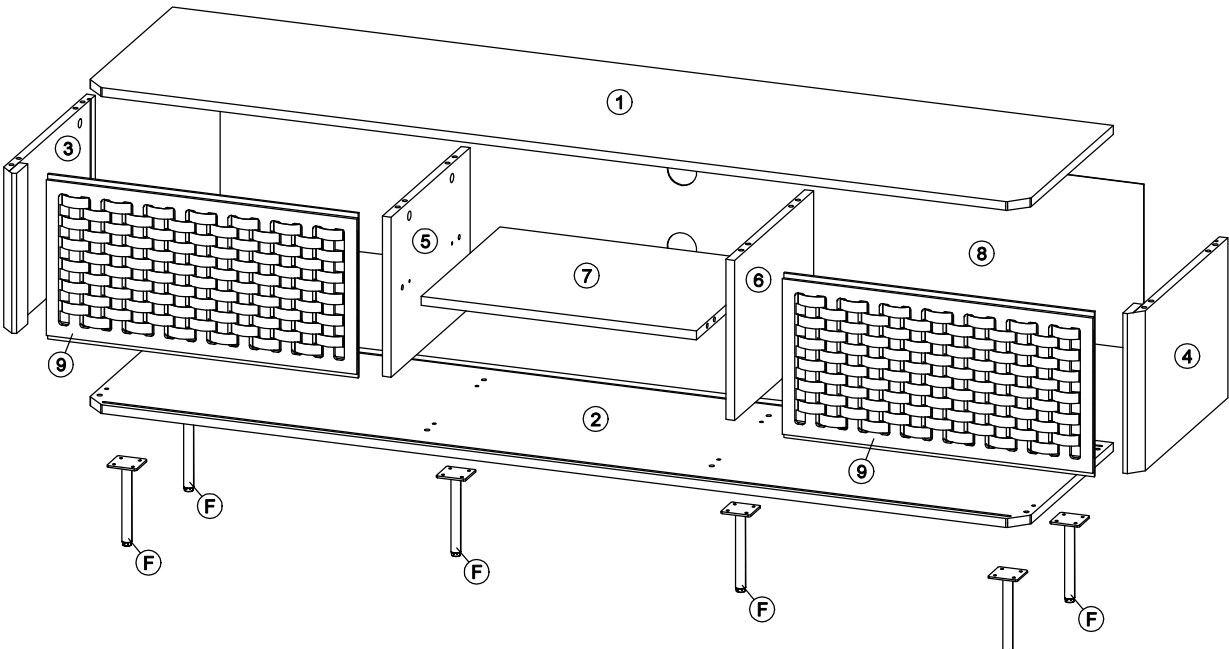


CODING
- 335084

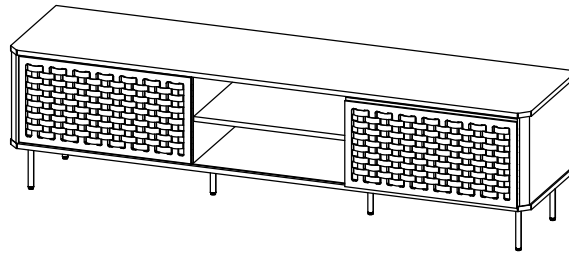

ISO 9001:2015
Reg. No. 000435-1-KTY-1-QMS


STEP 1

- Insert hardware **A2** onto panel (1).
(Repeat 8 times.)
- Insert hardware **B** onto panel (3) and (4).
(Repeat 8 times.)

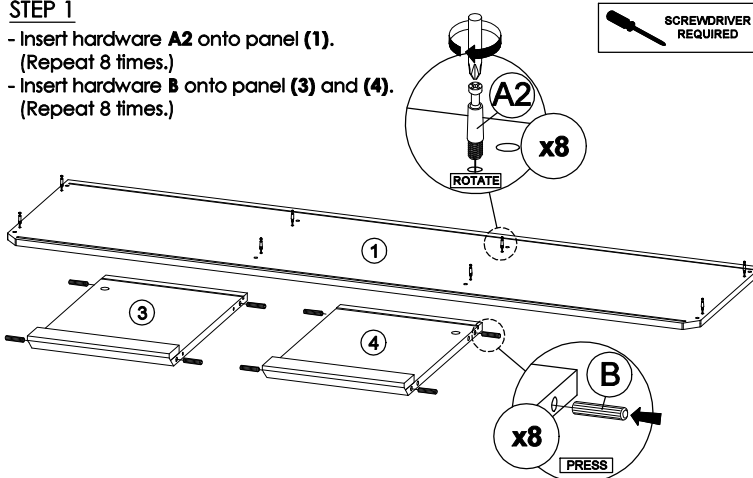


STEP 2

- Insert hardware **A2** onto panel (5) and (6).
(Repeat 4 times.)
- Insert hardware **B** onto panel (5), (6) and (7).
(Repeat 12 times.)

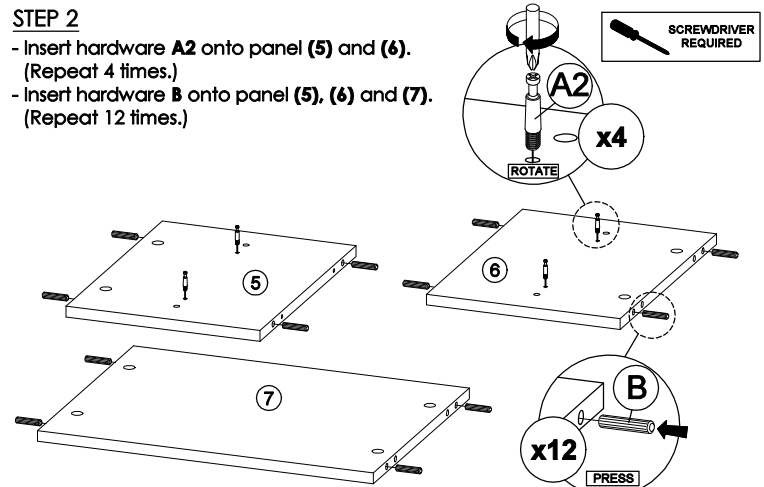


STEP 3

- Insert hardware **A1** onto panel (7).
(Repeat 4 times.)
- Attach panel (5) and (6) to panel (7).
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 4 times.)

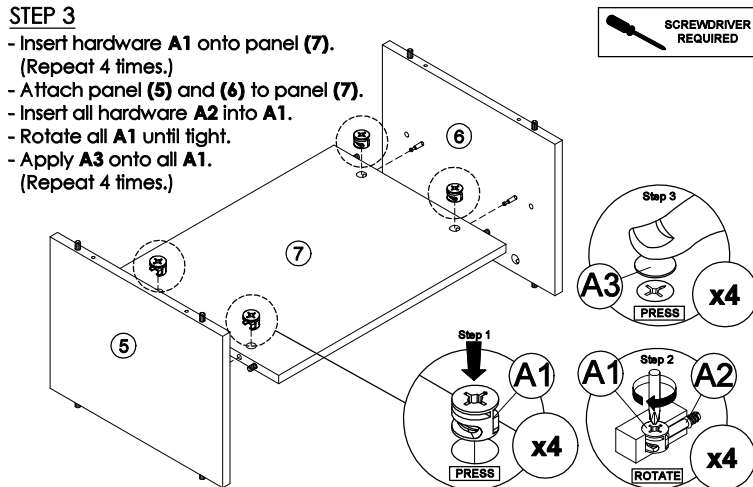


STEP 4

- Insert hardware **A1** onto panel (3), (4), (5) and (6).
(Repeat 8 times.)
- Attach panel (3), (4), (5) and (6) to panel (1).
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 8 times.)

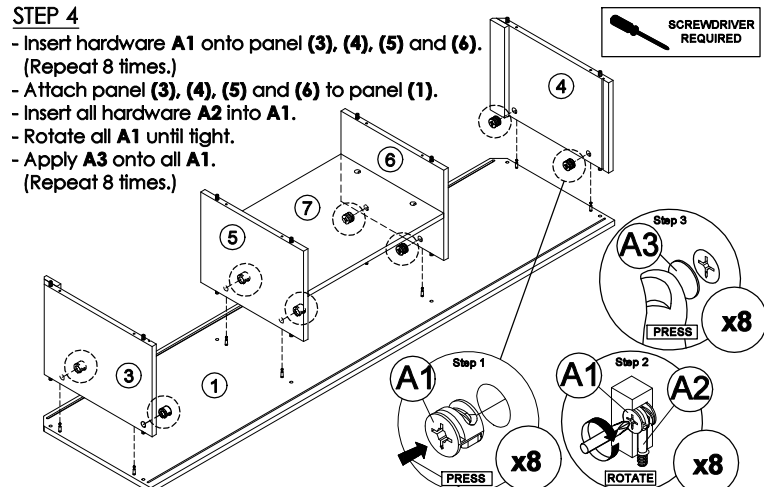


STEP 5

Insert the panel (8) along the slot.

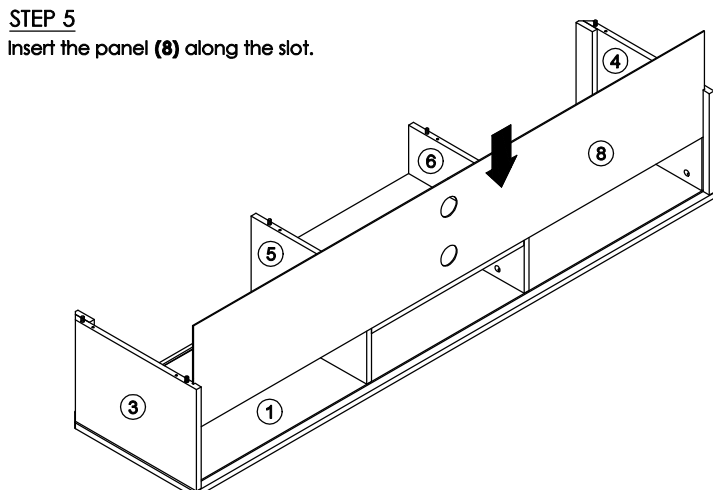


STEP 6

Connect panel (2) to panel (3), (4), (5) and (6) by using hardware **C** and **D**.
(Repeat 8 times.)

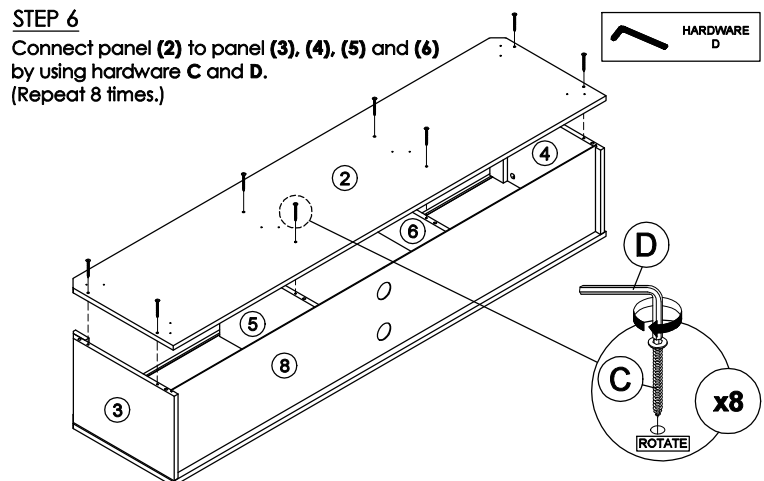


CODING
- 335084

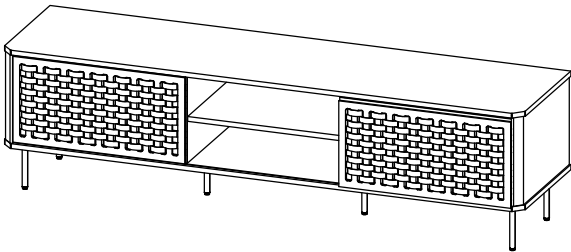

ISO 9001:2015
Reg. No. 000435-1-4TY-1-QMS

STEP 7

Assemble hardware **F** onto panel **(2)** by using hardware **E**.
(Repeat 4 times for each hardware.)

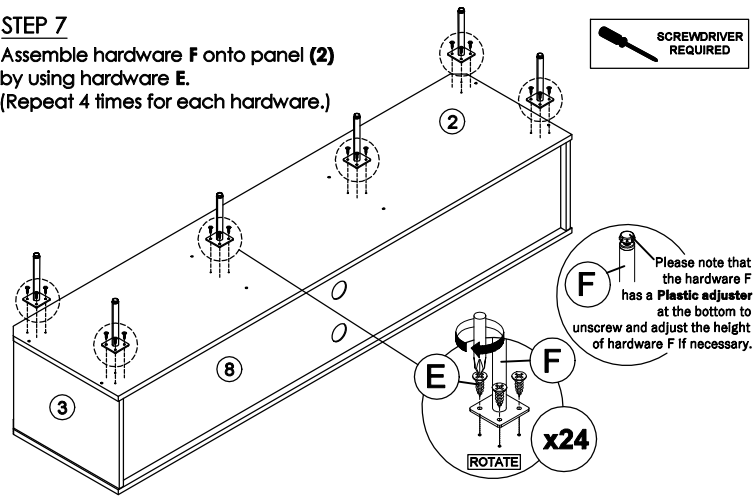

STEP 8

Insert the panel **(9)** in the top groove first, then enter through the bottom groove.

