

CODING
- 336050



ISO 9001:2015
Reg. No. 000455-1-2017-1-QMS


Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

HARDWARE				
A	MINI FIX	A1  A2  A3 	19 SETS	
B	M8 X 30MM WOOD DOWEL		31 PCS	
C	M6 X 50MM CSK CAP WOOD SCREW		4 PCS	
D	ALLEN KEY M4		1 PC	
E	M3.5 X 16MM C.B SCREW		28 PCS	
F	M4 X 32MM C.B SCREW		12 PCS	
G	JCBC Screw M6 x 20MM		16 PCS	
H	JCBC SCREW M6 X 50MM		8 PCS	
I	ONE HOLE L BRACKET (2MM)		2 PCS	
J	SOFT CLOSING 5/8 HINGES		2 PCS	
K	SOFT CLOSING 7/8 HINGES		2 PCS	
L	JCBC Screw M6 x 15MM		4 PCS	
TIPPING PACK WITH AI  			2 SETS	

PART LIST		QTY
1	TOP PANEL	1 PC
2	BOTTOM PANEL	1 PC
3	SIDE PANEL (L)	1 PC
4	SIDE PANEL (R)	1 PC
5	CENTER PANEL (L)	1 PC
6	CENTER PANEL (R)	1 PC
7	MIDDLE PANEL	1 PC
8	BONE PANEL	1 PC
9	BACK PANEL	1 PC
10	DOOR PANEL (L)	1 PC
11	DOOR PANEL (R)	1 PC
12	METAL APRON	1 PC
13	METAL LEG	4 PCS

SELF-PREPARED TOOLS: Tools below are NOT included in package.	
 SCREWDRIVER	 HAMMER

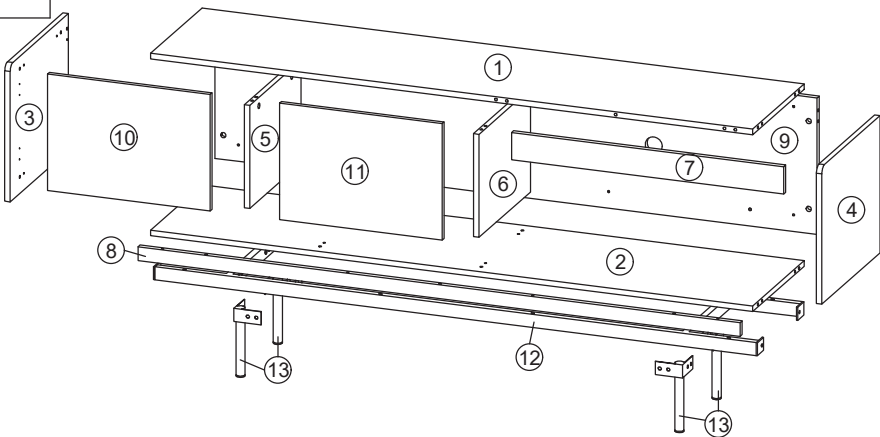


CODING
- 336050



ISO 9001:2015
Reg. No. 000455-1-MIT-1-QMS

STEP 1


- Insert hardware **A1** onto panel (1).
(Repeat 7 times.)
- Insert hardware **A2** onto panel (1).
(Repeat 4 times.)
- Insert hardware **B** onto panel (1).
(Repeat 9 times.)

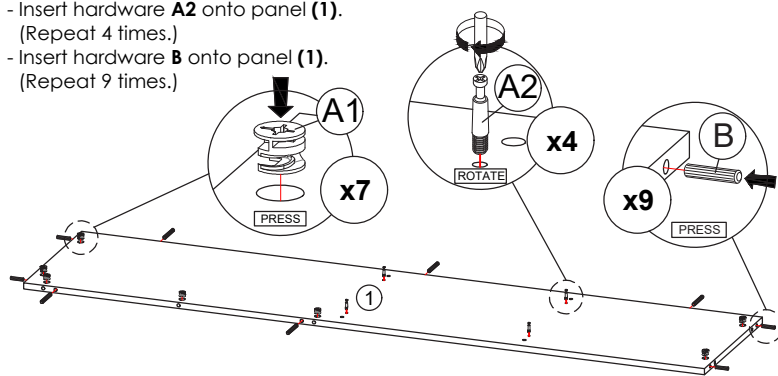

* Ensure the arrows on hardware **A1** point towards mounting positions.

STEP 3



- Insert hardware **A1** onto panel (5) and (6).
(Repeat 4 times.)
- Insert hardware **A2** onto panel (3) and (4).
(Repeat 12 times.)
- Insert hardware **B** onto panel (5) and (6).
(Repeat 8 times.)

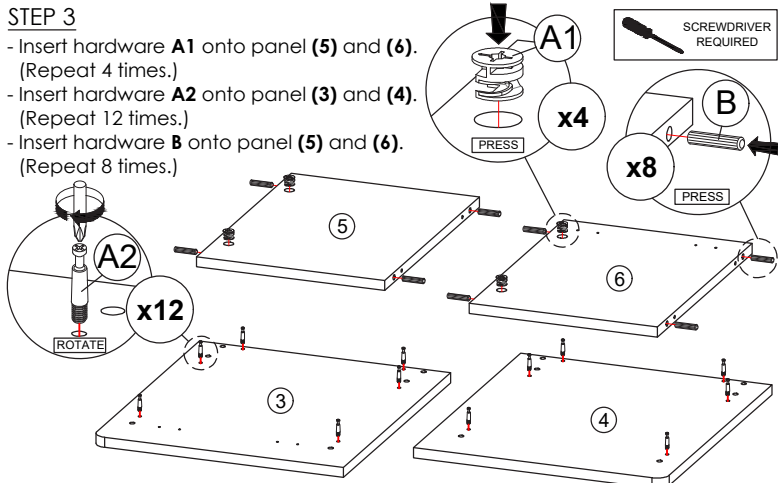

* Ensure the arrows on hardware **A1** point towards mounting positions.

STEP 5


- Attach panel (7) to panel (1).
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 3 times.)

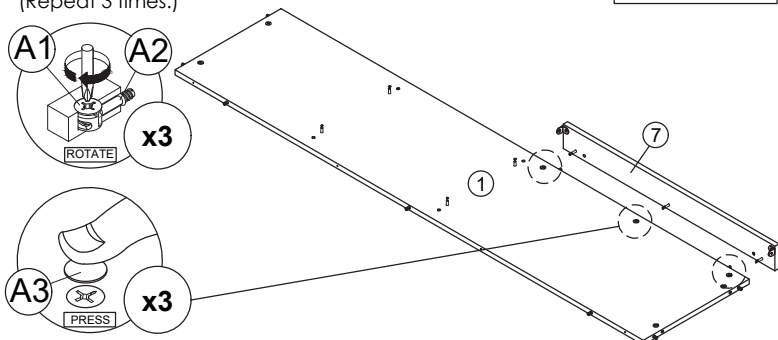

* In this step hardware **A1**, **A2** and **B** are pre-inserted.

STEP 2


- Insert hardware **A1** onto panel (2) and (9).
(Repeat 8 times.)
- Insert hardware **B** onto panel (2) and (9).
(Repeat 11 times.)

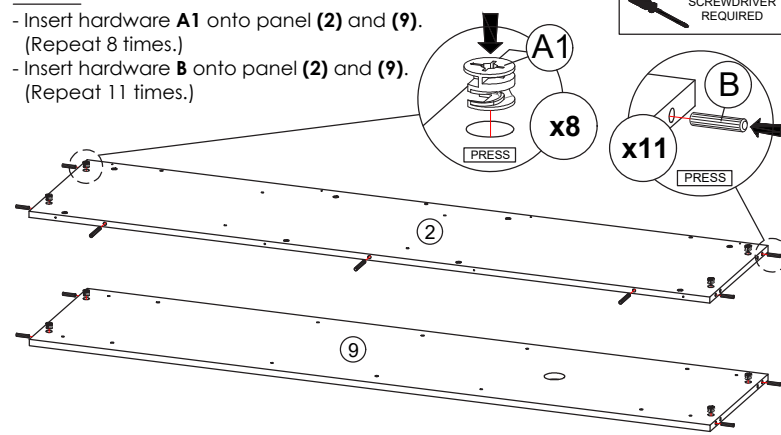

* Ensure the arrows on hardware **A1** point towards mounting positions.


STEP 4

- Assemble hardware **I** to panel (7) with hardware **E**.
(Repeat 2 times.)
- Insert hardware **A2** onto panel (7).
(Repeat 3 times.)
- Insert hardware **B** onto panel (8).
(Repeat 3 times.)

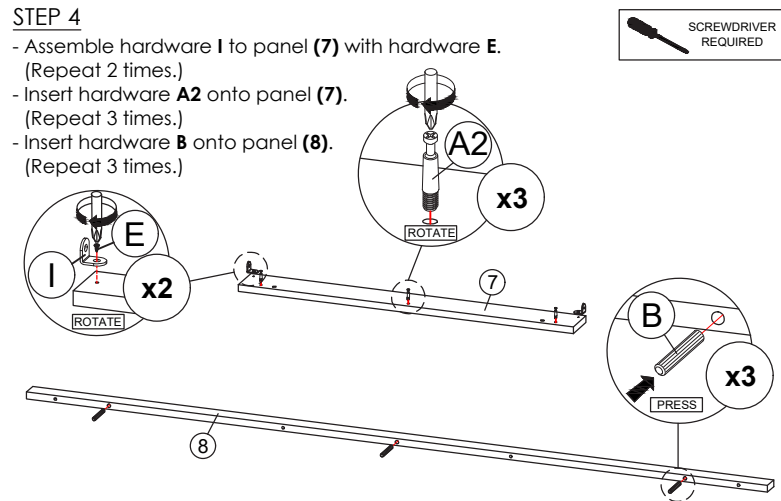

STEP 6

- Attach panel (8) to panel (2) by using hardware **F**.
(Repeat 4 times.)

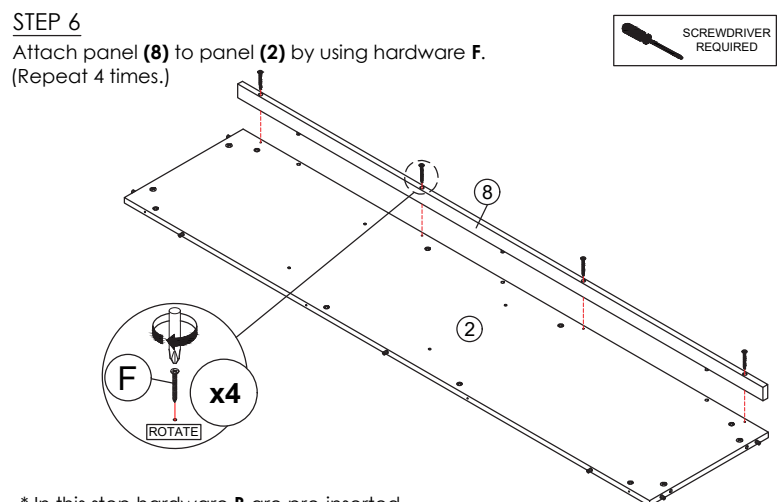

* In this step hardware **B** are pre-inserted.



CODING
- 336050



ISO 9001:2015
Reg. No. 00045-1-2017-1-QMS

STEP 7


- Attach panel (5) and (6) to panel (1).
 - Insert all hardware A2 into A1.
 - Rotate all A1 until tight.
 - Apply A3 onto all A1.
- (Repeat 4 times.)

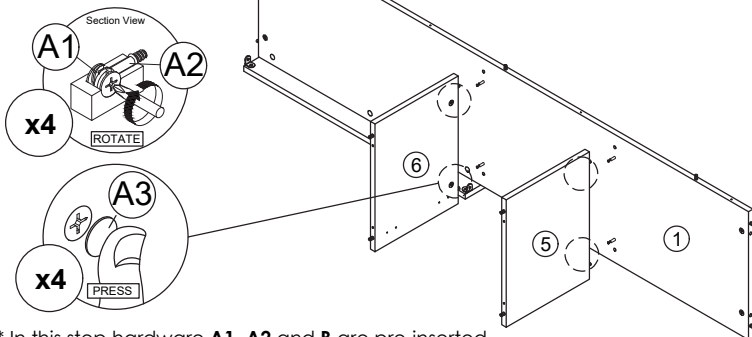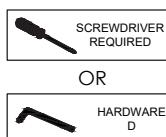

* In this step hardware A1, A2 and B are pre-inserted.


STEP 9

- Attach panel (9) to panel (1) and (2) by using hardware F.
- (Repeat 8 times.)

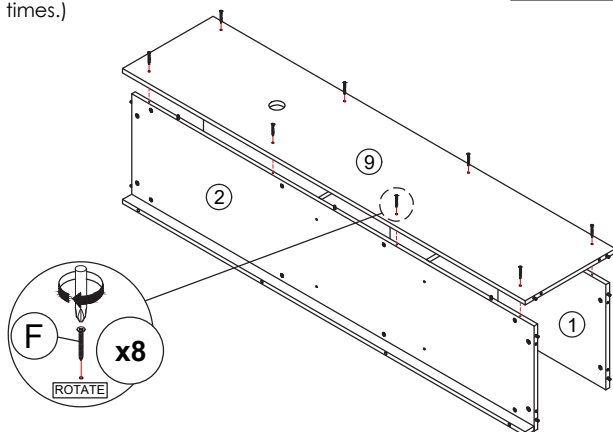


STEP 11

- Assemble hardware I to panel (4) and (6) with hardware E.
- (Repeat 2 times.)

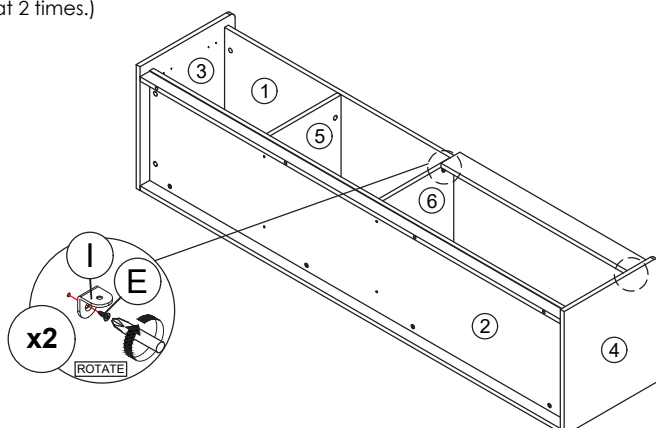

STEP 8


- Connect panel (2) to panel (5) and (6) by using hardware C and D.
- (Repeat 4 times.)

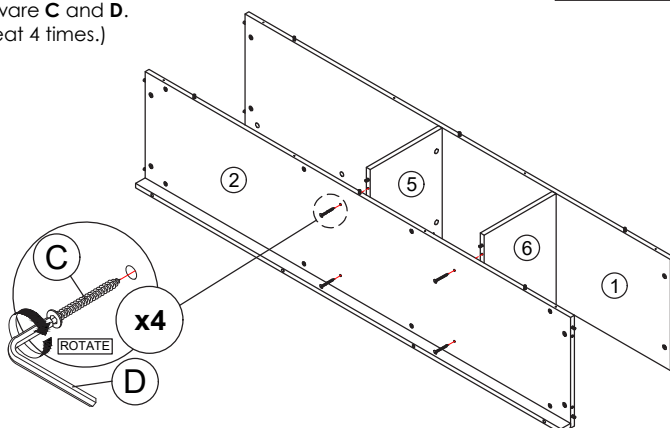

* In this step hardware B are pre-inserted.

STEP 10


- Attach panel (3) and (4) to panel (1), (2) and (9).
 - Insert all hardware A2 into A1.
 - Rotate all A1 until tight.
 - Apply A3 onto all A1.
- (Repeat 12 times.)

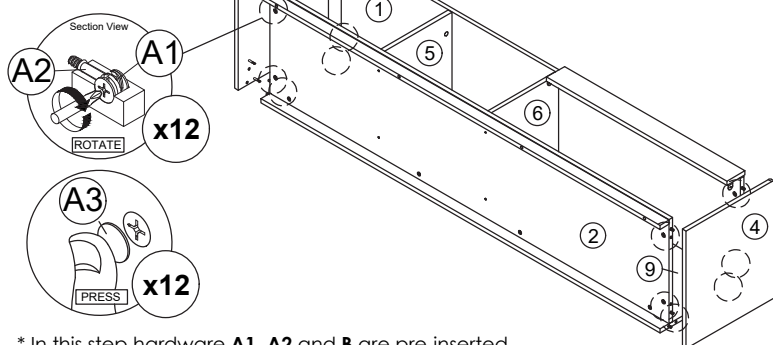

* In this step hardware A1, A2 and B are pre-inserted.

STEP 12

- Connect Metal Apron (12) to panel (2) by using hardware D and H.
- (Repeat 8 times.)

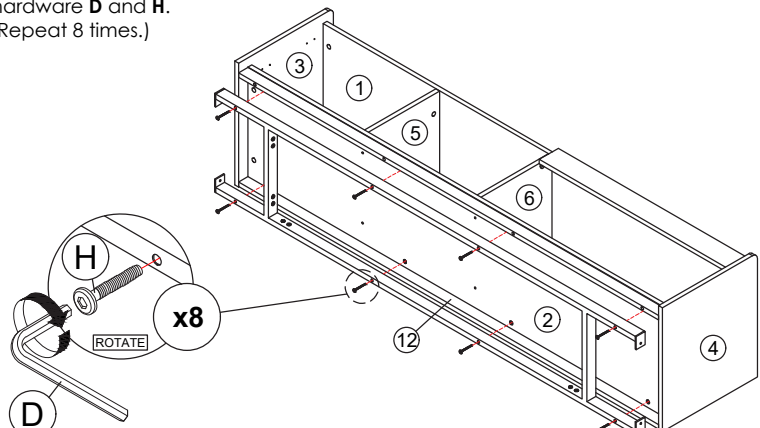


CODING
- 336050



ISO 9001:2015
Reg. No. 000435-1-MIT-1-QMS


STEP 13

- Connect Metal Leg (13) to Metal Apron (12) by using hardware D and G.
(Repeat 16 times.)
- Connect Metal Apron (12) to panel (3) and (4) by using hardware D and L.
(Repeat 4 times.)

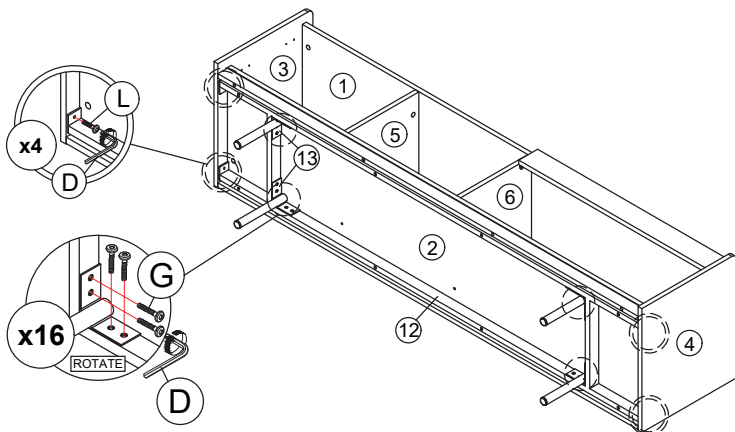


STEP 14

- Fix hardware J onto panel (11) and hardware K onto panel (10) by using hardware E.
(Repeat 2 times for each hardware.)

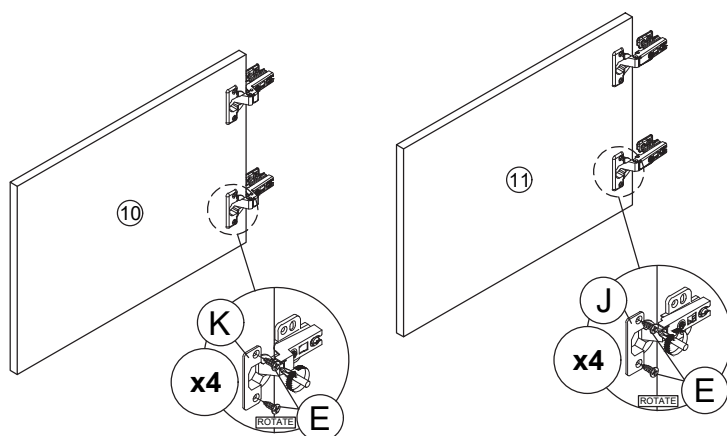


STEP 15

- Fix hardware K into panel (3) by using hardware E.
(Repeat 4 times for each hardware.)
- Tighten or loosen the screw to adjust position of panel (10).
(Do only when needed.)

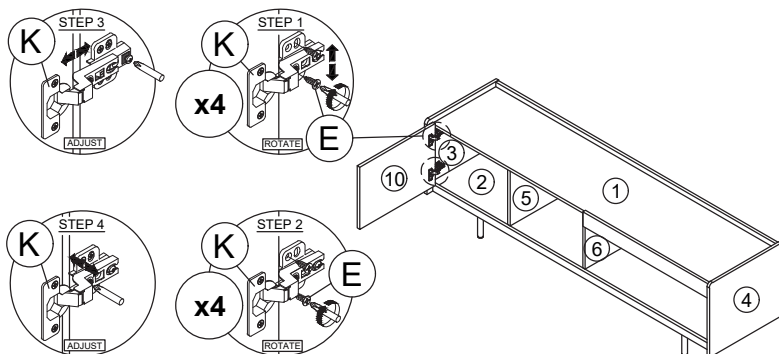

STEP 16

- Fix hardware J into panel (6) by using hardware E.
(Repeat 4 times for each hardware.)
- Tighten or loosen the screw to adjust position of panel (11).
(Do only when needed.)

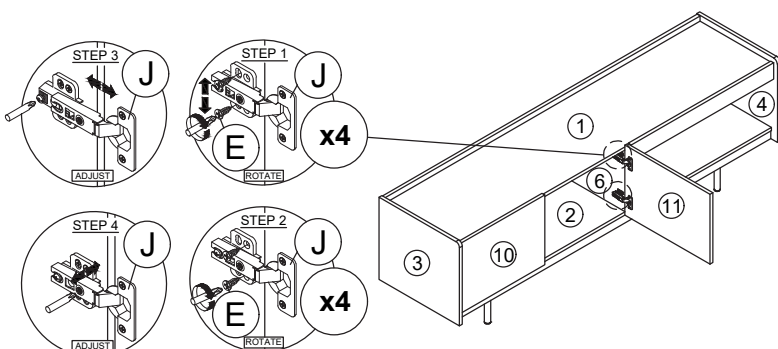

* In this step hardware K have been assembled in panel (10).

* In this step hardware J have been assembled in panel (11).